


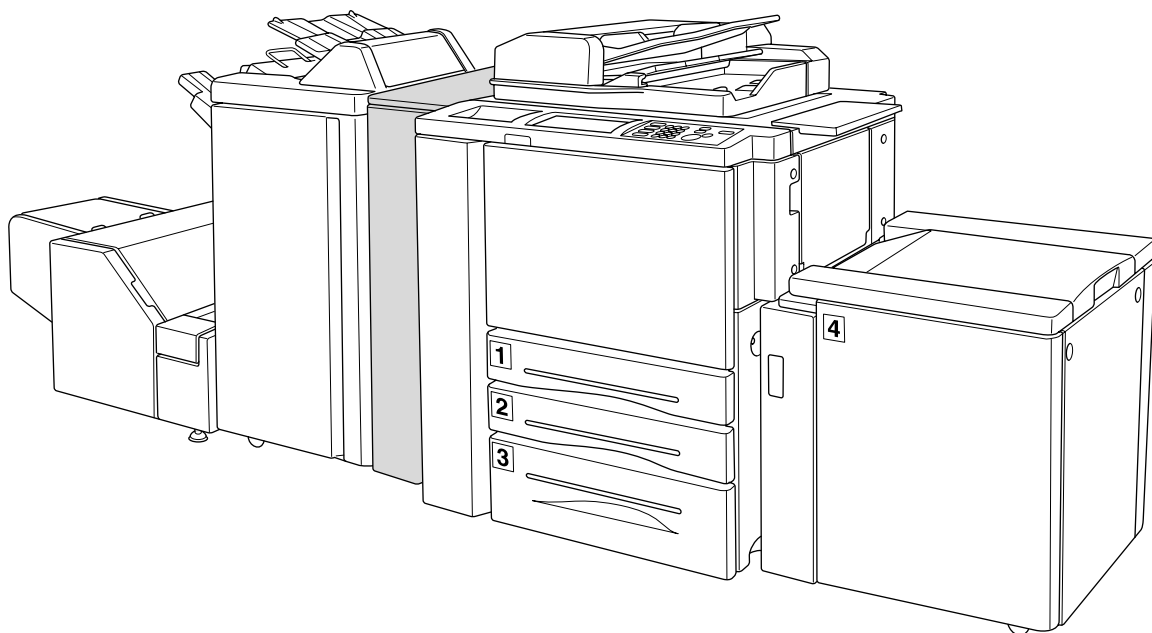

# Di750

## Operator's Manual



Recycled paper is used for the inside pages of this book.

# Di750

## *Operator's Manual*



### ENERGY STAR® Program

The ENERGY STAR Program has been established to encourage the widespread and voluntary use of energy-efficient technologies that reduce energy consumption and prevent pollution. As an ENERGY STAR Partner, we have determined that this product meets the ENERGY STAR guidelines for energy efficiency grounding it on the following features.

#### Auto Low Power

This function conserves energy by lowering the set temperature of the fixing unit. In the standard setting, Auto Low Power operates automatically when 15 minutes have elapsed after completion of the last copy, with the copier remaining in the ready to copy state during that time.

The time period for the Auto Low Power function can be set for 5 minutes, 10 minutes, 15 minutes, 30 minutes, 60 minutes, 90 minutes, 120 minutes, or 240 minutes. See p. 5-2 for details.

#### Automatic Shut-Off

This function achieves further energy conservation by partially turning OFF the power supply, thereby reducing energy consumption to 20W or less. In the standard setting, Automatic Shut-Off follows Auto Low Power, operating automatically when 90 minutes have elapsed after completion of the last copy, with the copier remaining in the ready to copy state during that time.

The time period for the Automatic Shut-Off function can be set for 30 minutes, 60 minutes, 90 minutes, 120 minutes or 240 minutes. See p. 5-4 for details.

#### Automatic Duplex Copying

To reduce paper consumption, use this function to make double-sided (duplex) copies, automatically.

We recommend that you utilize the Auto Low Power function, the Automatic Shut-Off function, and the Automatic Duplex Copying function.

Thank you for choosing Minolta quality. For over 30 years Minolta has been a leader on the forefront of office equipment technology and service. Our desire has always been to bring you highly reliable products. We pledge to continue to provide you, our customer, with our state of the art equipment, as well as full customer service for all our products. We look forward to a long healthy relationship with you and our company. If you have any questions or comments about Minolta, our product or service, please let us know. Our fax number is 800-237-8087 (for the U.S.A. and Canada). Thank you again.

This operator's manual explains how to operate the copier and replenish its supplies. It also gives some troubleshooting tips as well as general precautions to be observed when operating the copier.

To ensure the best performance and effective use of your copier, read this manual carefully until you familiarize yourself thoroughly with the copier's operation and features. After you have read through the manual, keep it ready for reference.

Please use this manual as a quick and handy reference tool for immediately clarifying any questions which may arise.

# Contents

## Section 1: Introduction

To the User .....	1-2
Key Operator Functions .....	1-2
Copier Service, Repairs & Supplies .....	1-2
Machine Labels .....	1-2
Control Panel with Interactive Touch Screen .....	1-2
Overview of the Operator's Manual .....	1-3
Help Mode .....	1-3
Product Overview .....	1-4
Features of the Di750 .....	1-5
Copier Features .....	1-11
Standard Equipment .....	1-11
Optional Equipment .....	1-11

## Section 2: Safety Information

User Instructions .....	2-2
Machine Labels .....	2-3
Label Locations .....	2-3
Machine Installation and Power Requirements .....	2-6
Machine Handling and Care .....	2-8
Routine Safety .....	2-9
Finisher Capacity Requirements .....	2-10
Regulations .....	2-12
FCC Regulations .....	2-12
ICES Regulations .....	2-12
Laser Safety .....	2-12
Internal Laser Radiation .....	2-13
Laser Safety Label .....	2-16
Ozone Release .....	2-17

## Section 3: Machine Information

Machine Configuration .....	3-2
External Machine Call-Outs .....	3-3
Internal Machine Call-Outs .....	3-4
Optional Equipment .....	3-5
Site Requirements .....	3-7
Control Panel Layout .....	3-9
Touch Screen .....	3-10
Basic Screen .....	3-10
Initial Settings .....	3-11

# Contents

## Section 3: Machine Information (continued)

Panel Reset Mode .....	3-11
Automatic Paper Selection (APS) .....	3-11
Automatic Magnification Selection (AMS) .....	3-11
Automatic Exposure Selection (AES) .....	3-11
Automatic Tray Switching (ATS) .....	3-11
Lead Edge Delete .....	3-12
Service Settings .....	3-12
Finisher-Paper Capacity .....	3-12
Key Operator Password .....	3-12
ECM Master Key Code .....	3-12
Weekly Timer Master Key Code .....	3-12
Weekly Timer Key in Help Screen .....	3-12
Control Panel Contrast Key in Help Screen .....	3-13
Staple Sheet Capacity .....	3-13
Notice Message: ADD TONER/ PM CALL .....	3-13

## Section 4: Paper Information

Positioning Originals on the Platen Glass .....	4-2
Positioning an Original for Manual Copying .....	4-2
Using the Electronic Document Handler (EDH) .....	4-3
Positioning Originals .....	4-4
Positioning an SDF Original .....	4-5
Positioning Mixed Originals .....	4-6
Paper in Main Body Trays .....	4-7
Paper in Large Capacity Cassette (C-305) (Option) .....	4-7
Paper in Large Capacity Cassette (C-305L) (Option) .....	4-8
Paper in Automatic Duplex Unit .....	4-8
Paper in Multi-Sheet Bypass Tray .....	4-8
Paper in FN-104/FN-4 Finisher (Option) .....	4-9
FN-104/FN-4 Finisher Primary (Main) Tray .....	4-9
FN-104/FN-4 Finisher Secondary (Sub) Tray .....	4-9
FN-4 Finisher Booklet Tray .....	4-10
Paper in Cover Inserter A (Option) .....	4-10
Cover Inserter A .....	4-10
Paper in Trimming Unit (TMG-1) (Option) .....	4-11
Paper Weight Compatibility Chart .....	4-11

# Contents

## Section 5: Copier Management

Energy Saver Mode .....	5-2
Auto Low Power .....	5-2
Manual Low Power .....	5-3
Auto Shut-Off .....	5-4
Manual Shut-Off .....	5-4
Entering an ECM Password .....	5-5
Weekly Timer Function .....	5-6
Timer Interrupt .....	5-6
Counter List .....	5-8
To Display Counter List .....	5-8
To Print Counter List .....	5-8

## Section 6: Basic Operations

How to Make a Basic Copy .....	6-2
The Basic Screen .....	6-2
Copy Mode .....	6-4
Copy Mode Using EDH .....	6-5
1►2 Copy Mode Using Platen Glass .....	6-6
Copy Density .....	6-7
Automatic Exposure Selection (AES) .....	6-7
Manual Mode (Lighter, Normal, Darker) .....	6-7
Density Shift .....	6-8
Lens Mode .....	6-10
Automatic Paper Selection (APS) .....	6-10
Automatic Magnification Selection (AMS) .....	6-11
Special Ratio Table .....	6-12
Selecting a Special Ratio for Non-Standard Paper .....	6-13
Preset and User Set Ratios .....	6-14
Zoom Mode .....	6-15
Vertical/Horizontal Zoom .....	6-16
Copy Size .....	6-17
Selecting Paper Type/Size for Multi-Sheet Bypass Tray .....	6-18
Reserve .....	6-21
Set Reserve Job .....	6-21
Job Status Screen .....	6-23
Mishandled Paper During the Reserve Setting .....	6-25
When Paper is Depleted for the Job in Progress .....	6-26

# Contents

## Section 6: Basic Operations (continued)

Store Mode .....	6-27
Platen Store Mode .....	6-27
EDH Store Mode .....	6-29
Rotation .....	6-30
90° Rotation .....	6-30
90° Rotation and APS .....	6-30
90° Rotation and AMS .....	6-31
180° Rotation .....	6-32
To Release Automatic Rotation .....	6-33
Check Mode and Proof Copy .....	6-34
Interrupt Mode .....	6-37
Help Mode .....	6-39
Using the Multi-Sheet Bypass Tray .....	6-41

## Section 7: Output Modes

FN-104/FN-4 Finisher Specifications .....	7-2
Non-Sort Mode Using Primary (Main) Tray .....	7-5
Sort Mode Using Primary (Main) Tray .....	7-6
Staple-Sort Mode Using Primary (Main) Tray .....	7-7
Group Mode Using Primary (Main) Tray .....	7-10
Output Modes Using Secondary (Sub) Tray .....	7-11
Folding, Stapling & Folding and Trimming Modes .....	7-13
Cover Inserter A .....	7-16
Manual Stapling .....	7-18
Output Mode for Machine without Finisher .....	7-20
Face Down Exit .....	7-21
Face Up Exit .....	7-24

## Section 8: Special Original

Special Original Screen .....	8-2
Resolution (Image Quality) .....	8-3
High Mode .....	8-3
Very High Mode .....	8-4
600 Dpi .....	8-5
Text/Photo Enhance .....	8-6
Special Original .....	8-8
Mixed Original .....	8-8
Z-Folded Original .....	8-10
SDF (Single Document Feed) .....	8-11
Original Form .....	8-12

# Contents

## Section 9: Applications

Application Function Menu .....	9-2
Sheet/Cover Insertion .....	9-3
Chapter .....	9-8
Combination .....	9-10
Booklet .....	9-12
Transparency Interleave .....	9-15
Image Insert .....	9-17
Book Copy .....	9-19
Program Job .....	9-21
Non-Image Area Erase .....	9-23
Reverse Image .....	9-25
Repeat Image .....	9-26
Frame/Fold Erasure .....	9-29
AUTO Layout .....	9-31
All-Image Area .....	9-33
Image Shift .....	9-34
Stamp .....	9-38
Overlay .....	9-43
Overlay Memory .....	9-45
To store Overlay Image in HDD .....	9-45
To Overlay Image Stored in HDD .....	9-48

## Section 10: Program Memory

Job Store .....	10-2
Job Recall .....	10-4
Program Memory Form .....	10-6

## Section 11: Server Function

Server Function .....	11-2
Image Store/Delete Mode .....	11-3
To Store Image Data in HDD .....	11-3
To Delete Image Data .....	11-6
Image Store & Output Mode .....	11-7
Image Recall Mode .....	11-9

## Section 12: Tandem Mode

Tandem Mode Operation .....	12-2
How to Stop Scanning/Printing .....	12-5
Troubleshooting .....	12-6



# Contents

## Section 13: Shortcuts

Set Reserve Job .....	13-2
Store Originals Scanned from Platen .....	13-2
Store Originals Scanned from EDH .....	13-2
Stapling & Folding, Folding, and Trimming .....	13-3
Mixed Original .....	13-3
Sheet/Cover Insertion .....	13-3
Chapter .....	13-4
Combination .....	13-4
Booklet .....	13-4
Transparency Interleave .....	13-5
Image Insert .....	13-5
Book Copy .....	13-6
Program Job .....	13-6
Non-Image Area Erase .....	13-6
Reverse Image .....	13-7
Repeat Image .....	13-7
Frame/Fold Erasure .....	13-7
AUTO Layout .....	13-8
All-Image Area .....	13-8
Image Shift/ Reduce & Shift .....	13-8
Stamp/Overlay .....	13-9
Loading Paper.....	13-10
Adding Toner .....	13-10

## Section 14: Key Operator Mode

To the Key Operator .....	14-2
How to Access the Key Operator Mode .....	14-3
Function Menu Map .....	14-4
System Initial Setting [1] .....	14-7
Date & Time Setting [1] .....	14-7
Language Select Setting [2] .....	14-8
IP Address Setting [3] .....	14-9
Copier Initial Setting [2] .....	14-10
User Setting Mode [3] .....	14-12
User Density Level 1 Setting [1] .....	14-12
User Density Level 2 Setting [2] .....	14-13
User Lens Mode Ratio Setting [3] .....	14-14

# Contents

## Section 14: Key Operator Mode (continued)

ECM (Electronic Copy Monitor) Function Setting [4] .....	14-15
How to Access the ECM Setting Mode .....	14-16
E.C.M. Data Edit [1] .....	14-17
E.C.M. All Count Reset [2] .....	14-21
E.C.M. Function Setting [3] .....	14-22
Lock/Delete Program Memory [5] .....	14-23
Paper Type / Special Size Set [6] .....	14-24
Panel Contrast / Key Sound Adjustment [7] .....	14-26
Key Operator Data Setting [8] .....	14-27
Weekly Timer [9] .....	14-28
How to Access the Weekly Timer Setting Mode .....	14-29
Weekly Timer On/Off Setting [1] .....	14-30
Timer Setting [2] .....	14-31
Timer Action On/Off Setting [3] .....	14-33
Lunch Hour Off Setting [4] .....	14-35
Timer Interrupt Password Setting [5] .....	14-36
Control Panel Adjustment [10] .....	14-37
Tray Size Setting [11] .....	14-38
Energy Saver Setting [12] .....	14-39
Memory Switch Setting [13] .....	14-40
Machine Management List Print [14] .....	14-46
Side 2 Lens Adjustment [16] .....	14-47
Finisher Adjustment [17] .....	14-48
HDD Management Setting [18] .....	14-49
Key Operator ECM Form .....	14-51

## Section 15: Maintenance & Supplies

Loading Paper .....	15-2
Paper Indicator .....	15-2
Paper Empty Indicator .....	15-2
Using the HELP Key .....	15-2
Loading Paper in Tray 1, 2, and 3 .....	15-3
Loading Paper in Tray 4 (C-305/C-305L) .....	15-4
Loading Tabbed Sheets in Tray 1, 2, or 3 .....	15-5
Loading Tabbed Sheets in Tray 4 (C-305/-305L) .....	15-6
Adding Toner .....	15-7
Inserting a New Staple Cartridge into FN-104/FN-4 Finisher .....	15-8
Empty Trash Basket of TMG-1 Trimming Unit .....	15-9

Contents

Section 15: Maintenance & Supplies (continued)

Preventive Maintenance ..... 15-10

    Reading the PM Counter ..... 15-10

    Printing the PM Counter ..... 15-10

Cleaning the Left Partition Glass ..... 15-11

Cleaning the Document Glass and Cover ..... 15-11

Section 16: Troubleshooting

Call for Service ..... 16-2

    Limited Use of the Copier in Trouble ..... 16-3

Memory Overflow ..... 16-4

Power OFF/ON Screen ..... 16-5

Clearing Mishandled Paper ..... 16-6

Copying Hints ..... 16-8

Section 17: Machine Specifications

Specifications ..... 17-2

Index

## Section 1: Introduction

To the User

Key Operator Functions

Copier Service, Repairs & Supplies

Machine Labels

Control Panel with Interactive Touch Screen

Overview of the Operator's Manual

Help Mode

Product Overview

Features of the Di750

Copier Features

Standard Equipment

Optional Equipment

# Introduction

## To the User

Welcome to the Di750. The following topics relate to general product information and provide tips on using this manual.

## Key Operator Functions

Custom settings can be made by the key operator or anyone who is responsible for the machine. Access to the Key Operator mode may require a key operator password, if previously set by service. Use the password system to limit use of key operator functions to a person who is authorized to handle the responsibility.

## Copier Service, Repairs & Supplies

Copier service and repairs should be performed only by an authorized service representative. To maintain personal safety and to avoid machine damage, never disassemble the machine for any reason. To ensure optimal copy quality, use only supplies that are recommended by us. For convenience, use the form located at the end of *Section 15: Maintenance & Supplies* to record all service, repair, and supply orders.

## Machine Labels

Information labels are affixed to the copier to provide quick and easy instructions on basic copying, loading paper, adding toner, and clearing mishandled paper. In addition, safety labels are attached to various internal areas of the copier, and provide cautionary information that must be heeded to prevent personal injury or damage to the copier. Sample machine safety labels are shown in *Section 2: Safety Information*.

## Control Panel with Interactive Touch Screen

The Di750 control panel is user friendly and easy to operate. The far right portion of the panel displays the Timer indicator and buttons to select Energy Saver, Interrupt, Proof Copy and Stop. Adjacent to this section is the keypad to select Print Quantity, Utility and Clear. The next section on the left displays the Copy/Scanner/Server/Printer indicator and keys to select the mode; as well as keys to select Mode Check, Help, Program Memory and Panel Reset modes. To the left is the LCD screen.

Copying modes, selections, and setting changes can be made from the touch screen. The upper portion of the touch panel automatically displays machine status information, as required. In addition, the [Help] key can be used to display information on each function that is displayed on the screen and provide step by step instructions.

# Introduction

## To the User (continued)

### Overview of the Operator's Manual

To enjoy optimal performance, read this manual before using the copier. Be sure to handle the machine and perform all copying operations only as recommended in the manual. Keep the manual located with the machine so that all users may refer to it, as needed.

#### **Manual Organization:**

This manual includes fifteen topic sections and Specifications of the product. Highlights are as follows:

Section 1 includes general product information and features.

Section 2 provides all safety information, which should be read before operating this equipment.

Section 3 includes machine information that can be used as a reference when performing all copying jobs, especially when capacities, sizes and weights are factors.

Section 4 includes paper information that can be used as a reference when performing all copying jobs.

Section 5 provides copier management information, which should be read before operating this equipment.

Section 6 includes information on using the touch screen and selecting basic copying functions.

Section 7 provides information on output modes, including sort, staple-sort, group, face up, folding/stapling & folding, cover sheet feed, and manual staple functions.

Section 8 provides information on special original modes.

Section 9 provides information on special applications modes.

Section 10 provides information on program memory functions.

Section 11 describes server functions for storing the image data in HDD during printing.

Section 12 provides information on tandem mode functions.

Section 13 provides shortcuts for special application functions and some basic functions.

Section 14 describes key operator functions for customizing the machine to suit your working environment. The key operator mode should be used by an authorized person.

Section 15 provides information on maintaining this equipment and replenishing paper and toner.

Section 16 provides troubleshooting information and instructions for clearing mishandled paper.

#### **Page Design:**

The page layout of this manual is designed to help you perform each operation quickly and easily. The basic format includes an introductory explanation of each function; step-by-step procedures; and illustrations to enhance many of the procedures. Caution statements specific to a topic are located on appropriate pages. Special notes are located at the bottom of the page.

### Help Mode

Help can be obtained for any function or mode that is displayed on the screen.

# Introduction

## Product Overview

The Di750 is a digital printer/copier that can be used as a stand-alone copier, or it can be used as a high-speed network printer when connected to the optional Pi7500 Printer Controller.

The Di750 can also be used as a print server on a network operating system.

Separate operator's manuals and installation instructions are included with the optional Pi7500 Printer Controller.

Digital technology and memory capability of the Di750 provide many advantages over the conventional photocopying process.

In conventional photocopying, a scanned image virtually remains intact as it is represented on the drum and then copied onto the output media. While many conventional settings can be made before outputting the copies to effect image reduction, lens adjustment, image erasure and job store, etc., the conventional photocopying process cannot transform the image into bits or store image data into memory.

In the Di750, a scanned image is electronically digitized into data bits that are represented in code form and stored into memory. Stored data can be retrieved from memory and output in various ways, as controlled by software. Digitized image is represented as pixels on a screen or as dots per inch (dpi) on hard copy. The Di750 resolves image in the copier mode at 400/600 dpi and resolves image in the printer mode at 600 dpi.

Di750 digital technology enables you to:

- feed originals only once to make multiple copies, thereby preserving the condition of originals
- store image in memory and perform Sheet/Cover insertion, Chapter, Combination, Booklet, Image insert, Book copy, Program job, Mixed original, Repeat, Image shift, Stamp/Overlay
- enhance photo, complex text image quality, and enhance lighter image
- reduce toner consumption and produce clean copies with Non-image area erase
- organize images into booklet format
- insert images scanned from the platen into a set scanned from the document handler
- check copying conditions and produce a proof copy before making multiple copied sets
- confirm the current machine status
- select offset-sort, offset-group, staple-sort, folding, or stapling & folding output mode using optional Finisher (FN-104/FN-4)
- set reserve jobs to make copies of different types in succession
- lay stamp, watermark, or scanned image onto copy image
- store image data in HDD (option) for future printing

# Introduction

## Features of the Di750

- **600dpi Mode**  
Scan in higher resolution (600dpi) than in normal mode (400dpi).
- **All-Image Area**  
Make copies printed completely to the edges to avoid image loss.
- **AES - Automatic Exposure Selection**  
Automatically adjust exposure to compensate for the original.
- **AMS - Automatic Magnification Selection**  
Automatically select an appropriate magnification ratio when Copy Size is selected manually. Automatically selected when [AMS] key is touched.
- **APS - Automatic Paper Selection**  
Automatically select copy paper size to match the original documents.
- **ATS - Automatic Tray Switching**  
Automatically switch tray to allow copying to be continued without interruption when the selected tray becomes empty while copying is in progress.
- **Auto Layout**  
The original image on the platen glass or in the document handler is copied and centered on a sheet.
- **Auto Low Power**  
Automatically lower the power after a specified period of copier inactivity.
- **Auto Shut-Off**  
Automatically shut off the main power after a specified period of copier inactivity.
- **Book Copy**  
Copy both pages of an open book or book-size sheet separately onto two letter sheets in 1-1 mode or separately onto each side of one letter sheet in 1-2 mode. You can use the Book Copy mode with the Front or Front/Back cover mode. The cover page(s) will be scanned and copied normally before image division is performed on the other pages.
- **Booklet**  
Create letter R or ledger size booklets from letter size originals in 1-2 or 2-2 copy mode.
- **Chapter**  
Start chapter pages on the right side (front pages) of the finished document. Only duplex mode (1-2 or 2-2) is compatible.



# Introduction

## Features of the Di750 (continued)

- Combination

Copy a fixed number (2, 4, or 8) of pages onto one sheet of copy paper.

- Copy Density

Manually select up to 9 density levels.

- Copy Mode

Select the desired simplex mode (1-1 or 2-1); or duplex mode (1-2 or 2-2).

- Counter List

Display on the screen and print the following data for confirmation; total counter of the machine, copier counter, print counter and the date when the counter started.

- Density Shift

Shift each seven density levels of 4 density modes (Auto, Text, Photo, Increase Contrast) into two levels to lighter and three levels to darker.

- Energy Saver

Automatically turns off all but nominal power supply after a specified period of copier inactivity, for optimal efficiency. Power is returned after a brief warm up period by pressing [Energy Saver On/Off] key on the Control panel.

- Frame/Fold Erasure

Erase border and/or fold image area using Frame (1 - 15mm), Fold (1 - 30mm), or Frame & Fold.

- HDD Store

While operating ordinary copying job, store image data in HDD (option) for future printing.

- Image Insert

Store pages in memory from the platen glass, and insert the pages into a document copied from the document handler.

- Image Rotation

Image Rotation rotates the image before copying when the crosswise/lengthwise orientation of the original is different from the orientation of the copy paper.

In 1-2 copy mode, Rotation arranges the even pages of simplex originals so that the reverse sides of the duplex copies appear upside down.

In 2-1 copy mode, Rotation rearranges the reverse sides of duplex originals, when the reverse side is upside down, so that they can be read as normal simplex copies.

# Introduction

## Features of the Di750 (continued)

- Image Shift

Create or remove a binding margin at the top, bottom, right and left edges (shift amount from 0mm ~ 250mm in 1mm increments); reduce image to prevent image loss (reduce & shift amount from 0 ~ 250mm in 1mm increments).

- Interrupt Copying

Interrupt copying in progress to perform copying from the platen glass.

- Job Status

Display the Job Status Screen to view the machine status, change the operation order of reserve jobs, delete the unused reserve job, or display the previous job list.

- Lens Mode (Preset, Zoom)

Select Preset ratios, three reduction and three enlargement ratios.

Zoom ratios can be selected from 33% ~ 400% in 1% increments (400 dpi), or 33% ~ 200% increments (600 dpi).

- Machine Status Confirmation

Display the current machine status on LCD for confirmation.

- Magnification

Set user-programmable ratios under User Set 1, User Set 2 and User Set 3.

- Manual Shut-off

Shut off the main power when pressing [Energy Saver On/Off] key.

- Mixed Original

Copy mixed size originals from the document handler in APS or AMS mode. APS automatically selects the copy size of each original. AMS mode allows you to select one paper size for all originals.

- Non-Image Area Erase

When copying from the platen glass when the document cover is open, copy only the image area and not the exposed area of glass, which would otherwise copy as black.

- Non STD Size for Multi-Sheet Bypass Tray

Enter the special paper size to be loaded on the Multi-sheet bypass tray using the touch screen keypad in order to avoid paper misfeed.

# Introduction

## Features of the Di750 (continued)

- Non STD Size for Original

Identify the special original size which the Di750 could not detect in order to select the optimal paper size for copying or printing.

- Output mode for Machine with FN-104/FN-4 Finisher Installed:

Non-Sort, Sort, Staple-Sort, and Group modes using the primary (main) tray

Non-Sort Face Down exit, Non-Sort Face Up exit, Group Face Down exit, and

Group Face Up exit modes using the secondary (sub) tray

Stapling & Folding, and Folding modes using the booklet tray (FN-4 only)

Select an output tray and output mode on the Finisher Mode Selection Screen and on the Control panel. For details of each output mode, see Section 7: Output Modes.

- Output for Machine with no Finisher Installed: Sort and Group modes

Use the default condition to output copies in the same order as the originals. Use the Sort mode to alternately switch the horizontal and vertical orientation of each copied set upon exit. Use the Group mode to output multiple copies of each original without offsetting them upon exit.

- Output mode for FN-104/FN-4 Finisher with Cover Inserter A Installed:

Cover Sheet mode

Manual Staple mode

For details of each output mode, see Section 7: Output Modes.

- Overlay Memory

Store the overlaying image in HDD and print a stored image onto the copy image.

- Panel Reset

Automatically reset to auto mode defaults after a specified period of copier inactivity.

- Paper Capacity

Total 2,150 sheets, including two 500-sheet trays, a 1,000-sheet tray, and a 150-sheet Multi-Sheet Bypass tray.

Total 6,150 sheets, including 4,000-sheet optional large capacity cassette.

- Platen Memory

Scan documents into memory from the platen glass and/or the document handler and insert the pages into another document copied from the document handler. If an incompatible function is selected in this mode, the latter function will not be selected, and a Caution message will be displayed.

# Introduction

## Features of the Di750 (continued)

- Program Job

Scan documents into memory while designating a different copy condition for each original, then print all the images collectively.

- Program Memory

Program up to 30 jobs and Recall each job by job number, as needed. All compatible platen glass functions can be programmed into Program Memory directly after they are selected.

- Proof Copy

To ensure correct output before running multiple copies, run a proof copy by touching **PROOF COPY** on the Check Screen or pressing [Proof Copy] key on the Control panel.

- Repeat Image

Select the horizontal image area across the page, and repeat it down the page as many times as the repeat width setting (10 ~ 150mm) permits in manual or auto.

- Reserve

Scan in subsequent copy jobs while the Di750 is busy printing or copying.

- Resolution (High, Very High)

High resolution mode and Very High resolution mode provide optimal image quality for photos and complicated graphics and text that require high to very high compression amounts.

- Reverse Image

Reverse the image from black-on-white to white-on-black or vice versa.

- Rotation Exit (Rotation Sort/ Rotation Group)

When no Finisher is installed, Rotation Exit alternately switches the horizontal and vertical orientation of each sorted set as it outputs to the exit tray. Be sure to load both 8.5"x11" and 8.5"x11"R in separate trays (including the Multi-sheet bypass tray) before selecting this feature.

- Server Function (option)

Store image data in the HDD for future printing.

- SDF

Feed thick original one sheet at a time from the document handler.

# Introduction

## Features of the Di750 (continued)

- Sheet/Cover Insertion

Insert up to 30 blank or copied sheets from any tray including the Multi-Sheet Bypass Tray, or insert blank or copied front and back covers from any tray including the Multi-Sheet Bypass Tray.

- Stamp/Overlay

Imprint a stamp, watermark, or scanned image onto the copy image.

- Staple

Select the stapling position and number of staples (3 positions).

- STD Size (Special)

Detect the standard paper sizes which cannot normally be detected (A4R and A5) when loaded in a main body tray. A5R and F4 sizes will also be available when loaded in the Multi-Sheet Bypass Tray.

- Tab Paper

Copy onto tabbed sheets from tabbed originals, allowing the image on the tab part of the original to be printed on the same part of the tabbed copy paper.

- Tandem Mode for Two Copiers

Work in tandem to distribute a large copying job in half the time of non-tandem mode.

- Text/Photo Enhance

Enhance photo image in Photo mode; regular image in Auto mode; enhance text image in Text mode; enhance lighter image in increase contrast mode.

- Transparency Interleave

Copy onto transparency film and interleave blank or copied paper for each original copied.

- Trimming mode for FN-4 Finisher with TMG-1 Trimming Unit installed:

Trim the end of folded or stapled & folded booklets.

- Userset Density (USERSET 1, USERSET 2)

Output up to 16 density samples on a total of 4 pages that display 4 samples per page, then program the desired density under USERSET 1 and/or USERSET 2.

# Introduction

## Features of the Di750 (continued)

- Weekly Timer

Can be set according to the needs of each work environment. Turn main body power Off/On daily or weekly, during lunch time, on holidays, and also enable the timer-interrupt mode, which allows temporary use of the machine even when the machine is in the daily, weekly, or holiday Off mode.

- Wide Size Paper

Copy onto paper slightly larger than the specified regular size.

- Z-Folded Original

This feature sets the EDH to accept Z-folded originals.

# Introduction

## Copier Features

### Standard Equipment

Main Body with 3 Paper Trays (500/500/1,000 sheets)

Electronic Document Handler (EDH)

Automatic Duplex Unit (ADU)

Configuration Options:

with Multi-Sheet Bypass Tray (150 sheets)

### Optional Equipment

#### Finisher (FN-104)

This finisher is equipped with two exit trays.

Secondary (sub) tray: Four output types can be specified on the Finisher Mode Selection Screen.

- (1) Face down non-sort exit
- (2) Face up non-sort exit
- (3) Face down group exit
- (4) Face up group exit

Primary (main) tray: Four output types can be specified by STAPLE SORT and SORT keys on the Basic Screen and by the setting on the Finisher Mode Selection Screen.

Face up exit is not available.

- (1) Sort exit
- (2) Staple sort exit
- (3) Non-sort exit
- (4) Group exit

#### Finisher (FN-4)

This finisher is equipped with three exit trays and a cover inserter A (option).

Secondary (sub) tray: Four output types can be specified on the Finisher Mode Selection Screen.

- (1) Face down non-sort exit
- (2) Face up non-sort exit
- (3) Face down group exit
- (4) Face up group exit

Primary (main) tray: Four output types can be specified by STAPLE SORT and SORT keys on the Basic Screen and by the setting on the Finisher Mode Selection Screen.

Face up exit is not available.

- (1) Sort exit
- (2) Staple sort exit
- (3) Non-sort exit
- (4) Group exit

# Introduction

## Copier Features (continued)

### Optional Equipment (continued)

#### Finisher (FN-4) (continued)

Booklet tray: Stapled and folded, or simply folded booklets are to be delivered onto this tray. These two finishing modes can be specified on the Finisher Mode Selection Screen.

Trimming unit tray: This tray is attached to a Trimming Unit (option) installed on the Finisher (FN-4). Folded or stapled and folded trimmed booklets are delivered to this tray.

#### Cover Inserter A

Used when selecting **COVER SHEET** on the Finisher Mode Selection Screen, or when stapling copies manually.

#### Trimming Unit (TMG-1)

Used when selecting **TRIM** with **STAPLING & FOLDING** or **FOLDING** on the Finisher Mode Selection Screen.

Large Capacity Cassette (C-305) (4,000 sheets)

Large Capacity Cassette (C-305L) (4,000 sheets)

64MB Memory (M64-1)/128MB Memory (M128-1)

Printer Controller (Pi7500)

HDD





## Section 2: Safety Information

User Instructions

Machine Labels

Label Locations

Machine Installation and Power Requirements

Machine Handling and Care

Routine Safety

Finisher Capacity Requirements

Regulations

FCC Regulations

ICES Regulations

Laser Safety

Internal Laser Radiation

Laser Safety Label

Ozone Release

# Safety Information

## User Instructions

The following pages include important safety information, which should be read and understood before you attempt to operate the machine. If you have any concerns about safety matters, please contact your service representative. Keep this manual permanently located with the machine, and in good, legible condition. The manual should be readily available to all users.

Machine safety labels are attached to the internal area of the machine. The purpose of the safety labels is to alert you of imminent or potentially hazardous situations or conditions. Be sure to heed all safety labels. If the safety labels become illegible due to soilage, etc., please contact your service representative for information on obtaining replacements.

Examples of machine safety labels are shown on the following page.

The following standard safety categories are commonly used on product labelling.

**DANGER:**

Danger indicates an imminent hazardous situation, which, if not avoided, will result in death or serious injury.

Note:

The DANGER category is not required for this product, and is included here for general user information.

**WARNING:**

Warning indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

**CAUTION:**

Caution indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate bodily injury.


NOTICE:

Notice provides information on the correct handling or use of the machine to prevent breakage of the copier or some machine part, etc. If does not indicate concern for personal safety.

# Safety Information

## Machine Labels



### Label Locations

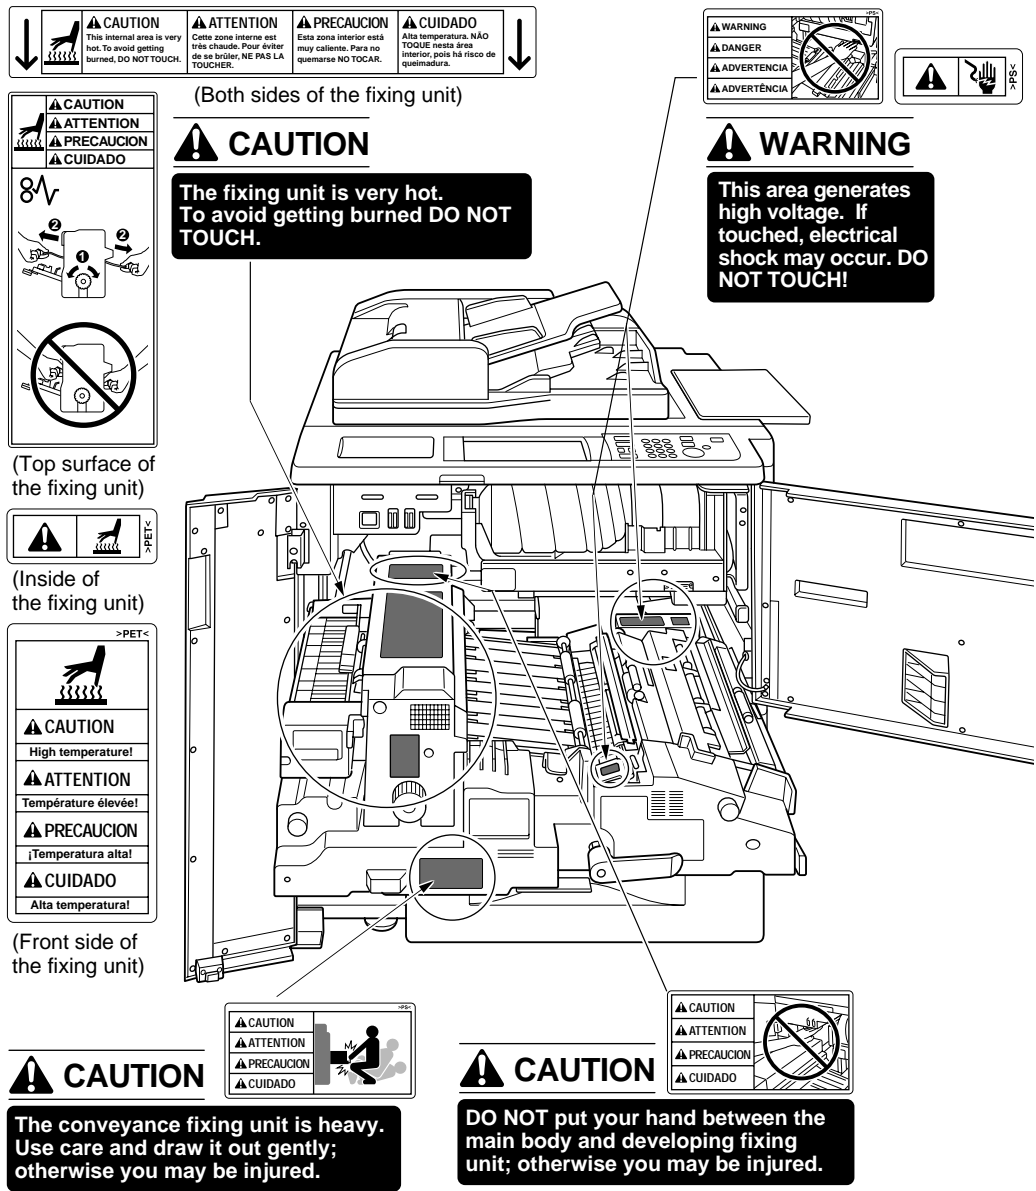

# Safety Information

## Machine Labels (continued)

### Label Locations (continued)

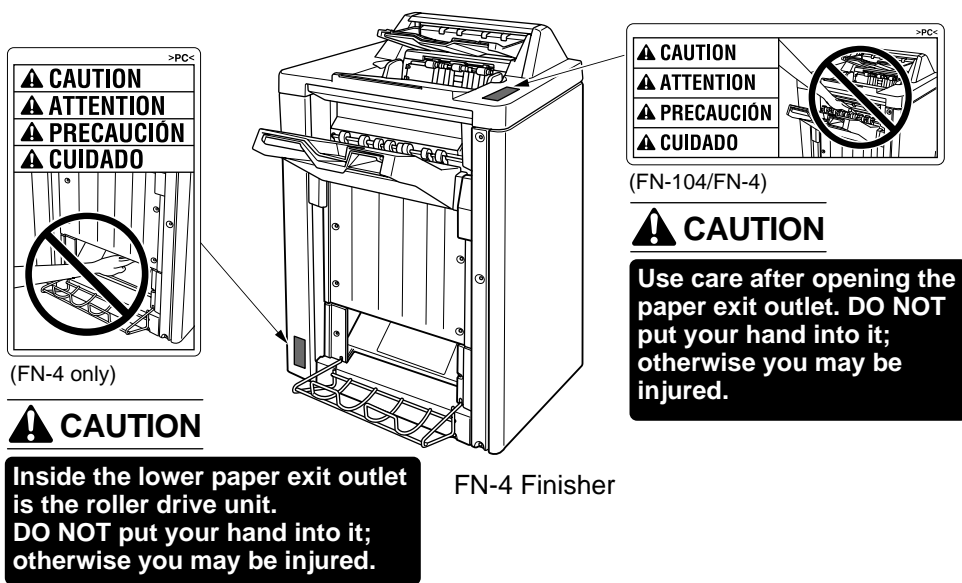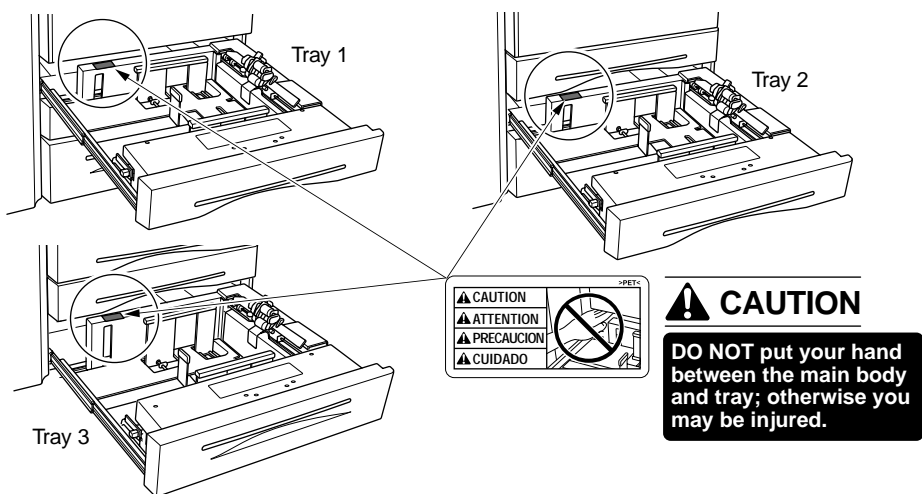

# Safety Information

## Machine Labels (continued)

### Label Locations (continued)

- Avoid getting burned.  
Do not touch any machine area that you are advised not to touch by a warning/caution label.
- Do not remove warning/caution labels.  
If any warning/caution label is removed or if any warning/caution label or caution indicator is illegible due to soilage, clean the label. If cleaning does not render the label legible, please contact your service representative.

# Safety Information

## Machine Installation and Power Requirements

### **CAUTION:**

FAILURE TO HEED THE FOLLOWING CAUTIONS MAY RESULT IN BODILY INJURY AND/OR MACHINE DAMAGE

#### ☐ **FIRE PREVENTION**

Install machine away from flammable or volatile materials. Routinely check for abnormal heat from power cord and/or plug.

#### ☐ **SHORT CIRCUIT FROM WATER DAMAGE**

Do not install or operate this equipment outdoors near a lake, pond, or river, etc.; and do not allow the machine to come in contact with splashes of rain, water, or any liquid.

#### ☐ **TEMPERATURE AND HUMIDITY**

Install the machine away from direct sunlight, heat sources (stoves, heaters) and cold temperatures (air conditioners). Avoid any environment that is outside 50°C~86°F (10°~30°C), with 10~80% humidity.

#### ☐ **VENTILATION**

Do not allow the machine to come in contact with dust or ammonia gas, or fumes from printing or cleaning solutions, etc.; otherwise, image quality will be poor. Install the machine in a well-ventilated area, for comfort; otherwise, an ozone odor will be detected during large copy runs. When in use, the copier generates ozone in amounts too small to be hazardous to the human body.

#### ☐ **VIBRATIONS**


If the machine is constantly vibrated or jolted, trouble may occur. Install the machine on a level, horizontal floor, free from vibrations.

#### ☐ **SPACE ALLOTMENT**

Install machine in an area with adequate space for performing copier operations; replacing supply items; and for conducting preventive maintenance. See Site Requirements, Section 3.

#### ☐ **MACHINE RELOCATION**

Before moving the machine to another location, contact your service representative.

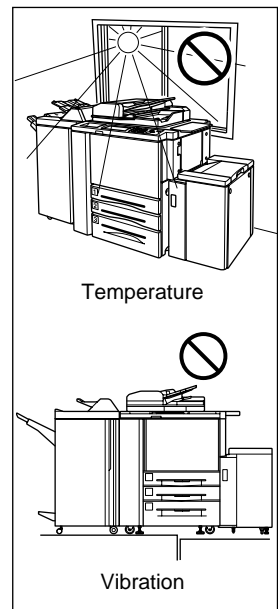

# Safety Information

## Machine Installation and Power Requirements (continued)

### **CAUTION:**

FAILURE TO HEED THE FOLLOWING CAUTIONS MAY RESULT IN MACHINE DAMAGE, OVERHEATING, RISK OF ELECTRICAL SHOCK, AND/OR PERSONAL INJURY

#### **PLUG SOCKET**

A plug socket is limited in capacity. Use an exclusive power source for this machine; otherwise, an accident from overheating and/or smoking may occur. The total power consumption of the main body, plus all peripherals, must not exceed the capacity of the main power supply.

For plug cable equipment, that the socket-outlet shall be installed near the equipment and shall be easily accessible.

#### **PLUG AND CORD (LEAD)**

Unless the power plug is firmly inserted into the socket, an accident from overheating and/or smoking may occur. Firmly insert the power cord plug into the electrical outlet before turning on the copier power switch. If the inserted plug is loose in the socket, disconnect it, and consult an electrician for repair; but, do not attempt to operate the machine.

For plug cable equipment, that the socket-outlet shall be installed near the equipment and shall be easily accessible.

A damaged power cord may result in overheating, short circuit or fire. Do not bend, crush, wind, or kick the cord; or strike it with a desk or any item; or roll up the power cord. If the main body power cord is bent or damaged, immediately contact your service representative; and do not attempt to repair it yourself, or continue to operate the machine.

#### **ADAPTERS AND PLURAL LOADS**

Never use adapters; and never connect plural loads or a branched socket to one socket outlet; otherwise an accident may occur from overheating or fire.

#### **EXTENSION CORDS (LEADS)**

An extension cord or lead is limited in capacity. Unless the cord or lead has adequate capacity, smoking may occur, and an accident may be caused from overheating. Should smoking and/or overheating occur, contact an electrician immediately. If you require further information about power requirements, power consumption, extension cords, adapters and connectors, please contact your service representative, and also consult your electrician.



# Safety Information

## Machine Handling and Care

### **WARNING:**

FAILURE TO HEED THE FOLLOWING WARNING MAY RESULT IN DEATH OR SERIOUS INJURY AND/OR MACHINE DAMAGE

#### ☐ **MACHINE CONTACT**

Never touch internal high voltage area indicated with a WARNING label.

Never touch the drum surface.

Never put your hand into the developing unit when removing mishandled paper.

### **CAUTION:**

FAILURE TO HEED THE FOLLOWING CAUTIONS MAY RESULT IN MACHINE DAMAGE, OVERHEATING, AND/OR PERSONAL INJURY

#### ☐ **MACHINE CONTACT**

Never touch internal high temperature or magnetism areas indicated with a CAUTION label.

Never insert your hand into the fixing unit when removing mishandled paper.

Never touch the inside of the main body for any purpose

except removing mishandled paper or adding toner.

Use care when drawing out the conveyance fixing unit.

#### ☐ **MACHINE CARE**

Do not drop paper clips, staples and other small metallic objects into the copier; or spill water or any other liquid into the machine.

Do not use the machine surface to support vases, books, etc.

These items will interfere with the work space and may cause damage to the machine or to original documents.


#### ☐ **ABNORMAL CONDITIONS**

If any abnormal sound, odor, or smoke generates from the machine, immediately stop using the copier, turn off the main power switch, disconnect the plug and contact your service representative.

If a circuit breaker is tripped, or if a fuse blows, stop using the machine and contact an electrician. If more detailed information is needed regarding the power source or power consumption of this machine, contact your service representative.

#### ☐ **MACHINE MODIFICATION**

Do not modify the machine in any way or remove any part or screw; and never attempt to perform any maintenance function that is not specifically described in this manual. Do not connect the machine with any options other than those specified.

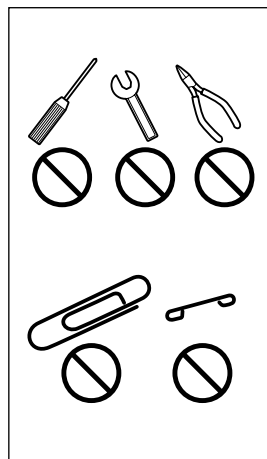

# Safety Information

## Routine Safety

### **CAUTION:**

FAILURE TO HEED THE FOLLOWING CAUTIONS MAY RESULT IN MACHINE DAMAGE, OVERHEATING, AND/OR PERSONAL INJURY

#### ☐ **PERIODIC CHECK**

Check for loose connection or excessive heat on power plug, damage to power cord and/or plug (creased, frayed, scratched or cut, etc.). Be sure the plug is inserted fully, and ground wire is connected correctly. If any abnormality occurs, do not continue to operate the machine.

#### ☐ **SERVICE MESSAGES**

If a service message displays, turn the machine off, disconnect the power cord from the outlet, and report the condition to your service representative.

#### ☐ **TONER**

Check to be sure toner in storage is out of the reach of children, or anyone incapable of using supplies safely. Although toner is nontoxic, do not inhale toner or allow it to come in contact with eyes. If inhalation or eye contact occurs, immediately consult a physician. Please refer to the appropriate material safety data sheet for additional toner safety information.

#### ☐ **PAPER**

Check paper to be sure it is according to specifications outlined in Section 4.

#### ☐ **CLEANING MATERIALS**

Check the type of cleaning material used on your machine to be sure it is recommended by us. If necessary, check with your representative. Never use cleaning materials for purposes other than cleaning, and be sure to keep all cleaning materials out of the reach of children or anyone who is incapable of using them safely.

#### ☐ **ENERGY SAVER**

Use Energy Saver mode for short periods of machine inactivity. When not using the machine for long periods of time, turn power off, except when the weekly timer function is operating.

#### ☐ **DISPOSAL OF THE COPIER**

Dispose of this copier according to your local regulations.

# Safety Information

## Finisher Capacity Requirements

### **CAUTION:**

FAILURE TO HEED THE FOLLOWING CAUTIONS MAY RESULT IN BODILY INJURY AND/OR MACHINE DAMAGE

#### ☐ **FINISHER PAPER CAPACITY**

To prevent paper misfeed, do not exceed the paper capacity of the Finisher.

FN-104/FN-4 Finisher paper weight: 16 lb ~ 24 lb

When the selected print quantity exceeds the maximum paper capacity, remove the copied sheets from the finisher while the paper is exiting.

Paper capacities below are stated for 20 lb Bond or the same size.  
This Finisher also accepts wide types of the regular sizes stated below.

#### **Finisher FN-104/FN-4**

##### **Primary (Main) tray: Non-sort/Sort/Group mode**

500 sheets (5.5"x8.5"R)

3,000 sheets (8.5"x11", 8.5"x11"R)

1,500 sheets (11"x17", 8.5"x14")

The Secondary (sub) tray can be unloaded while the Di750 is running. Set production is not limited by the capacity of the Secondary (sub) tray.

##### **Primary (Main) tray: Staple-Sort mode**

1,000 sheets\* (11"x17" ~ 8.5"x11"/R)

\*: The maximum capacity varies according to the number of copies to be stapled.

See p. 4-9.

##### **Secondary (Sub) tray: Non-sort mode**

200 sheets max.

##### **Booklet tray (FN-4 only)**

100 sheets max. (11"x17", 8.5"x14", 8.5"x11", A4R)

(The maximum number of sheets varies depending on pages of a booklet and selecting either the Folding or the Stapling & Folding. See p. 4-10.)

##### **Trimming unit tray (FN-4 with TMG-1 only)**

512 sheets max. (11"x17", 8.5"x14", 8.5"x11", A4R)

(The maximum number of sheets varies, depending on the number of pages in the booklet and whether Folding or Stapling & Folding is selected. See p. 4-11.)

# Safety Information

## Finisher Capacity Requirements (continued)

### **CAUTION:**

FAILURE TO HEED THE FOLLOWING CAUTIONS MAY RESULT IN BODILY INJURY AND/OR MACHINE DAMAGE

#### ☐ **FN-4 FINISHER BOOKLET MODE OUTLET**

Inside the Booklet mode outlet is the roller drive unit. DO NOT put your hand into it when removing the folded or stapled & folded sheet; otherwise you may be injured.

#### ☐ **FN-104/FN-4 FINISHER PAPER EXIT OUTLET**

To avoid injury when stapling large size copies, DO NOT put your hand into the open Paper exit outlet.

# Safety Information

## Regulations

### FCC Regulations

#### **WARNING**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The design and production of this unit conform to FCC Regulations, and any changes or modifications must be registered with the FCC and are subject to FCC control. Any changes made by the purchaser or user without first contacting the manufacturer will be subject to penalty under FCC regulations.

This device must be used with shielded interface cables. The use of non-shielded cable is likely to result in interference with radio communications and is prohibited under FCC rules.

---

FCC-F01

### ICES Regulations

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

---

IC-F03

### Laser Safety

This is a digital machine which operates by means of a laser. There is no possibility of danger from the laser, provided the machine is operated according to the instructions in this manual.

Since radiation emitted by the laser is completely confined within protective housing, the laser beam cannot escape from the machine during any phase of user operation.

This machine is certified as a Class 1 laser product. This means the machine does not produce hazardous laser radiation.

# Safety Information


## Regulations (continued)

### Internal Laser Radiation

Maximum Average Radiant Power: 1220  $\mu$ W at the laser aperture of the print head unit.

Wavelength: 665-695 nm

This product employs a Class IIIb Laser Diode that emits an invisible laser beam. The Laser Diode and Scanning Polygon Mirror are incorporated in the print head unit. The print head unit is **NOT A FIELD SERVICE ITEM**. Therefore, the print head unit should not be opened under any circumstances.

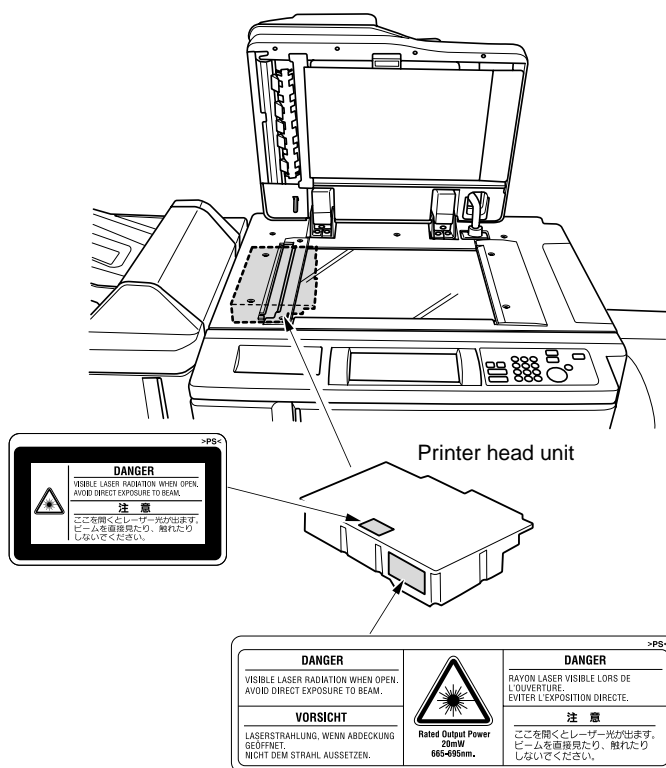

# Safety Information

## Regulations (continued)

### For the United States

#### CDRH regulation

This machine is certified as a Class 1 Laser product under the Radiation Performance Standard according to the Food, Drug and Cosmetic Act of 1990. Compliance is mandatory for Laser products marketed in the United States and is reported to the Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration of the U.S. Department of Health and Human Services (DHHS). This means that the device does not produce hazardous laser radiation.

The label shown on page 2-16 indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

#### CAUTION:

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

This is a semiconductor laser. The maximum power of the laser diode is 20 mW and the wavelength is 665-695 nm.

### For European Users

#### CAUTION:

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

This is a semiconductor laser. The maximum power of the laser diode is 20 mW and the wavelength is 665-695 nm.

### For Denmark Users

#### ADVARSEL

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling. Klasse 1 laser produkt der opfylder IEC60825 sikkerheds kravene.

Dansk: Dette er en halvlederlaser. Laserdiodens højeste styrke er 20 mW og bølgelængden er 665-695 nm.

# Safety Information

## Regulations (continued)

### For Finland, Sweden Users

LOUKAN 1 LASERLAITE  
KLASS 1 LASER APPARAT

**VAROITUS!**

Laitteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

Tämä on puolijohdelaser. Laserdiodin suurin teho on 20 mW ja aallonpituus on 665-695 nm.

**VARNING!**

Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

Det här är en halvledarlaser. Den maximala effekten för laserdioden är 20 mW och våglängden är 665-695 nm.

**VARO!**

Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.

**VARNING!**

Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.

### For Norway Users

**ADVERSEL**

Dersom apparatet brukes på annen måte enn spesifisert i denne bruksanvisning, kan brukeren utsettes for usynlig laserstråling som overskrider grensen for laser klass 1.

Dette en halvleder laser. Maksimal effekt till laserdiode er 20 mW og bølgelengde er 665-695 nm.




# Safety Information

## Regulations (continued)

### Laser Safety Label

A laser safety label is attached to the outside of the machine as shown below.

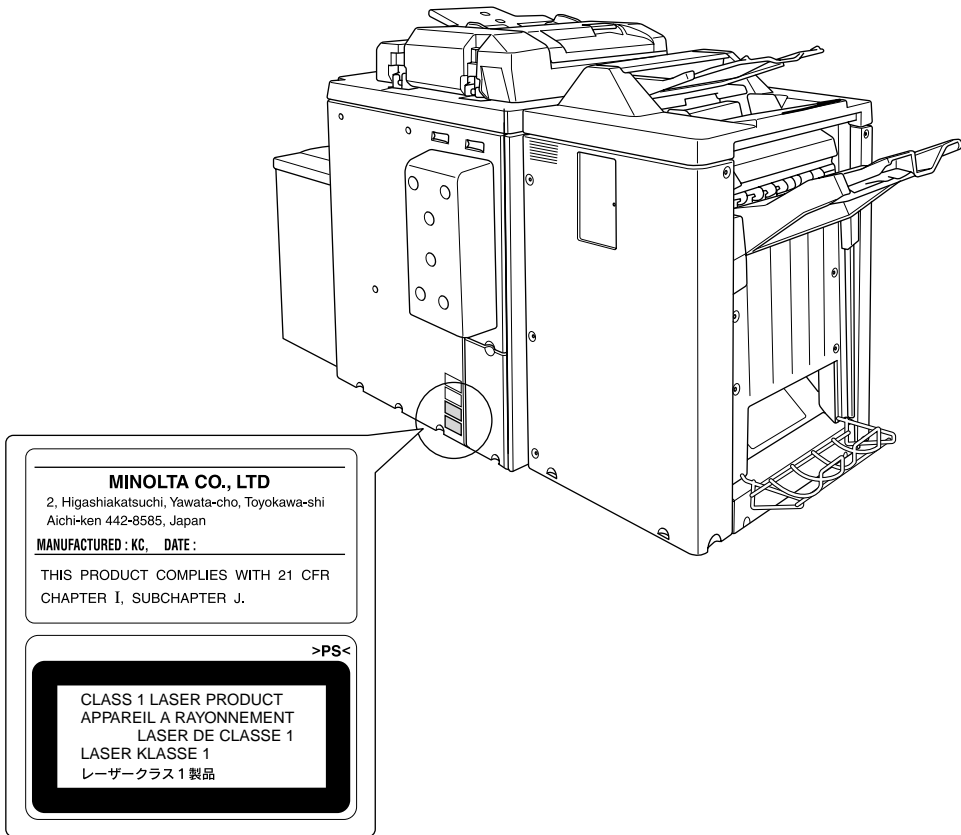

# Safety Information

## Regulations (continued)

### Ozone Release

#### **NOTE**

= Locate the Machine in a Well Ventilated Room =

A negligible amount of ozone is generated during normal operation of this machine. An unpleasant odor may, however, be created in poorly ventilated rooms during extensive machine operations. For a comfortable, healthy, and safe operating environment, it is recommended that the room well ventilated.

#### **REMARQUE**

= Placer l'appareil dans une pièce largement ventilée =

Une quantité d'ozone négligable est dégagée pendant le fonctionnement de l'appareil quand celui-ci est utilisé normalement. Cependant, une odeur désagréable peut être ressentie dans les pièces dont l'aération est insuffisante et lorsque une utilisation prolongée de l'appareil est effectuée. Pour avoir la certitude de travailler dans un environnement réunissant des conditions de confort, santé et de sécurité, il est préférable de bien aérer la pièce où se trouve l'appareil.



## Section 3: Machine Information

### Machine Configuration

External Machine Call-Outs

Internal Machine Call-Outs

Optional Equipment

### Site Requirements

### Control Panel Layout

Touch Screen

Basic Screen

### Initial Settings

### Panel Reset Mode

### Automatic Paper Selection (APS)

### Automatic Magnification Selection (AMS)

### Automatic Exposure Selection (AES)

### Automatic Tray Switching (ATS)

### Lead Edge Delete

### Service Settings

Finisher-Paper Capacity

Key Operator Password

ECM Master Key Code

Weekly Timer Master Key Code

Weekly Timer Key in Help Screen

Control Panel Contrast Key in Help Screen


Staple Sheet Capacity

Notice Message: ADD TONER/ PM CALL

# Machine Information

## Machine Configuration

### External Machine

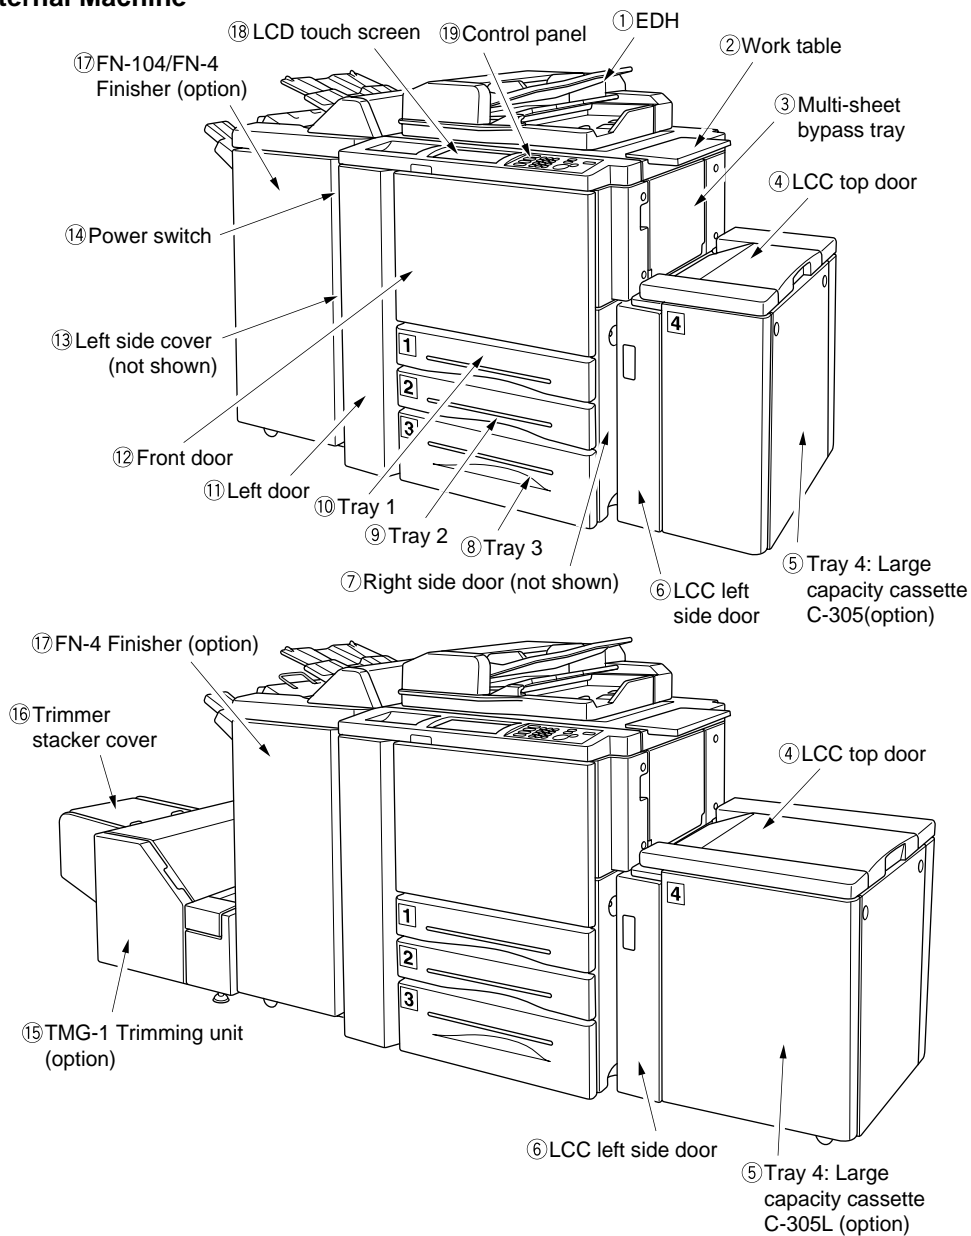

# Machine Information

## Machine Configuration (continued)

### External Machine Call-outs

- 1 **EDH (Electronic Document Handler)** automatically feeds multiple originals one at a time to the platen glass for copying.
- 2 **Work table** provides a convenient workspace for documents both before and after copying.
- 3 **Multi-sheet bypass tray** used for small quantity copying onto plain paper or special paper.
- 4 **LCC top door** opens to allow loading paper.
- 5 **Tray 4: Large capacity cassette C-305/C-305L** option holds 4,000 sheets.
- 6 **LCC left side door** opens to allow removal of mishandled paper.
- 7 **Right side door** opens to allow removal of mishandled paper.
- 8 **Tray 3** (universal tray) is user adjustable and holds 1,000 sheets of either 11"x17"/8.5"x14"/8.5"x11"R or 5.5"x8.5".
- 9 **Tray 2** (universal tray) is user adjustable and holds 500 sheets of either 11"x17"/8.5"x14"/8.5"x11"R or 5.5"x8.5".
- 10 **Tray 1** (universal tray) is user adjustable and holds 500 sheets of either 11"x17"/8.5"x14"/8.5"x11"R or 5.5"x8.5".


NOTE: Tray 1, 2, 3, and 4 are available for loading wide types of the regular sizes specified above.

- 11 **Left door** opens together with the front door to allow removal of mishandled paper.
- 12 **Front door** opens to the internal copier to allow clearing of mishandled paper and replenishing of toner.
- 13 **Left side cover** opens to allow removal of mishandled paper.
- 14 **Power switch** turns copier power On/Off when pressed.
- 15 **TMG-1 Trimming unit** (option) trims the end of booklet.
- 16 **Trimmer stacker cover** opens to allow you to take out the finished sets.
- 17 **FN-104/FN-4 Finisher** (option) sorts, staple-sorts, and groups into finished sets. FN-4 also folds or staples & folds copies into booklet-styled sets.
- 18 **LCD touch screen** displays interactive operation screens.
- 19 **Control panel** controls copier operations.

# Machine Information

## Machine Configuration (continued)

### Internal Machine

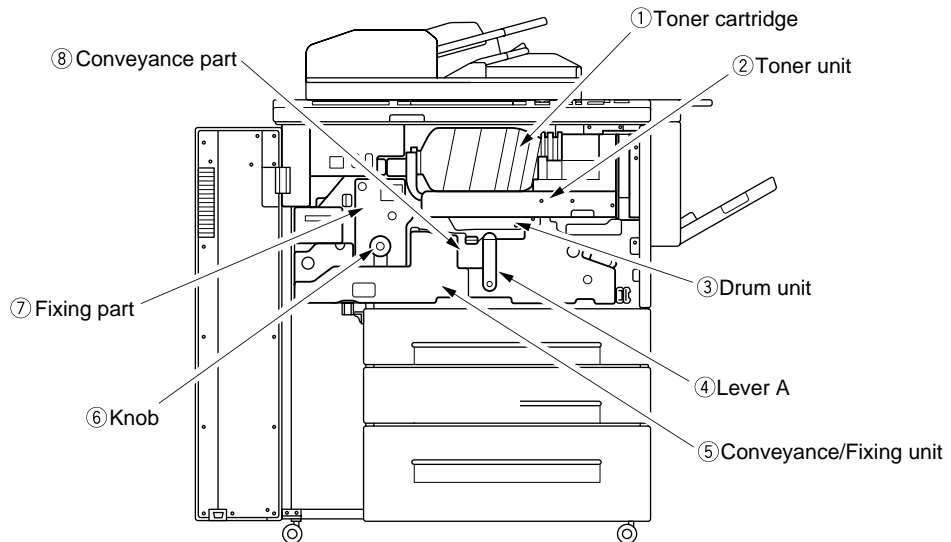


### Internal Machine Call-outs

- 1 **Toner cartridge** holds toner and is to be replaced when supplying toner.
- 2 **Toner unit** holds the toner supply.
- 3 **Drum unit** forms the copy image.
- 4 **Lever A** can be moved to withdraw the conveyance fixing unit for removal of mishandled paper.
- 5 **Conveyance/Fixing unit** passes the paper through the drum unit, and fuses the toner onto the copy paper, and is to be withdrawn for removal of mishandled paper.
- 6 **Knob** can be turned to ease removal of mishandled paper from the fixing unit.
- 7 **Fixing part**
- 8 **Conveyance part**

# Machine Information

## Machine Configuration (continued)

### Optional Equipment

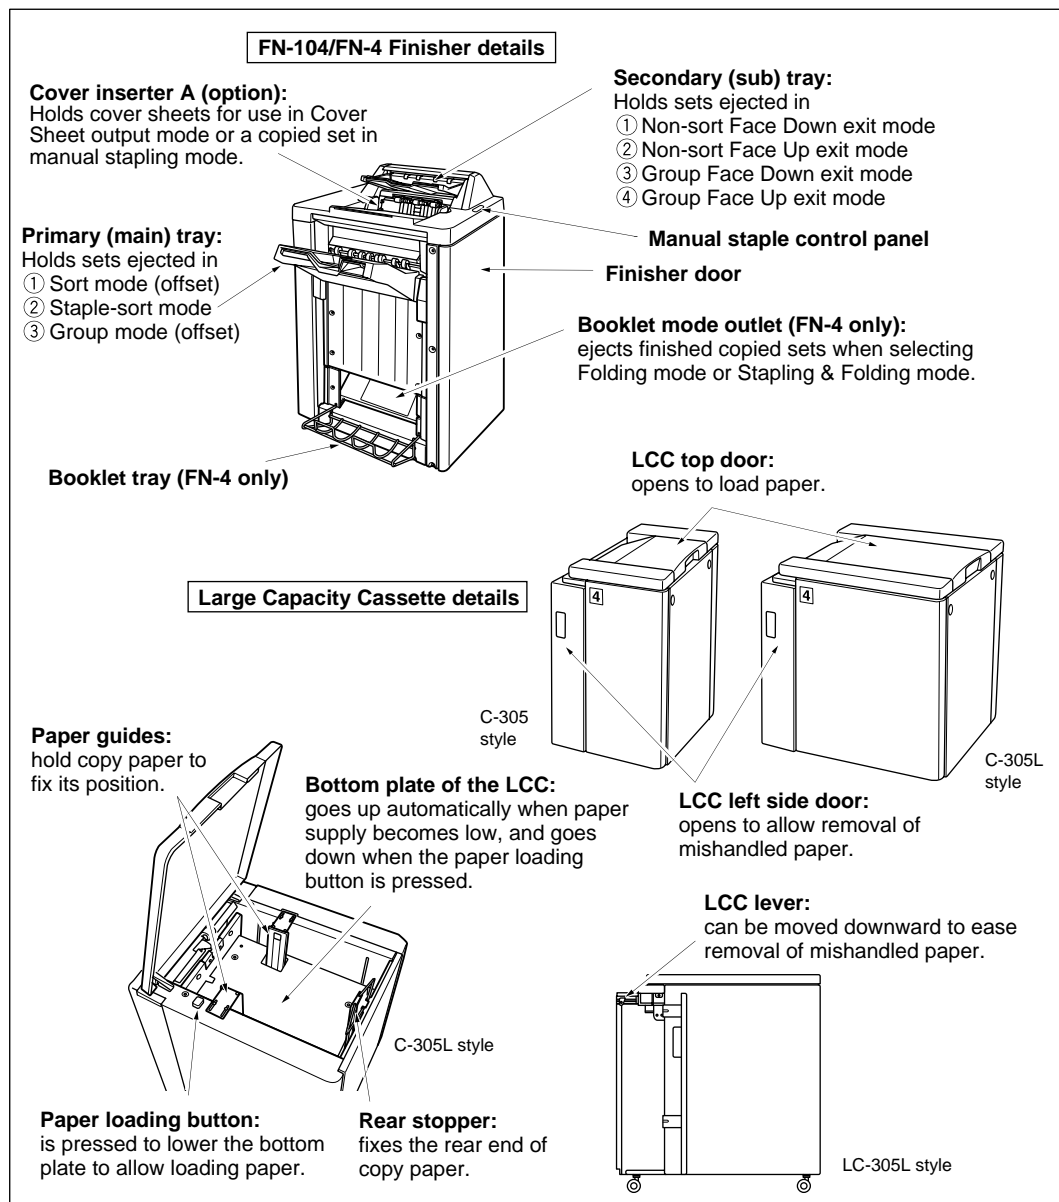




## Machine Information



### Machine Configuration (continued)

### Optional Equipment (continued)

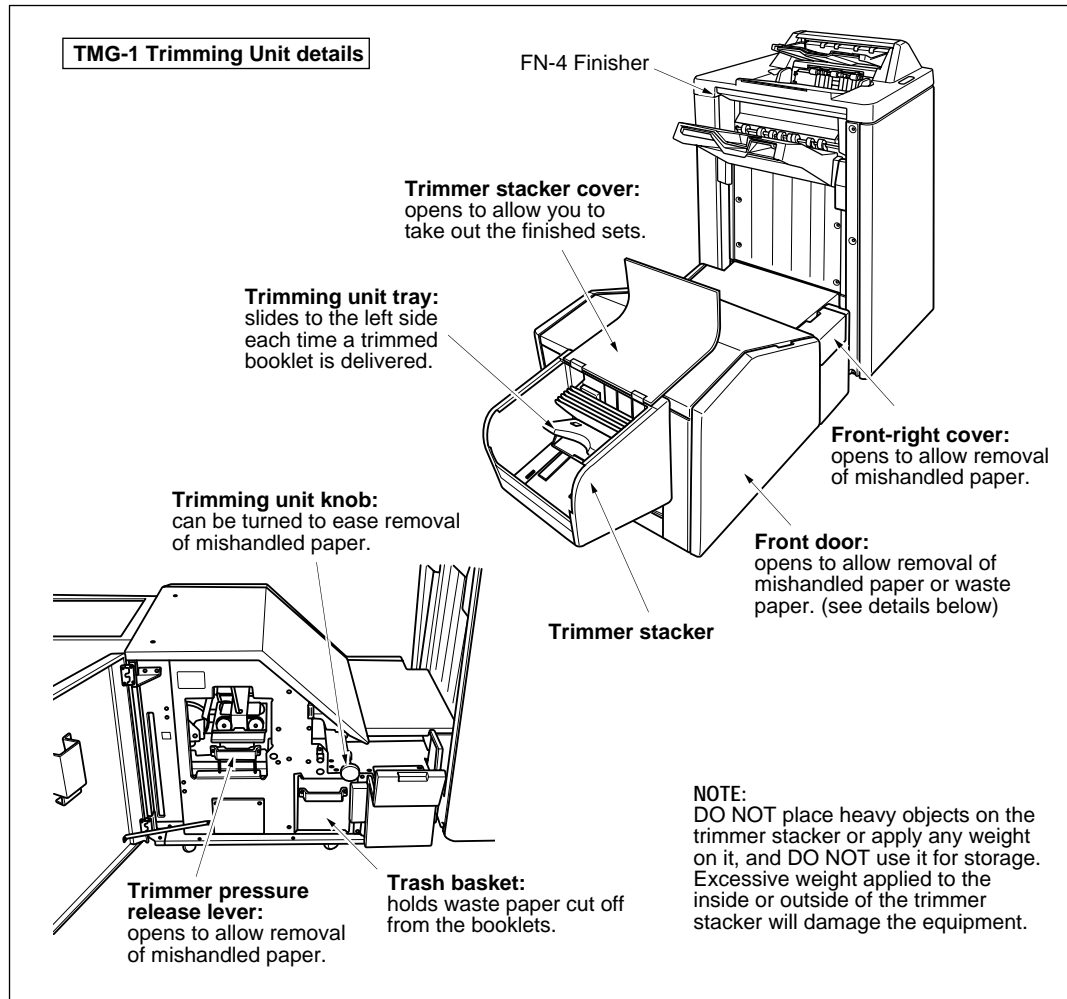


# Machine Information

## Site Requirements

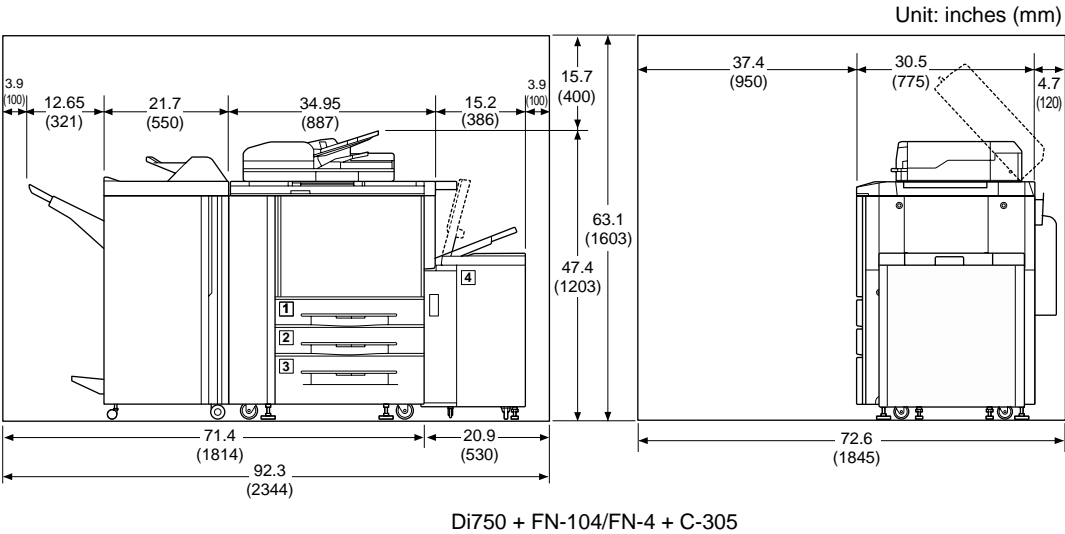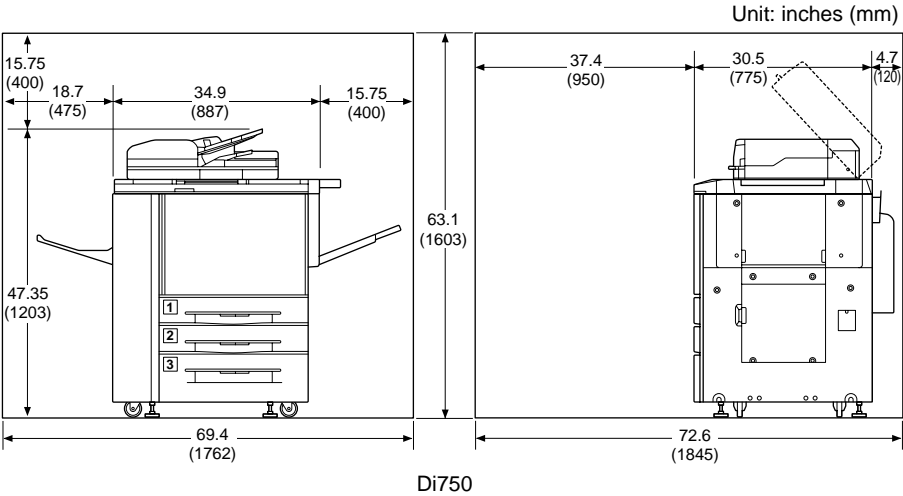

# Machine Information

## Site Requirements (continued)

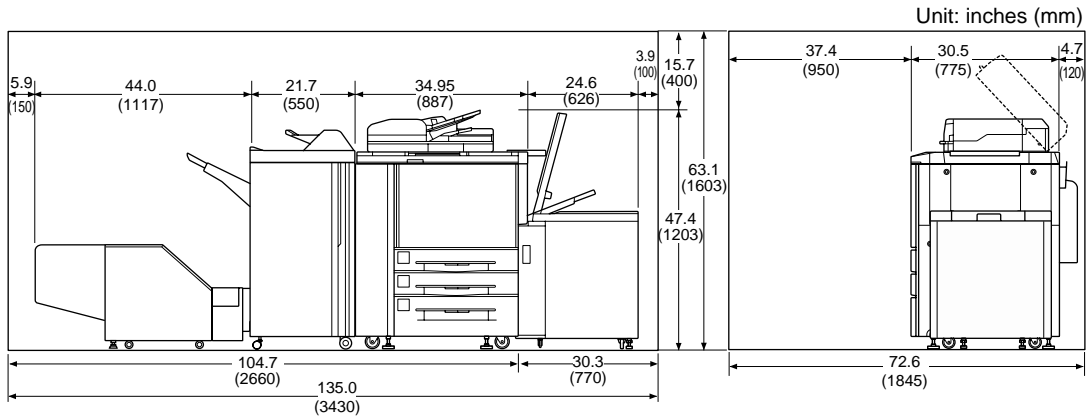


Di750 + FN-4 + TMG-1 + C-305L

### NOTES:

- 1 Dimensions are in inches with millimeters included in parentheses.
- 2 The Finisher main tray of the FN-104/FN-4 Finisher gradually goes down while printed material is output. DO NOT allow any object to interfere with the operation of the tray on the left side of the finisher, as any interference may cause damage to the finisher.

# Machine Information

## Control Panel Layout

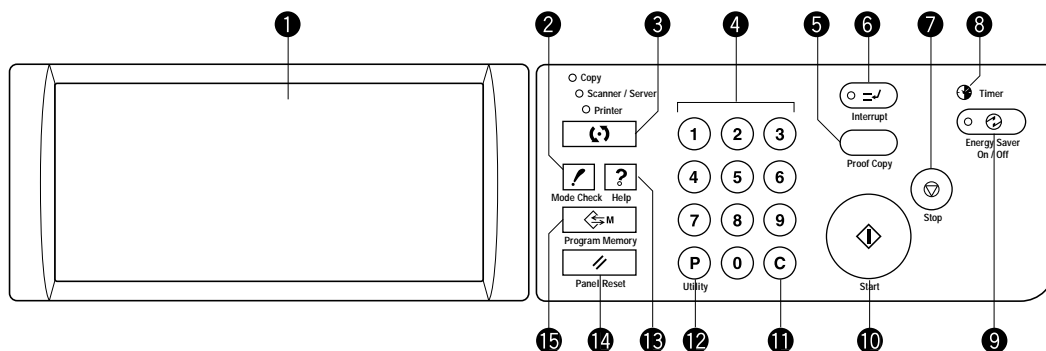

- 1 **LCD Touch Screen** displays machine and copying status; help information; interactive screens; and touch keys for selecting all functions.
- 2 **Mode Check** displays a screen showing all settings that are selected for the current job.
- 3 **Mode** switches the machine operation mode to copy, scanner/server, and printer in turn.
- 4 **Keypad** enters numeric values.
- 5 **Proof Copy** outputs a single set of copies to confirm whether the current settings are selected properly.
- 6 **Interrupt** stops copying in progress to allow copying from the platen glass.
- 7 **Stop** stops the copying sequence; deletes the stored memory.
- 8 **Timer** lights when the timer function is set.
- 9 **Energy Saver ON/OFF** activates energy-saving mode for times when the copier is inactive, or activates timer interrupt mode when weekly timer function is active.
- 10 **Start** activates copying or scanning.
- 11 **[C]** allows resetting of print quantity.
- 12 **[P] (Utility)** displays the Counter Screen or accesses programming modes for setting special functions.
- 13 **Help** displays a screen with help for the currently selected function, or to access the Key Operator Mode Screen.
- 14 **Panel Reset** restores copier to automatic mode settings or to key operator settings.
- 15 **Program Memory** displays screens for selecting job store/job recall functions.

# Machine Information

## Touch Screen


The touch screen is an LCD that displays interactive screens with touch sensitive keys for making copy job selections. Selections are highlighted at the touch. The screens also work with the conventional control panel keys.

**CAUTION:** The touch screen of the control panel is covered with glass. Do not drop heavy items on the glass, or put excess weight or pressure on it; otherwise the glass may break or become scratched.

After the power switch is turned on, the Wake-Up Screen displays for approximately 10 seconds, until initial machine settings are established. Then, the Warm-Up Screen displays for approximately 6 minutes, until the fixing temperature is reached.

When the Basic Screen is displayed, the touch screen becomes interactive. The interactive condition enables you to communicate directly with the copier system simply by touching keys displayed on the screen; or by pressing conventional keys, as required. In addition, the screens automatically display information regarding machine and copying status. Additional help is available any time with the [Help] key, which can be pressed from any screen, except from Program Memory or Key Operator Mode Screens.

## Basic Screen

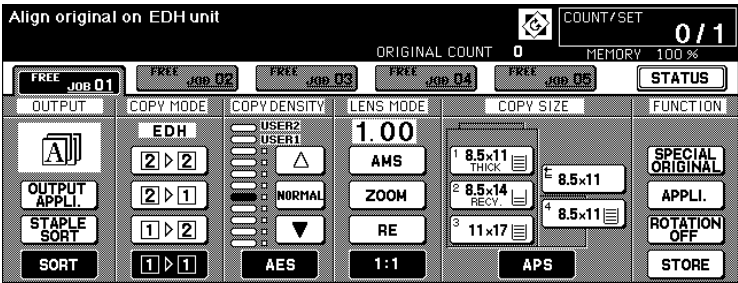

The Basic Screen displays after warm-up. The initial settings show on the next page. Except for Print Quantity, all initial settings can be changed by the key operator. The following modes can be accessed from this screen: Copy Mode, Copy Density, Lens Mode, Copy Size, Special Original, Application, Output Menu.

# Machine Information

## Initial Settings

Initial settings represent the initial condition when power is turned on; when ECM password is set; or when Panel Reset mode is restored, either manually or automatically.

Print Quantity: 1  
Magnification Ratio: 1:1 (key operator setting)  
EDH: ON (key operator setting)  
Copy mode: 1-1 mode (key operator setting)  
AES: (Automatic Exposure Selection) : ON (key operator setting)  
APS: (Automatic Paper Selection): ON (key operator setting)  
Finisher: Non-sort on Primary (main) exit tray (key operator setting)

## Panel Reset Mode

The Panel Reset function can be set for OFF/ 30 seconds/ 1 minute/ 1.5 minutes/ 2 minutes/ 2.5 minutes/ 3 minutes/ 3.5 minutes/ 4 minutes/ 4.5 minutes/ 5 minutes by the key operator. Initially, the mode is set to function after 1 minute of copier inactivity. The Panel Reset key function also re-displays the Basic Screen, unless these settings are changed by the key operator in the Copier Initial Setting Screen. See p. 14-10 to p. 14-11.

## Automatic Paper Selection (APS)

When APS is highlighted on the touch screen, the appropriate copy paper size is automatically selected. When copying from the platen glass or document handler, APS detects the sizes indicated below. For key operator settings of APS, see p. 14-40 to p. 14-45.

PLATEN GLASS: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5"  
RADF: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", 5.5"x8.5"R, A4 (8.27"x11.69", 210mmx297mm)

## Automatic Magnification Selection (AMS)

AMS functions automatically. An appropriate ratio is selected, based on the relationship of copy size to original size.

## Automatic Exposure Selection (AES)

When AES is highlighted on the touch screen, the appropriate exposure level is automatically selected to match the copy density of the original. Manual density adjustments override AES.

## Automatic Tray Switching (ATS)

When the selected paper tray becomes empty while copying is in progress, automatic tray switching detects the same copy paper size loaded in another tray to allow copying to be continued without interruption. The Multi-sheet bypass tray is not included in tray switching.

# Machine Information

## Lead Edge Delete

When using the EDH, image deletion of a few millimeters will occur on the lead edge for the purpose of controlling copy quality and copy reliability, unless deactivated by the key operator. See p. 14-40 to p. 14-45.

## Service Settings

The following functions can be provided by your service representative, who is authorized to change DIP switch settings. Contact your service representative if setting change is required.

## Finisher-Paper Capacity

In the default condition, the Di750 will produce unlimited sets. If required, service can set the copier to stop copying when the number of copies exceeds specified capacity.

## Key Operator Password

Service can set a 4-digit Key operator password to access the Key Operator Mode Screen. After this setting, a Password Entry Screen will display and require entry of the Key operator password to access the Key Operator Mode Screen.

## ECM Master Key Code

Service can set an 8-digit ECM master key code to access the ECM Setting Menu Screen. After this setting, the ECM Master Key Code Screen will be displayed and will always require entry of the set ECM master key code to access the ECM Setting Menu Screen.

## Weekly Timer Master Key Code

Service can set a 4-digit Weekly timer master key code to access the Weekly Timer Setting Menu Screen. After this setting, the Weekly Timer Master Key Code Screen will be displayed and will always require entry of the set Weekly timer master key code to access the Weekly Timer Setting Menu Screen.

## Weekly Timer Key in Help Screen

Service can set the copier with weekly timer system to display the Weekly timer key on the Help Screen to check and see the contents of Weekly timer settings.

# Machine Information

## Service Settings (continued)

### Control Panel Contrast Key in Help Screen

Service can set the copier to display Control panel contrast key on the Help Screen to display the Contrast Adjustment Screen for adjusting panel contrast.

### Staple Sheet Capacity

Staple capacity is changeable, and may be set to 45, 40, or 35 by service.

### Notice Message: ADD TONER/ PM CALL

Service can set the copier message area to display “ADD TONER” when the toner supply is low, or “PM CALL” when preventive maintenance is required.





## Section 4: Paper Information

- Positioning Originals on the Platen Glass
  - Positioning an Original for Manual Copying

- Using the Electronic Document Handler (EDH)
  - Positioning Originals
  - Positioning an SDF Original
  - Positioning Mixed Originals

- Paper in Main Body Trays

- Paper in Large Capacity Cassette (C-305) (Option)

- Paper in Large Capacity Cassette (C-305L) (Option)

- Paper in Automatic Duplex Unit

- Paper in Multi-Sheet Bypass Tray

- Paper in FN-104/FN-4 Finisher (Option)
  - FN-104/FN-4 Finisher Primary (Main) Tray
  - FN-104/FN-4 Finisher Secondary (Sub) Tray
  - FN-4 Finisher Booklet Tray

- Paper in Cover Inserter A (Option)
  - Cover Inserter A

- Paper in Trimming Unit (TMG-1) (Option)

- Paper Weight Compatibility Chart

# Paper Information

## Positioning Originals on the Platen Glass


### Positioning an Original for Manual Copying

Use the platen glass when originals are not suitable for use with the document handler, e.g., when size is incompatible, or when originals are folded, stapled, torn, or in generally poor condition.

#### Specifications

- ☐ Max. original size: 11"x17" (280mmx432mm), sheet or book
- ☐ Max. book weight/thickness: 15 lb [6.8kg]/1.2" [30mm]
- ☐ Original placement: Face down on right depth side of glass

- 1 Raise the document cover, as shown in the illustration below.
- 2 Place original FACE DOWN in the right rear corner, aligning the edge with the right measuring guide.
- 3 Gently close the document cover, to prevent the original from shifting on the glass.

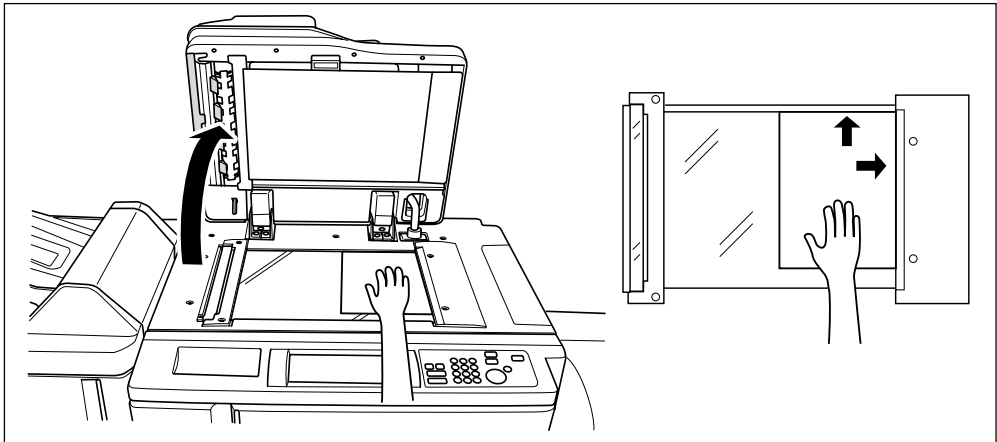

#### **⚠ CAUTION:**

When the finisher capacity is exceeded due to the print quantity selected, remove the copied sets while the paper is exiting; otherwise mishandled paper will occur.

#### **TIP:**

To eliminate black copy marks on edges when copying from a book without selecting Book Copy mode, select Frame/Fold Erasure or Non-Image Area Erase in Application mode.

# Paper Information

## Using the Electronic Document Handler (EDH)

### Specifications in 1-1, 1-2, 2-2, 2-1 Copying

- ☐ Original size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", 5.5"x8.5"R, A4  
(297mm x 432mm~140mm x 216mm)
- ☐ Original weight: 13 lb~34 lb
- ☐ Max. EDH tray capacity: 100 original sheets (20 lb bond paper)
- ☐ Max. original exit tray capacity: 100 original sheets (20 lb bond paper)
- ☐ Original placement: Face up; orientation same as copy paper
- ☐ Curling tolerance: 10mm or less

### Using SDF Mode\*1 in 2-2, 2-1 Copying

- ☐ Original size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", 5.5"x8.5"R, A4
- ☐ Original weight: 13 lb~34 lb
- ☐ Max. EDH tray capacity: 1 original sheet







### Using SDF Mode\*1 in 1-1, 1-2 Copying

- ☐ Original size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", 5.5"x8.5"R, A4
- ☐ Original weight: 13 lb~110 lb (200g/m<sup>2</sup> thick paper)
- ☐ Max. EDH tray capacity: 1 original sheet

### Using Mixed Original Mode\*2

- ☐ Original size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5"R mixed  
(5.5"x8.5" original is available in crosswise type feeding only)
- ☐ Mixed EDH tray capacity: 100 original sheets (20 lb bond paper)

## Unsuitable EDH Originals
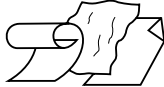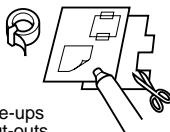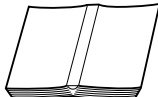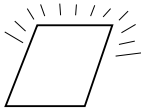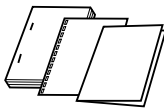
<div>1</div> <div></div> <div>Curled, creased or folded originals</div>	<div>2</div> <div></div> <div>Paste-ups or cut-outs</div>	<div>3</div> <div></div> <div>Books</div>
<div>4</div> <div></div> <div>Glossy or transparent (OHP) film, art paper, cellophane</div>	<div>5</div> <div></div> <div>Folded, punched or stapled originals</div>	<div>6</div> <div></div> <div>Thin or thick originals</div>

NOTES: 1 See p. 8-11 for details of the SDF mode.  
2 See p. 8-8 to p. 8-9 for details of the Mixed original mode.

## Paper Information

## Using the Electronic Document Handler (EDH) (continued)


## Positioning Originals

The document handler (EDH) automatically feeds up to 100 originals directly to the platen glass, starting with the top sheet. The EDH should only be used for unstapled, unfolded, smooth, flat originals.

- ❑ Original size detection requires accurate paper guide adjustment.
- ❑ APS detects size 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", 5.5"x8.5"R, and A4.
- ❑ Size, weight, and capacity are specified for all copy modes on p. 4-3.

Before placing originals in the tray, be sure the EDH is closed fully.

- 1 Position original(s) FACE UP on the EDH tray.  
Place two-sided originals with page one FACE UP.
- 2 Adjust paper guides.

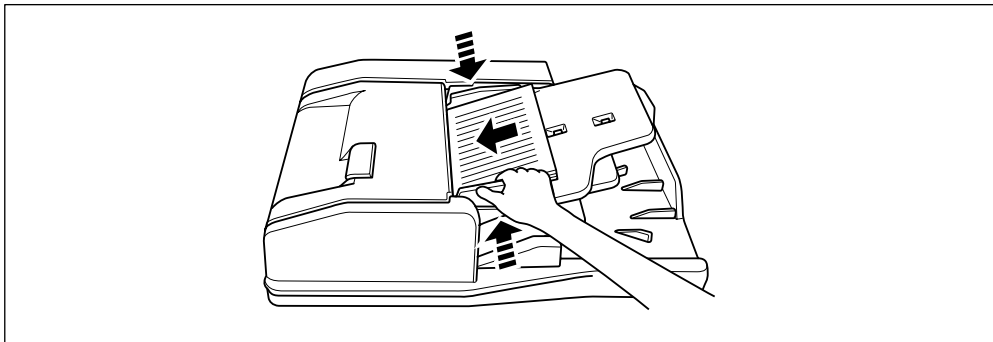

# Paper Information


## Using the Electronic Document Handler (EDH) (continued)

### Positioning an SDF Original

In the SDF mode, one thick original can be fed through the EDH tray.

- ☐ Original size: 11"x17" to 5.5"x8.5"
- ☐ Original weight: 13 lb~34 lb (2-1 and 2-2 copying)  
13 lb~110 lb (200 g/m<sup>2</sup> thick paper) (1-1 and 1-2 copying)
- ☐ Max. number of original: 1 sheet at a time
- ☐ Print quantity: Max. 9,999 sheets
- ☐ Incompatible Basic Copying Conditions: Using platen glass, Staple-Sort, Group, Rotation Sort, Rotation Group
- ☐ Incompatible Special Originals: Mixed Original, Z-Folded Original, WHOLE AREA in Non STD Size
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Image Insert, Non-Image Area Erase, Repeat except 2/4/8 Repeat, AUTO Layout, Overlay

- 1 Close the EDH.
- 2 Select the SDF mode. See p. 8-11.
- 3 Position an original FACE UP on the EDH tray.
- 4 Adjust paper guides.

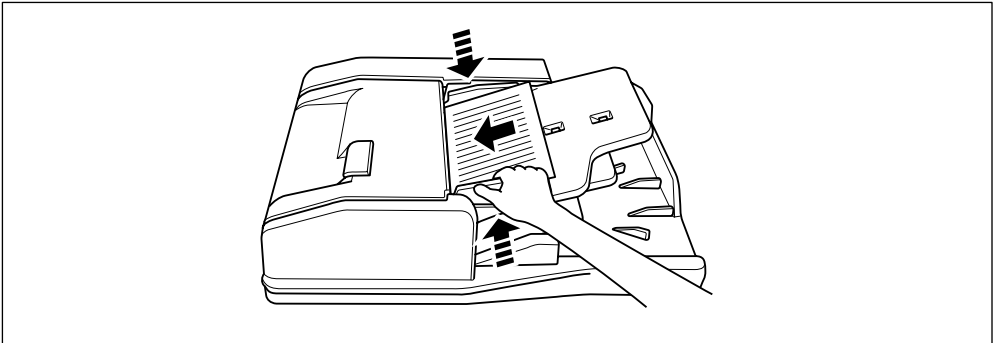

# Paper Information

## Using the Electronic Document Handler (EDH) (continued)


### Positioning Mixed Originals

Mixed size originals can be copied together from the document handler in either APS mode or AMS mode. In APS mode, copies will be output on mixed paper sizes to match the originals. In AMS mode, copies will be output on one common paper size that you select in which case an appropriate AMS magnification ratio will be selected automatically. To use the mixed original mode, see procedure on p. 8-8 to p. 8-9.

- ☐ Mixed original size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5"R, and 5.5"x8.5"\* mixed (13 lb~34 lb)  
\* 5.5"x8.5" original is available in crosswise type feeding only.
- ☐ EDH capacity: Max. 100 sheets (20 lb bond paper)
- ☐ Print quantity: Max. 9,999 sheets
- ☐ Incompatible Basic Copying Conditions: Rotation Exit, Staple-Sort with APS, Folding/Stapling & Folding in APS, Reserve with APS
- ☐ Incompatible Special Originals: Resolution (Very high), Non STD Size
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Transparency Interleave, Image Insert, Book Copy, Program Job, Non-Image Area Erase, Repeat, AUTO Layout, Image Shift, Overlay

Before using the Mixed Original mode, be sure the EDH is closed completely.

- 1 Arrange originals in order, and place them as described below:  
Place 11"x17"/8.5"x14" originals face up or side 1 up in the EDH tray, in lengthwise orientation, i.e., with short edge feeding.  
Position 8.5"x11" size in either crosswise or lengthwise orientation.  
Position 5.5"x8.5" size in crosswise orientation only.
- 2 Position mixed originals FACE UP, aligned with the left rear side of the EDH tray.
- 3 Adjust paper guides to originals.

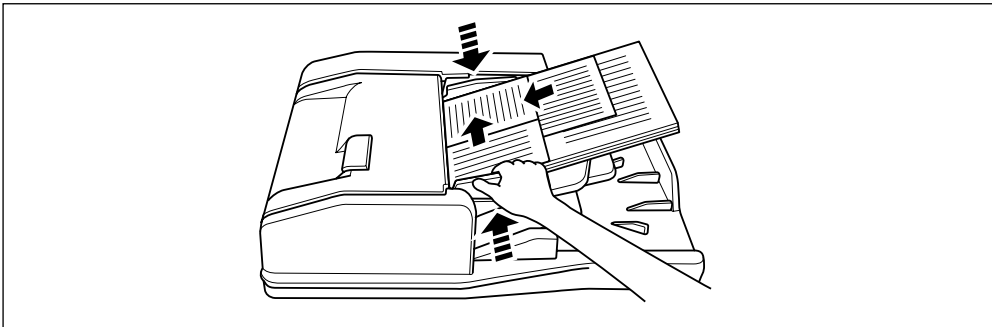

# Paper Information

## Paper in Main Body Trays

Standard Paper Size: 11"x17", F4, 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", A3, B4, A4, A4R, B5, B5R, A5 (user-adjustable)

NOTES:

- F4; 8"x13", 203mm x 330mm
- A3; 11.69"x16.54", 297mm x 420mm
- B4; 10.11"x14.33", 257mm x 364mm
- A4; 8.27"x11.69", 210mm x 297mm
- B5; 7.17"x10.11", 182mm x 257mm
- A5; 5.85"x8.27", 148mm x 210mm
- 5.5"x8.5"/A5 copy paper is available in crosswise orientation loading only.

Wide Paper Size: 11"x17"W, 8.5"x11"W, 8.5"x11"WR, 5.5"x8.5"W, A3W, B4W, A4W, A4WR, B5W, A5W (user-adjustable)

NOTES:

- 8.5"x14"W copy paper is not available.
- Wide paper size setting for each tray can be made in the Key operator mode. See p. 14-24 ~ p. 14-25.

Paper Weight: General tray; 16~24 lb  
Tray specified in Thick 1; 25~45 lb  
Tray specified in Thick 2; 46~110 lb (200 g/m<sup>2</sup> thick paper)  
(1-1 or 2-1 copy mode only)

NOTE: Paper type setting (Thick 1 or Thick 2) for each tray can be made in the Key operator mode.  
See p. 14-24 ~ p. 14-25.

Total Paper Capacity: 2,150 sheets, including 150-sheet Multi-Sheet Bypass Tray  
Tray 1/2: 500 sheets 20lb/ user-adjustable to any standard/wide size from 11"x17"/W~5.5"x8.5"/W  
Tray 3: 1,000 sheets 20lb/ user-adjustable to any standard/wide size from 11"x17"/W~5.5"x8.5"/W

## Paper in Large Capacity Cassette (C-305) (Option)

Standard Paper Size: 8.5"x11" or A4 (service-adjustable)

Wide Paper Size: 8.5"x11"W or A4W (service-adjustable)

Paper Weight: 16~24 lb  
LCC specified in Thick 1; 25~45 lb  
LCC specified in Thick 2; 46~110 lb (200 g/m<sup>2</sup> thick paper)  
(1-1 or 2-1 copying only)

NOTE: Paper type setting (Thick1 or Thick 2) for LCC can be made in the Key operator mode. See p. 14-24 ~ p. 14-25.

Total Paper Capacity: 6,150 sheets, including three Main body trays and 150-sheet Multi-Sheet Bypass Tray

Tray 4 (LCC): 4,000 sheets 20 lb/ fixed to standard/wide size 8.5"x11"/W or A4/W

NOTE: Reliability and copy quality are not guaranteed for all Special papers. Use only paper that is recommended by us.



## Paper Information

### Paper in Large Capacity Cassette (C-305L) (Option)

Standard Paper Size : 11"x17", F4, 8.5"x14", 8.5"x11", 8.5"x11"R, A3, B4, A4, A4R  
(service-adjustable)

Wide Paper Size : 11"x17"W, F4W, 8.5"x14"W, 8.5"x11"W, 8.5"x11"WR, A3W,  
B4W, A4W, A4WR (service-adjustable)

Paper Weight: : 16~24 lb  
LCC specified in Thick 1; 25~45 lb  
LCC specified in Thick 2; 46~110 lb (200 g/m<sup>2</sup> thick paper)  
(1-1 or 2-1 copying only)

NOTE: Paper type setting (Thick 1 or Thick 2) for LCC can be made in the Key operator mode. See p. 14-24 ~ p. 14-25.

Total Paper Capacity : 6,150 sheets, including three Main body trays and 150-sheet  
Multi-Sheet Bypass Tray

Tray 4 (LCC) : 4,000 sheets 20 lb/ fixed to standard/wide size 11"x17"/W, F4/W, 8.5"x14"/W,  
8.5"x11"/W, 8.5"x11"R/W, A3/W, B4/W, A4/W, or A4R/W

### Paper in Automatic Duplex Unit

Standard Paper Size: 11"x17"~5.5"x8.5"

Wide Paper Size: 11"x17"W~5.5"x8.5"W

NOTE: 5.5"x8.5"/W copy paper is available in crosswise orientation feeding only.

Paper Weight: 16~45 lb

### Paper in Multi-Sheet Bypass Tray

Loading Paper Size: Max. 12.36"x17.52" (314mm x 445mm) ~ Min. 3.94"x5.83" (100mm  
x 148mm)

Specified Size Automatically: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", 5.5"x8.5"R,  
A3, B4, A4, B5, B5R

Specified Size Manually / STD Size (Special) : F4, A4R, A5, A5R

Specified Size Manually / Wide Paper: 11"x17"W, 8.5"x11"W, 8.5"x11"WR, 5.5"x8.5"W,  
5.5"x8.5"WR, A3W, B4W, A4W, A4WR, B5W,  
B5WR, A5W, A5WR

Paper Weight: 16~45 lb (duplex (1-2 and 2-2) copy mode)  
Special (OHP transparencies, labels, hole punch, rag content)

Multi-Sheet Bypass Tray Capacity: 150 sheets 20 lb stacked: single feed special stock

NOTE: Reliability and copy quality are not guaranteed for all Special papers. Use only paper that is  
recommended by us.

## Paper Information

### Paper in FN-104/FN-4 Finisher (Option)

In-Bin Stapler Finisher FN-104/FN-4 accepts LEDGER (11"x17"), LEGAL (8.5"x14") and LETTER/R (8.5"x11"/R) standard/wide paper sizes (5.5"x8.5"R/W in Non-sort, Sort or Group mode).

### FN-104/FN-4 Finisher Primary (Main) Tray

#### Finisher FN-104/FN-4 (capacities at 20lb, unless otherwise indicated)

Non-sort/Sort/Group mode:

500 sheets 5.5"x8.5"/5.5"x8.5"W, 5.5"x8.5"R/5.5"x8.5"WR (A5/A5W, A5R/A5WR)

3,000 sheets 8.5"x11"/8.5"x11"W, 8.5"x11"R/8.5"x11"WR (A4/A4W, A4R/A4WR, B5/B5W, B5R/B5WR)

1,500 sheets 11"x17"/11"x17"W, 8.5"x14" (A3/A3W, B4/B4W)

Staple-sort mode:

1,000 sheets\* 11"x17"/11"x17"W, 8.5"x14", 8.5"x11"/8.5"x11"W, 8.5"x11"R/8.5"x11"WR

NOTE: (\*)Variable according to the number of pages to be stapled. See the table below.

**Paper Capacity for Staple-sort mode of FN-104/FN-4 Finisher**  
(for the same size only)

	11"x17"/11"x17"W (A3/A3W)		8.5"x14", 8.5"x11"/8.5"x11"W, 8.5"x11"R/8.5"x11"WR (B4/B4R, A4/A4W, A4R/A4WR, B5/B5W, A5/A5W)	
No. of copies	2 staples	1 staple	2 staples	1 staple
2~9	50 sets	50 sets	100 sets	100 sets
10~20	50	50	50	50
21~30	30	30	30	30
31~40	25	25	25	25
41~50	20	20	20	20

Service can set the copier to stop copying when the number of copies exceeds above capacity.  
Contact your service representative.

### FN-104/FN-4 Finisher Secondary (Sub) Tray

#### Finisher FN-104/FN-4 (capacities at 20lb, unless otherwise indicated)

200 sheets; max. 12.36"x17.52" (314mmx445mm) ~ min. 3.94"x5.83" (100mmx148mm)

#### CAUTION:

When the finisher capacity is exceeded due to the print quantity selected, remove the copied sets while the paper is exiting; otherwise mishandled paper will occur.

## Paper Information

### Paper in FN-104/FN-4 Finisher (Option) (continued)

#### FN-4 Finisher Booklet Tray

##### **Folding mode:**

Standard Paper Size	: 11"x17", 8.5"x14", 8.5"x11"R, A3, B4, A4R
Wide Paper Size	: 11"x17"W, 8.5"x11"WR, A3W, B4W, A4WR
Paper Weight	: 16 ~ 24 lb
Number of Folded Sheet	: 3 sheets max.
Booklet Tray Capacity	: Approx. 100 sheets max. 33 sets max. of 3-sheet-folded booklet (33 x 3 = 99 sheets) 50 sets max. of 2-sheet-folded booklet (50 x 2 = 100 sheets)

##### **Stapling & Folding mode:**

Standard Paper Size	: 11"x17", 8.5"x14", 8.5"x11"R, A3, B4, A4R
Wide Paper Size	: 11"x17"W, 8.5"x11"WR, A3W, B4W, A4WR
Paper Weight	: 16 ~ 24 lb
Number of Folded Sheet	: 16 sheets max. (using 20lb paper only) 15 sheets max. (a thick cover paper included)
Booklet Tray Capacity	: Approx. 100 sheets max. 20 sets max. of 5-sheet-folded booklet (20 x 5 = 100 sheets) 10 sets max. of 10-sheet-folded booklet (10 x 10 = 100 sheets) 6 sets max. of 16-sheet-folded booklet (6 x 16 = 96 sheets)

##### **CAUTION:**

Inside the Booklet mode outlet is the roller drive unit. DO NOT put your hand into the roller drive unit when removing folded or stapled & folded sheets; otherwise you may be injured.

### Paper in Cover Inserter A (Option)

#### Cover Inserter A

Standard Paper Size	: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", A3, B4, A4, A4R, B5, A5
Wide Paper Size	: 11"x17"W, 8.5"x11"W, 8.5"x11"WR, 5.5"x8.5"W, A3W, B4W, A4W, A4WR, B5W, A5W
Paper Weight in Cover Sheet Mode	: 13 ~ 110 lb (200g/m <sup>2</sup> thick paper)
Paper Weight in Manual Staple	: 16 ~ 24 lb

# Paper Information

## Paper in Trimming Unit (TMG-1) (Option)

### Trimming mode:

Paper Size	: 11"x17", 8.5"x14", 8.5"x11"R, A4R
Paper Weight	: 16 ~ 24 lb (One 46 ~ 110 lb sheet only used as a cover)
Number of Trimmed Sheet	: 3 sheets max. with Folding mode 16 sheets max. using 20 lb paper only with Stapling & Folding mode 15 sheets max. using one cover sheet with Stapling & Folding mode
Trimming Width	: 10 mm max.
Trimming Unit Tray Capacity	: Approx. 512 sheets max. 100 sets max. of 2~5-sheet-folded booklet 50 sets max. of 6~10-sheet-folded booklet 32 sets max. of 11~16-sheet-folded booklet

## Paper Weight Compatibility Chart

EDH	13 ~ 34 lb 13 ~ 110 lb (200g/m <sup>2</sup> thick paper) in 1-1 or 1-2 copying with SDF mode
Main Body Trays	All Trays: 16 ~ 24 lb Tray specified in Thick 1: 25 ~ 45 lb Tray specified in Thick 2: 46 ~ 110 lb (200g/m <sup>2</sup> thick paper) in 1-1 or 2-1 only
Large Capacity Cassette	16 ~ 24 lb LCC specified in Thick 1: 25 ~ 45 lb LCC specified in Thick 2: 46 ~ 110 lb (200g/m <sup>2</sup> thick paper) in 1-1 or 2-1 only
Automatic Duplex Unit	16 ~ 45 lb
Multi-Sheet Bypass Tray	16 ~ 45 lb
Finsher FN-104/FN-4	13 ~ 110 lb (200g/m <sup>2</sup> thick paper)
Cover Inserter A	13 ~ 110 lb (200g/m <sup>2</sup> thick paper)
Trimming Unit TMG-1	16 ~ 45 lb (One 110 lb sheet only used as a cover.)

NOTE: Reliability and copy quantity are not guaranteed for all Special papers. Use only paper that is recommended by us.



## Section 5: Copier Management

### Energy Saver Mode

- Auto Low Power
- Manual Low Power
- Auto Shut-Off
- Manual Shut-Off

### Entering an ECM Password

### Weekly Timer Function

- Timer Interrupt

### Counter List

- To Display Counter List
- To Print Counter List

# Copier Management


## Energy Saver Mode

There are two modes for the Energy saver as described below.  
Low power mode enables you to conserve energy by maintaining a lower fixing temperature during periods of copier inactivity.  
Shut-off mode conserves even more energy by partially turning OFF the power supply.

### Auto Low Power

This function automatically lowers the power after a specified period of copier inactivity. The Auto low power function can be set to 5 minutes/ 10 minutes/ 15 minutes/ 30 minutes/ 60 minutes/ 90 minutes/ 120 minutes/ 240 minutes. Initially, the mode is set to function after 15 minutes of copier inactivity. For the key operator setting, see p. 14-39. The [Energy Saver On/Off] LED goes on.

Basic Screen

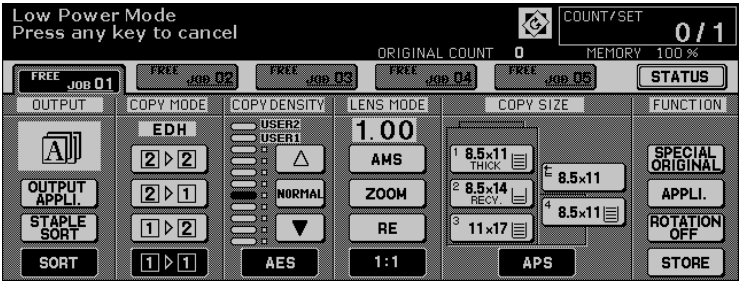

### Release Auto Low Power

Press any key on the control panel. The Auto low power will be released and the LCD screen recovers usual brightness.

# Copier Management

## Energy Saver Mode (Continued)

### Manual Low Power


Press [Energy Saver On/Off]. The Low Power Setting Screen will be displayed. Touch **YES** to activate the Low power mode.

NOTE: The Manual low power setting can be selected by Key operator. For the key operator setting, see p. 13-40 to p. 13-45. When selecting the Manual low power setting, the Manual shut-off setting is released.


When Manual low power is on, the following message will be displayed on the dimmed Basic Screen.

The [Energy Saver On/Off] LED goes on.

Low Power Setting Screen

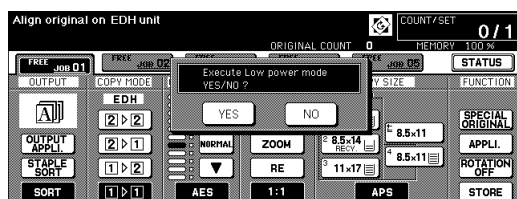

Basic Screen

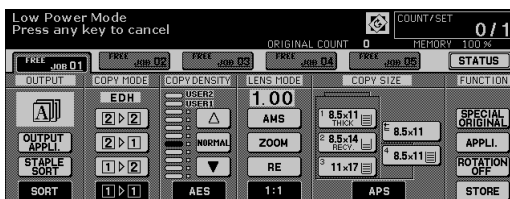

### Release Manual Low Power

Press any key on the control panel. The Manual low power will be released and the LCD screen recovers usual brightness.



# Copier Management

## Energy Saver Mode (continued)

### Auto Shut-Off

This function automatically shuts off the main power after a specified period of copier inactivity.

The Auto shut-off can be set for 30 minutes/ 60 minutes/ 90 minutes/ 120 minutes/ 240 minutes. Initially, Auto shut-off is set to function after 90 minutes of copier inactivity. For the key operator setting, see p. 14-39.

### Release Auto Shut-Off

Press [Energy Saver On/Off]. The copying operation will be available.


### Manual Shut-Off

Press [Energy Saver On/Off]. The Shut-Off Setting Screen will be displayed. Touch **YES** to activate the Manual shut-off mode.

NOTE: The Manual shut-off setting can be selected by Key operator. For the key operator setting, see p. 14-40 to p. 14-45. When selecting the Manual shut-off setting, the Manual low power setting is released.

The [Energy Saver On/Off] LED will light and all other LEDs and the LCD screen will be turned off.

Shut-Off Setting Screen

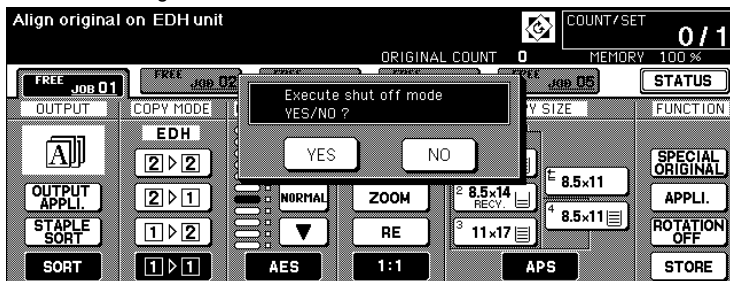


### Release Manual Shut-Off

Press [Energy Saver On/Off]. The Manual shut-off will be released, with the [Energy Saver On/Off] LED turned off and the LCD screen displayed.

# Copier Management

## Entering an ECM Password

An ECM password is required only when the Electronic Copy Monitor (ECM) feature is activated; a User Password is assigned; and “Enter E.C.M. password” is displayed on the touch screen.

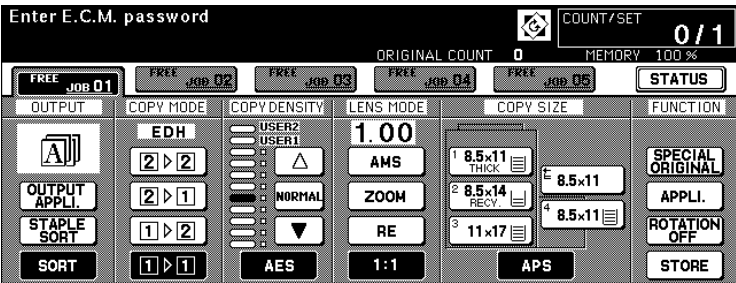

- 1 Enter your 8-digit ECM password, using the keypad.  
If the ECM password is invalid, the copier will reset to the Initial mode.  
In that case, enter the correct password; or contact the key operator.
- 2 Press [Start] once to display your current copy count and copy limit for 3 sec.

Current count / limit  
018888/025000

Ready to copy

When your copy count reaches the copy limit, the following message is displayed:

Copy limit reached  
025001/025000

- In that case, contact the key operator to reset your copy limit.
- 3 Make copying selections, and enter print quantity, as required.
  - 4 When all settings are acceptable, press [Start].

# Copier Management

## Weekly Timer Function


When a copier is under control of the weekly timer function, the Timer indicator on the right side of the control panel is lit.

Important: When the Timer indicator is lit, the copier will automatically be turned off. Do not turn it off by pressing power switch.

### Timer Interrupt

When the Timer indicator light is on and other indicators are off, copying is unavailable due to the weekly timer function.

However, copying is available by following procedure.

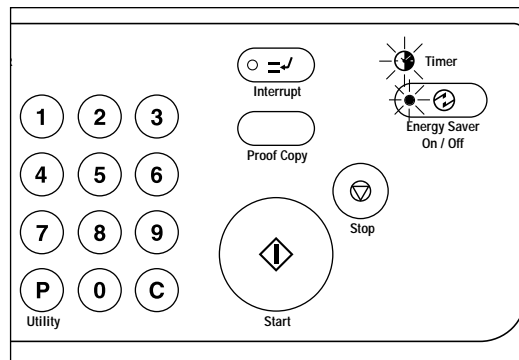

1 Press the [Energy Saver On/Off].

The Basic screen will be displayed along with the messages shown below.

Please wait  
Copier is warming up

Timer interrupt mode  
Enter password

NOTE: The timer interrupt password is not factory set and must be entered by the key operator (see p. 14-36 in "Section 14: Key Operator Mode"). In the event the timer interrupt password has not been entered by the key operator, the message shown in Step 3 will display instead.

# Copier Management

## Weekly Timer Function (continued)

- 2 Enter a 4-digit number timer interrupt password using the keypad on the control panel.  
If an invalid password is entered, continue by entering the valid 4-digit password.

Timer interrupt mode  
Enter password \*\*\*\*

- 3 Press the [Start].

Input copy time  
0 hour(s) 05 minute(s)

- 4 Enter a 1-digit hour (ex. 3 hour is 3) using the keypad on the control panel. (0 ~ 9)  
5 Press the [Start].

Input copy time is  
3 hour(s) 05 minute(s)

- 6 Enter a 2-digit minutes (ex. 7 minutes is 07) using the keypad on the control panel. (05 ~ 60)


Input copy time is  
3 hour(s) 07 minute(s)

- 7 Press the [Start].  
Copying is available until the set time is up.

Align original on EDH unit

- 8 When timer interrupt of the copier is finished, press the [Energy Saver On/Off].  
The Shut-Off Setting Screen will be displayed.

Shut-Off Setting Screen

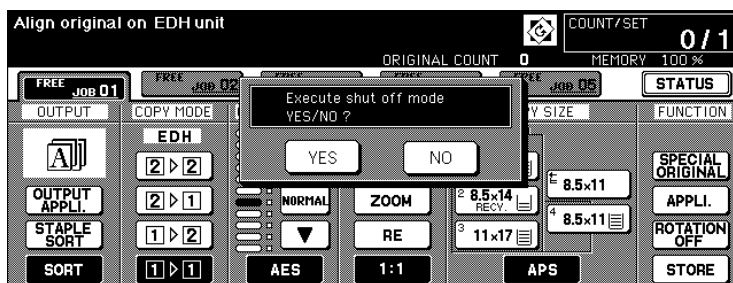


- 9 Touch **YES**. The copier returns to the OFF state and copying is disabled.

# Copier Management


## Counter List

This function allows you to view the current indication of the following items as a list on the touch panel: Total counter, Copier counter, Printer counter, Counter start date. Check the list, then print it from the Counter List Screen, if desired.

Control Panel

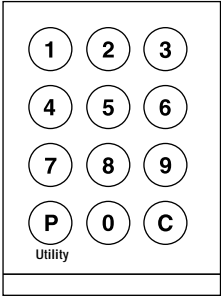

Counter List Screen

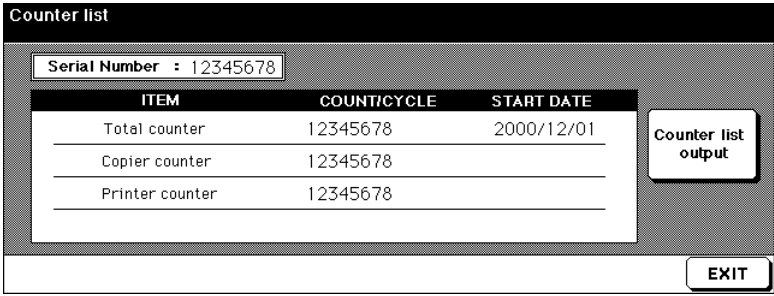

### To Display the Counter List

- 1 Press [P (Utility)] to display the Counter List Screen.
- 2 Touch **EXIT** to return to the Basic Screen.

### To Print the Counter List

- 1 Press [P (Utility)] to display the Counter List Screen.
- 2 Touch **Counter list output**. The Basic Screen will be displayed.
- 3 Touch the desired tray key to select the copy size.  
NOTE: Do not touch **APS**, or the Management list print mode will be released.
- 4 Press [Start]. The counter list will be printed out, and the Management list mode will be released.

## Section 6: Basic Operations

### How to Make a Basic Copy

The Basic Screen

### Copy Mode

Copy Mode Using EDH

1 ► 2 Copy Mode Using Platen Glass

### Copy Density

Automatic Exposure Selection (AES)

Manual Mode (Lighter, Normal, Darker)

Density Shift

### Lens Mode

Automatic Paper Selection (APS)

Automatic Magnification Selection (AMS)

Special Ratio Table

Selecting a Special Ratio for Non-Standard Paper

Preset and User Set Ratios

Zoom Mode

Vertical/Horizontal Zoom

### Copy Size

Programming Copy Size for UNIV. Key

Selecting Paper Type/Size for Multi-sheet Bypass Tray

### Reserve

Set Reserve Job

Job Status Screen

Mishandled Paper During the Reserve Setting

When Paper is Depleted for the Job in Progress

### Store Mode

Platen Store Mode

EDH Store Mode

### Rotation

90° Rotation

90° Rotation and APS

90° Rotation and AMS

180° Rotation


To Release Automatic Rotation

### Check Mode and Proof Copy

### Interrupt Mode

### Help Mode

### Using the Multi-Sheet Bypass Tray

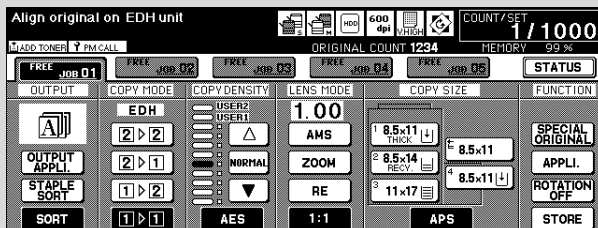

# Basic Operations


## How to Make a Basic Copy

### The Basic Screen

When power is turned on, the Basic Screen displays after warm-up; when Energy Saver mode is activated; when ECM password is set; when Key counter is used; or when Panel Reset mode is manually or automatically restored. All copying selections can be initiated from the Basic Screen, whether selected with screen keys or conventional keys, such as Program Memory.

When the Electronic Copy Monitor (ECM) is activated, a valid 8-digit ECM password, assigned by the key operator, must be entered before copying can be performed. See p. 5-5.

All of the settings in the Basic Screen, except Print Quantity, can be changed by the key operator in the Initial Setting Menu Screen.

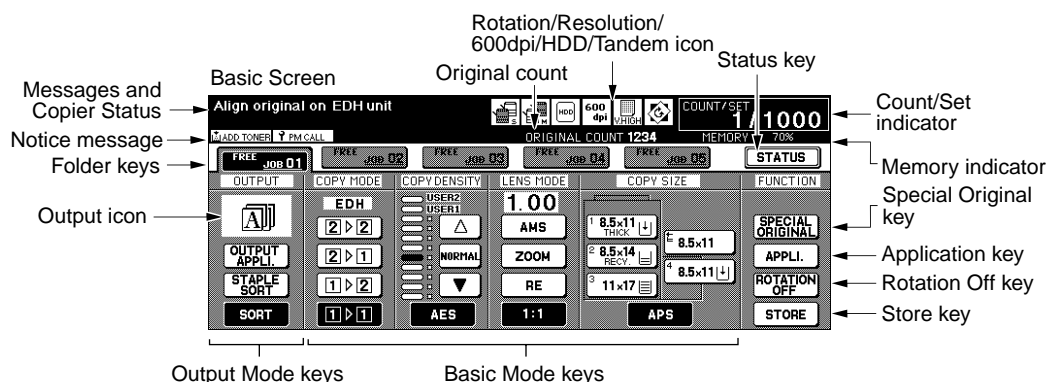

NOTE: The original count displayed in the center of the message area counts the original pages placed in the document handler as they are scanned. A duplex original as well as a simplex original counts 1. When scanning from the platen glass, the counter increases by 1 for every image scanned.

The popup menu appears on the Basic Screen to select the basic copying conditions.

NOTE: During the process of successive copying jobs, the message "Warming up" may be displayed in the message area of the Basic Screen to maintain the copy image quality.

# Basic Operations

## How to Make a Basic Copy (continued)

### The Basic Screen (continued)

- 1 Position the original document in the document handler or on the platen glass.
- 2 Press [Start] to start copying with initial settings; or make other selections, then press [Start].

### Basic Copy Settings

Copy mode	: see p. 6-4 ~ p. 6-6
Copy density	: see p. 6-7 ~ p. 6-9
Lens mode	: see p. 6-10 ~ p. 6-16
Copy size	: see p. 6-17 ~ p. 6-20
Reserve	: see p. 6-21 ~ p. 6-26

### Other Basic Copying Operations

Store mode	
Platen store mode	: see p. 6-27 ~ p. 6-28
EDH store mode	: see p. 6-29
Rotation	: see p. 6-30 ~ p. 6-33
Check mode and Proof copy	: see p. 6-34 ~ p. 6-36
Interrupt mode	: see p. 6-37 ~ p. 6-38
Help mode	: see p. 6-39 ~ p. 6-40
Using the Multi-sheet bypass tray	: see p. 6-41 ~ p. 6-42

**Output Mode with Finisher** : see the Section 7.

**Special Original Mode** : see the Section 8.

**Application Selections** : see the Section 9.

**Server Function** : see the Section 11.

**Tandem Mode** : see the Section 12.

NOTE: If the Basic Screen displays ADJUSTMENT MODE in the message area, this means that the machine was left in the service adjustment mode by a technician. If this occurs, please contact the technician and request that the mode be turned off; otherwise copying may be adversely affected.



# Basic Operations

## Copy Mode

### Copy Mode Specifications:

#### **Incompatible functions**

- 1-1: Folding/Stapling & Folding with Booklet; Chapter; Booklet
- 1-2: Transparency interleave
- 2-1: Folding/Stapling & Folding with Booklet; Chapter; Booklet; Repeat; AUTO layout; Non-image area erase, Server function
- 2-2: Repeat; Transparency interleave; Non-image area erase, Server function

#### **EDH capacity**

- 1-1, 1-2, 2-2, 2-1: 100 sheets  
(copying can be resumed after removing paper from bins)

#### **EDH original size requirements**

- 1-1, 1-2, 2-2, 2-1: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", A4R  
(8.27"x11.69", 210mmx297mm)

#### **Copy paper weight requirements**

- 20 lb~24 lb (14 lb~19 lb should be tested before it is used)

#### **Copy paper size requirements**

- 1-1, 1-2, 2-2, 2-1: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", 5.5"x8.5"R  
(5.5"x8.5" paper is available in lengthwise type feeding ( ☐ ) only.)

#### **Sort mode paper size (machine with FN-104/FN-4 Finisher)**

- 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, A4R (8.27"x11.69", 210mmx297mm) (5.5"x8.5" paper is available in lengthwise type feeding ( ☐ ) only.)

#### **Staple-Sort mode paper size (machine with FN-104/FN-4 Finisher)**

- 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, A4R (8.27"x11.69", 210mmx297mm)

#### **Folding or Stapling&Folding mode paper size (machine with FN-4 Finisher)**

- 11"x17", 8.5"x14", 8.5"x11"R, A4R (8.27"x11.69", 210mmx297mm)

#### **Cover Inserter paper size (FN-4 Finisher with Cover Inserter)**

- 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", A4, A4R (8.27"x11.69", 210mmx297mm)


# Basic Operations

## Copy Mode (continued)

### Copy Mode Using EDH

Before selecting the Copy Mode shown on the screen below, read specifications on the previous page and see Section 4 for information on positioning originals.

Basic Screen (with 1►2 mode selected)

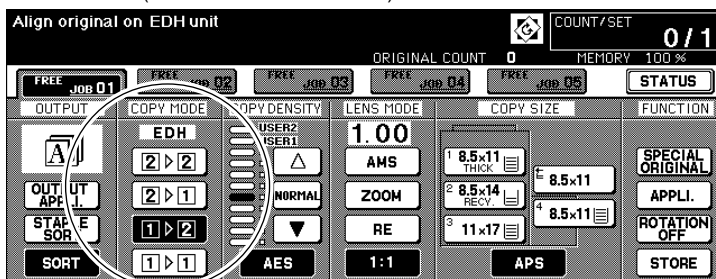

- 1 Touch the desired mode key on the Basic Screen: 1►1, 1►2, 2►1, or 2►2.  
A copy mode key will appear dimmed if it is incompatible with other selections made.
- 2 Position originals FACE UP in the document handler, as required.
- 3 When all settings are acceptable, press [Start].  
To cancel the mode, touch the desired Copy Mode key on the Basic Screen.

NOTE: When the finisher capacity is exceeded due to the print quantity selected, remove the copied sets while the paper is exiting; otherwise, mishandled paper will occur.


# Basic Operations

## Copy Mode (continued)

### 1►2 Copy Mode Using Platen Glass

When copying in 1-2 mode from the platen glass, use the Platen store mode. Refer to p. 4-2 for details on positioning originals.

Basic Screen (with 1►2 mode and store mode)

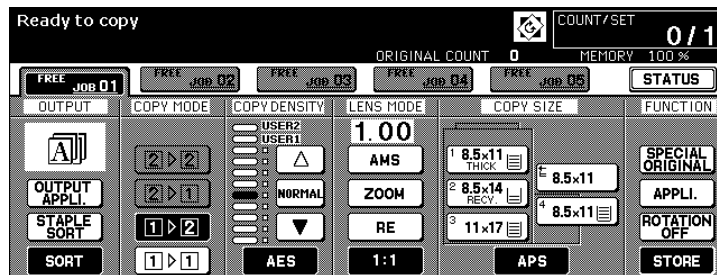

- 1 Open the document handler.
- 2 Place original FACE DOWN on the platen glass, then close the document handler.  
IMPORTANT: PLACE AND SCAN ORIGINALS IN REGULAR ORDER OF PAGINATION.
- 3 Touch **1►2**, then make the desired copying selections.  
The **STORE** key is automatically highlighted on the screen.
- 4 Press [Start] to scan the original.
- 5 Repeat steps 1, 2 and 4 until all originals are scanned.
- 6 Touch **STORE** to exit the store mode. The **STORE** key will return to the normal display.
- 7 Enter the print quantity using the keypad. The quantity entered will be displayed on the upper right message area of the Basic Screen.  
To change the print quantity, press [C] and re-enter the correct quantity.  
To delete the scanned data without printing, press [Stop], then touch **EXIT** on the popup menu to be sure the data is deleted.
- 8 Press [Start] to print.

# Basic Operations

## Copy Density



### Automatic Exposure Selection (AES)

AES operates with the initial settings. It detects the density of the original image and automatically selects the appropriate exposure for the copy.

### Manual Mode (Lighter, Normal, Darker)

Select manual copy density to adjust exposure (density) when originals are too light or too dark. Manual adjustments can be made in 9 levels simply by touching the lighter arrow ( $\Delta$ ), **NORMAL**, or darker arrow ( $\nabla$ ) key to highlight the desired exposure level indicator.

Basic Screen

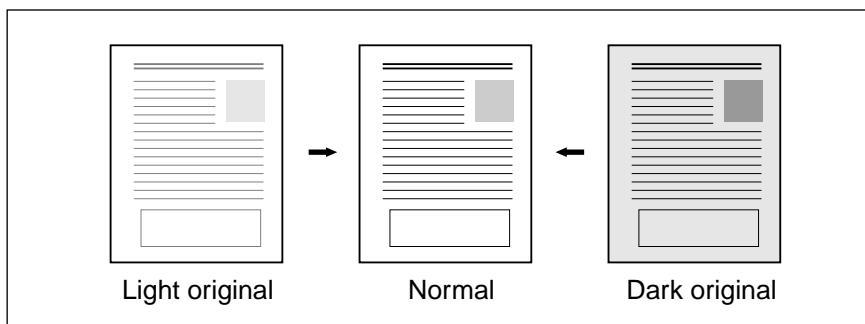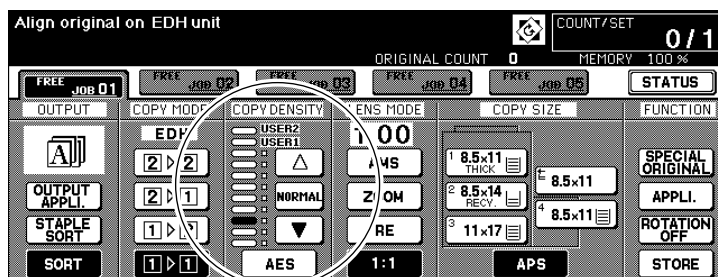


# Basic Operations

## Copy Density (continued)

### Density Shift

Density shift divides each of nine density levels into two levels of lighter and three levels of darker.

Density shift can be used in 4 density modes; Auto (Text/photo), Text, Photo, and Increase contrast.

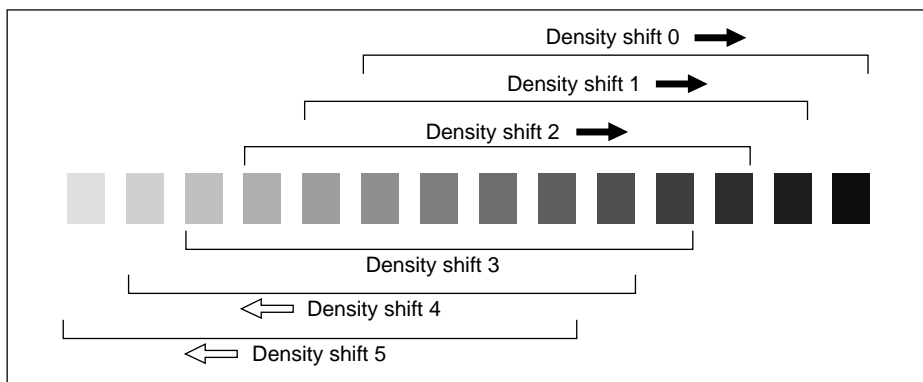

- 1 Touch **SPECIAL ORIGINAL** to display the Special Original Screen.
- 2 Select the density mode.  
To select the Auto (Text/Photo) mode, touch **AUTO** to highlight it, then press [P (Utility)].  
The following message will be displayed.

Density Shift (Text/Photo)  
2 (0 ~ 5)

To select the Text mode, touch **Text** to highlight it, then press [P (Utility)].  
The following message will be displayed.

Density Shift (Text)  
2 (0 ~ 5)

To select the Photo mode, touch **Photo** to highlight it, then press [P (Utility)].  
The following message will be displayed.

Density Shift (Photo)  
2 (0 ~ 5)

## Basic Operations

### Copy Density (continued)

### Density Shift (continued)

To select the Increase contrast mode, touch **Increase Contrast** to highlight it, then press [P (Utility)].

The following message will be displayed.

Density Shift (Increase contrast) 3 (0 ~ 5)
--

3 Press any key (from 0 - 5) using the keypad to determine the Density shift.

4 Press [Stop]. Density shift is determined.

# Basic Operations

## Lens Mode

### Automatic Paper Selection (APS)

APS detects the size of originals placed on the EDH or platen glass and automatically selects and feeds copy paper of the same size, or selects an appropriate size according to the magnification ratio selected.

If the appropriate copy paper is not loaded in any tray, no copying will be performed, and a message will prompt you to load the appropriate paper.

- ☐ Original sizes detected are: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", 5.5"x8.5"R  
Wide paper sizes cannot be detected.
- ☐ Incompatible: AMS

The relation of original size, magnification ratio and copy paper size is shown below.

Copy size		Original size						Copy size	
Magnification ratio	0.33 - 0.61	8.5x11R (8.5x11)	5.5x8.5	5.5x8.5	5.5x8.5	5.5x8.5	5.5x8.5R	0.33 - 0.61	Magnification ratio
	0.62 - 0.65	8.5x14	8.5x11R (8.5x11)	8.5x11 (8.5x11R)	8.5x11R (8.5x11)	5.5x8.5	5.5x8.5	0.62 - 0.65	
	0.66 - 0.77							0.66 - 0.77	
	0.78 - 0.79	11x17	11x17	11x17	11x17	8.5x11 (8.5x11R)	8.5x11R (8.5x11)	0.78 - 0.79	
	0.80 - 1.00							0.80 - 1.00	
	1.01 - 1.29							1.01 - 1.29	
	1.30 - 1.55	11x17	11x17	11x17	11x17	11x17	11x17	1.30 - 1.55	
	1.56 - 4.00							1.56 - 4.00	

( ): Rotation functions

# Basic Operations

## Lens Mode (continued)

### Automatic Magnification Selection (AMS)

AMS is one of the initial settings that functions when the EDH is used and Copy Size is selected manually.

- ☐ Incompatible: APS, Change magnification, Book Copy, Overlay, Non-Image Area Erase, Repeat, AUTO Layout, Storing image in Overlay Memory

An appropriate reduction or enlargement ratio will be selected automatically and applied to the image on the copy size. AMS automatically calculates and selects the correct ratio.

Wide paper size can be specified when AMS functions. In this case, the same magnification ratio as that of the standard size will be selected automatically.

AMS ratios are shown in the table below.

AMS TABLE		ORIGINAL SIZE						
		11"x17"	8.5"x14"	8.5"x11"	8.5"x11"R	5.5"x8.5"	5.5"x8.5"R	A4
COPY SIZE	11"x17"/ 11"x17"W	1.00 (0.65)	1.21	1.00	1.29	1.29	2.00	0.94
	8.5"x14"	0.77 (0.50)	1.00	0.77	1.00	1.00	1.55	0.73
	8.5"x11"/ 8.5"x11"W	0.50 (0.65)	0.61 (0.79)	1.00	0.77 (1.00)	1.29	1.00 (1.29)	0.94
	8.5"x11"R/ 8.5"x11"WR	0.65	0.79	0.77 (1.00)	1.00	1.00 (1.29)	1.29	0.73 (0.94)
	5.5"x8.5"/ 5.5"x8.5"W	0.33 (0.50)	0.39 (0.61)	0.65	0.50 (0.65)	1.00	0.65 (1.00)	0.67 (0.47)
	5.5"x8.5"R/ 5.5"x8.5"WR	0.50 (0.33)	0.61 (0.39)	0.50 (0.65)	0.65	0.65	1.00 (0.65)	0.47 (0.64)
	A4/A4W	0.49 (0.69)	0.59 (0.84)	0.97 (0.75)	0.75 (0.97)	1.38	0.97 (1.38)	1.00 (1.71)


( ): Rotation functions



Basic Operations

Lens Mode (continued)

Special Ratio Table

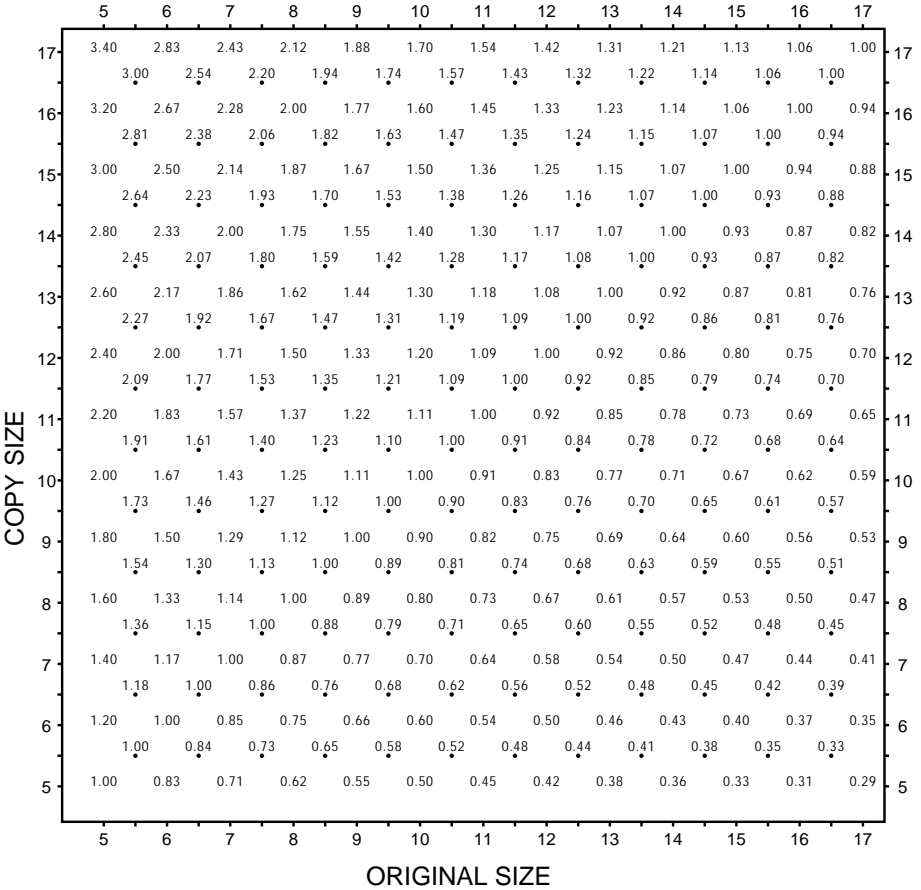

# Basic Operations

## Lens Mode (continued)

### Selecting a Special Ratio for Non-Standard Paper

To determine reduction or enlargement ratios when using non-standard paper sizes, refer to the Special Ratio Table on the previous page and follow the procedure below.

#### ORIGINAL-COPY WIDTH


FIRST, LOCATE THE ORIGINAL WIDTH ON THE HORIZONTAL AXIS.  
THEN, LOCATE THE COPY WIDTH ON THE VERTICAL AXIS.  
FIND THE RATIO ON THE TABLE WHERE THESE TWO VALUES MEET.

#### ORIGINAL-COPY LENGTH

FIRST, LOCATE THE ORIGINAL LENGTH ON THE HORIZONTAL AXIS.  
THEN, LOCATE THE COPY LENGTH ON THE VERTICAL AXIS.  
FIND THE RATIO ON THE TABLE WHERE THESE TWO VALUES MEET.

The ratio you use must fall within the available magnification range of 0.33~4.00. Use the smaller ratio for reduction and use the larger ratio for enlargement.

Basic Screen with the popup menu for zoom setting

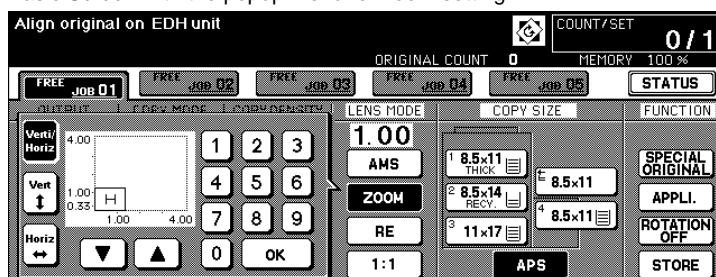

- 1 First, determine the correct ratio, as described above.
- 2 Touch **ZOOM** on the Basic Screen to display the popup menu for setting the zoom ratio.
- 3 Use the keypad on the popup menu to enter the desired reduction or enlargement ratio in 3 digits; or use arrows to scroll to the desired ratio.
- 4 When the desired ratio is specified, touch **OK** to complete the setting.  
To cancel the setting, touch **ZOOM** again, select the desired ratio, then touch **OK**.
- 5 Position original(s) **FACE DOWN** on the platen glass or **FACE UP** in the document handler, as required.
- 6 When all other setting are acceptable, press [Start].

# Basic Operations

## Lens Mode (continued)


### Preset and User Set Ratios

Use the Preset and User Set ratios to increase or decrease magnification in fixed amounts.

If required, the eight initially set Preset ratios shown below can be adjusted in the Key Operator mode. In addition, three User Set ratios are adjustable by the key operator. All ratios remain effective until they are replaced.

- ☐ 8 Preset ratios: 0.50, 0.65, 0.77, 0.93, 1.21, 1.29, 1.55, and 2.00
- ☐ 3 User Set ratios: Programmable by key operator and selected from 0.33~4.00
- ☐ To copy 5.5"x8.5" originals to 5.5"x8.5" copy paper, select 5.5"x8.5" Copy Size, then select 1.00 magnification.

Basic Screen with the popup menu for preset ratio setting

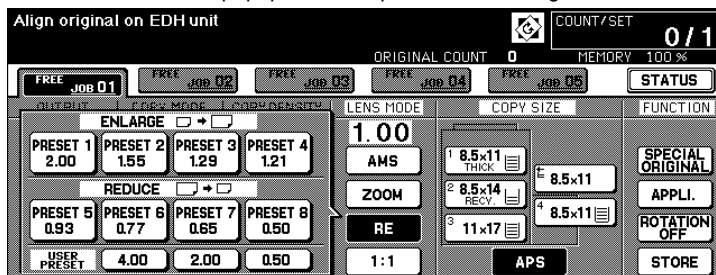

- 1 Touch **RE** to display the popup menu for selecting the desired preset/userset ratio.
- 2 Select the desired magnification. The selected key is highlighted, and the popup menu goes out automatically, and then the selected ratio will be displayed on the Basic Screen.  
To cancel the setting, touch **RE** again, then select the desired ratio.
- 3 Position original(s) **FACE DOWN** on the platen glass or **FACE UP** in the document handler, as required.
- 4 When all settings are acceptable, press [Start].

# Basic Operations

## Lens Mode (continued)

### Zoom Mode


Use the Zoom mode to reduce or enlarge the copied original image in 1% increments.

□ Zoom range: 0.33~4.00

0.33~2.00 in 600 dpi mode and Storing image in Overlay Memory

0.33~4.00 in Resolution (very high)

Basic Screen with the popup menu for zoom setting

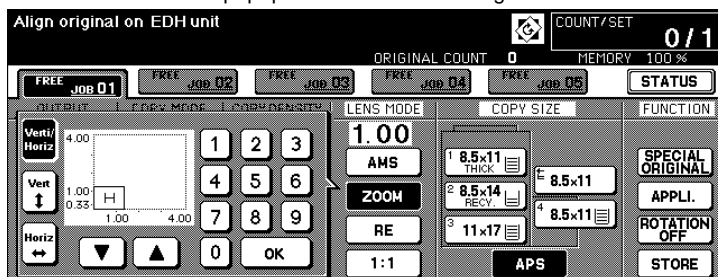

- 1 Touch **ZOOM** on the Basic Screen to display the popup menu for setting the zoom ratio.
- 2 Use the keypad on the popup menu to enter a 3-digit zoom ratio, or use arrows to scroll to the desired ratio.
- 3 Touch **OK** to complete the setting and return to the Basic Screen.  
To cancel the setting, touch **ZOOM** again, select the desired ratio, then touch **OK**.
- 4 Position original(s) **FACE DOWN** on the platen glass or **FACE UP** in the document handler, as required.
- 5 When all settings are acceptable, press [Start].

# Basic Operations


## Lens Mode (continued)

### Vertical/Horizontal Zoom

Use the Vertical/Horizontal zoom mode to reduce or enlarge vertical and horizontal dimensions, independently.

- ❑ Vertical/Horizontal zoom range: 0.33~4.00
  - 0.33~2.00 in 600 dpi mode and Storing image in Overlay Memory
  - 0.33~4.00 in Resolution (very high)

Basic Screen with the popup menu for zoom setting

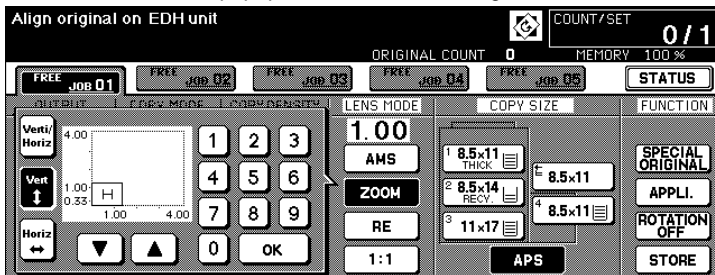

- 1 Touch **ZOOM** on the Basic Screen to display the popup menu for setting the zoom ratio.
- 2 Touch **Vert** to select a vertical ratio.
- 3 Use the keypad on the popup menu to enter a 3-digit vertical zoom ratio, or use arrows to scroll to the desired ratio.
- 4 Touch **Horiz** to select a horizontal ratio.
- 5 Use the keypad to enter a 3-digit horizontal zoom ratio, or use arrows to scroll to the desired ratio.
- 6 Touch **OK** to complete the setting.  
To cancel the setting, touch **ZOOM** again to display the popup menu. Specify the desired ratios, then touch **OK**.
- 7 Position original(s) **FACE DOWN** on the platen glass or **FACE UP** in the document handler, as required.
- 8 When all settings are acceptable, press [Start].

# Basic Operations

## Copy Size


The tray selection keys below COPY SIZE are used to select a specific paper tray. When a specific tray is selected, the APS key will go out and the AMS key will be highlighted. The copy size may require a ratio adjustment. When using the EDH with Initial settings, a ratio will be selected automatically.

Tray locations correspond to main body (tray 1, 2, 3), LCC (tray 4), and Multi-sheet bypass tray. Paper types, such as *Normal*, *Thick 1*, *Thick 2*, *Thin*, *TAB PAPER*, *User*, *Recycle*, *Color*, *Special*, *Fine*, *Seal* may be specified on some trays by the key operator for information only, but paper types cannot be detected by the machine.


NOTE: Do not load paper type other than that specified, otherwise machine trouble may be caused.

- ☐ When a selected tray is empty an out-of paper icon will flash on the tray key, along with a message to load paper in the empty tray.
- ☐ In 1-2 or 2-2 copying, the tray specified as Thick 2 cannot be used.
- ☐ If a tray size is changed, the tray key on the Basic Screen displays UNIV. Touch the UNIV. key to display the Universal Tray Size Selection Screen, then select the new paper size.
- ☐ When the BYPASS key is touched and highlighted, the PAPER TYPE/SIZE key appears above the BYPASS key. Touch the key to display the Paper Type/Size Setting Screen, then specify the type and size of the special paper to be loaded on the Multi-sheet bypass tray.
- ☐ Incompatible Basic Copying Conditions with AMS: APS, Change magnification
- ☐ Incompatible Special Original with AMS: None
- ☐ Incompatible Applications with AMS: Book Copy, Non-Image Area Erase, Repeat, AUTO Layout, Overlay

Basic Screen

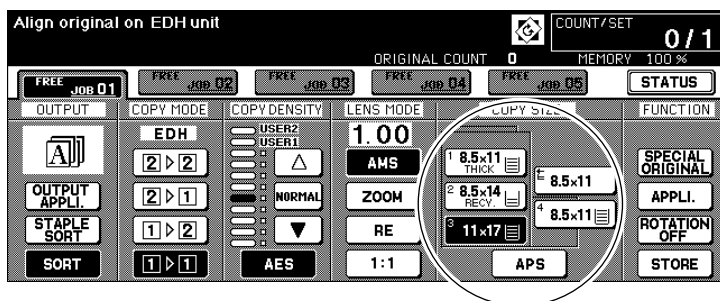

Basic Screen

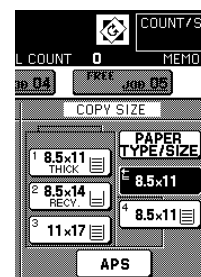


- 1 Touch the desired tray key. **APS** will go out, and **AMS** will be highlighted. When selecting **BYPASS**, see p. 6-18 ~ p. 6-20. To restore the **APS** mode, touch **APS**. **AMS** will go out, and **APS** will be highlighted.  
NOTE: When "UNIV." is displayed on the tray key as the copy size indication, program the copy size as described in the next page.
- 2 Position original(s) FACE DOWN on the platen glass or FACE UP in the document handler, as required.
- 3 When all settings are acceptable, press [Start] from the Basic Screen.

# Basic Operations


## Copy Size (continued)

### Selecting Paper Type/Size for Multi-sheet Bypass Tray

- 1 Open the Multi-sheet bypass tray, and load the copy paper on the tray. See p. 6-41 ~ p. 6-42 for further details.

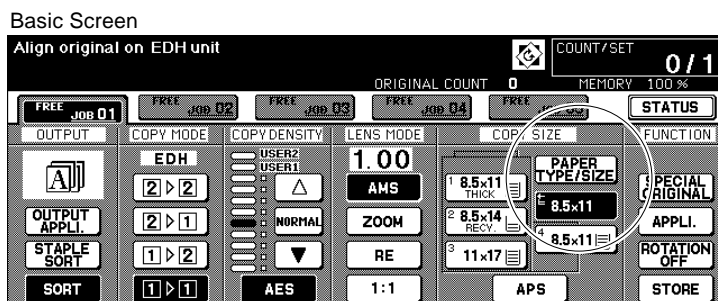

- 2 Touch **BYPASS**, then touch **PAPER TYPE/SIZE**. The Paper Type/Size Selection Screen will be displayed.
- 3 Touch the desired key.

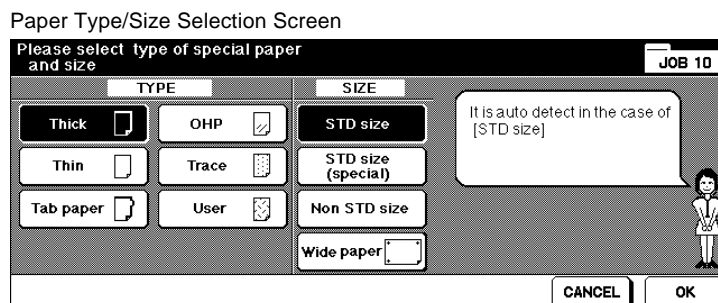


- When **Thick**, **Thin**, **Tab paper**, **OHP**, **Tracing**, or **User** is highlighted, a printing job will be performed conforming to the selected paper type. If no paper type indication is needed, touch the highlighted key to clear the selection in the TYPE area. The selection will be reflected on the Basic Screen when restored.
- NOTE:
- When selecting Thick, THICK 1 will be displayed on Bypass key of the Basic Screen.
  - When selecting Tab paper, AMS is automatically selected. The STD size (special) and Non STD size cannot be selected, and the loading copy paper cannot be fed in 1-2 or 2-2 copying.

## Basic Operations

### Copy Size (continued)


#### Selecting Paper Type/Size for Multi-sheet Bypass Tray (continued)

Paper Type/Size Selection Screen

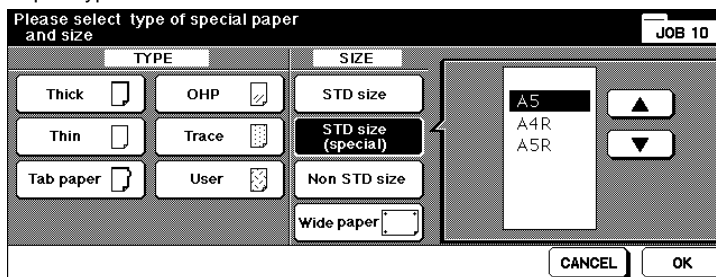

- When **STD size (special)** is highlighted, the popup menu will appear. Use arrows to scroll to the desired size. In this case, both the copy size and type selected will be indicated on the Basic Screen.

Paper Type/Size Selection Screen

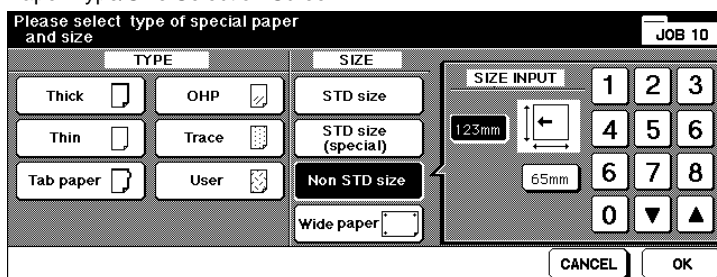

- When **Non STD size** is highlighted, the popup menu will appear. To set the vertical size, touch the vertical size key to highlight it, then use the keypad on the popup menu to enter the vertical size, or use arrows to scroll to that number. To set the horizontal size, touch the horizontal size key to highlight it, then use the keypad on the popup menu to enter the horizontal size, or use arrows to scroll to that number. In this case, the **Special** indication and paper type selected will be displayed on the Basic Screen, but the actual size information cannot be displayed.



## Basic Operations

### Copy Size (continued)

### Selecting Paper Type/Size for Multi-sheet Bypass Tray (continued)

Paper Type/Size Selection Screen

Please select type of special paper and size

JOB 10

TYPE		SIZE	
Thick	OHP	STD size	SELECT SIZE A5W A4W A3W 5.5x8.5W 8.5x11W Input size 123mm X 65mm
Thin	Trace	STD size (special)	
Tab paper	User	Non STD size	
		Wide paper	

IMAGE POS.  
Lead edge  
Rear edge

CANCEL OK

Paper Type/Size Selection Screen

Please select type of special paper and size

JOB 10

TYPE		SIZE	
Thick	OHP	STD size	SIZE INPUT 123mm 65mm Select size
Thin	Trace	STD size (special)	
Tab paper	User	Non STD size	
		Wide paper	

1 2 3  
4 5 6  
6 7 8  
0

CANCEL OK

- When **Wide size paper** is highlighted, the popup menu will appear. Use arrows to scroll to the desired wide size, then specify the precise dimensions of paper to be used, following the procedure below.
    - Touch **Input size**. The Size Input popup menu will be displayed.
    - Touch the vertical size key to highlight it, then use the keypad on the popup menu to enter the vertical size, or use arrows to scroll to that number. The entered number should fall within the range from the vertical size of the standard size corresponding to the selected wide size to the maximum of 314mm.
    - Similarly, touch the horizontal size key to highlight it, then use the keypad on the popup menu to enter the horizontal size, or use arrows to scroll to that number. The entered number should fall within the range from the horizontal size of the standard size corresponding to the selected wide size to the maximum of 445mm.
    - Touch **Select size** to return to the Select Size popup menu.
- Touch **Lead edge** or **Rear edge** to select the image starting position.

4 Touch **OK** to return to the Basic Screen.

# Basic Operations


## Reserve

### Set Reserve Job


The Reserve function allows you to set up a new job while a current (scan/print) job is in process. When the current job is finished, the Reserve job starts printing immediately. The **FREE JOB** key on the screen is touch sensitive and active only when another job is in progress; otherwise it appears grayed out.

- ☐ Job settings: Max. 5 (current job plus 4 reserve jobs)
- ☐ The reserve job is available to be set after the copier starts to scan the current job. When setting more than one reserve job, the next reserve job setting will be available after the copier starts to scan for the previous reserve job.  
When the current job is under Store mode, Image insert, or Book copy, the reserve job setting will be available after the copier starts to print the current job.
- ☐ If certain conditions occur while a reserve job is being set, such as activation of Interrupt mode, mishandled paper, or depletion of paper, the current printing job will cease and the FREE JOB indicator on the screen will be replaced by INTERRUPT, JAM or ADD PAPER, as appropriate. Perform the required measure for the situation at hand.
- ☐ The order of the reserve jobs can be altered on the Job Status Screen.
- ☐ The reserve jobs can be deleted on the Job Status Screen.
- ☐ Incompatible Basic Copy Conditions: Interrupt copying, Scanning in Store mode, Proof copy
- ☐ Incompatible Special original: Resolution (Very High)
- ☐ Incompatible Applications: Program Job, Overlay

Basic Screen: reserve job available

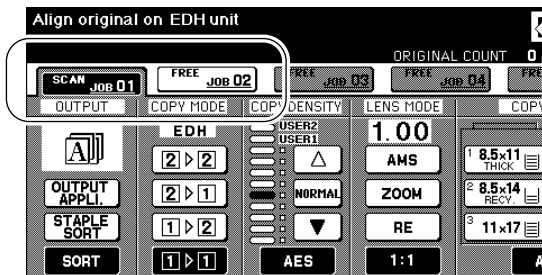

Reserve Job Setting Screen

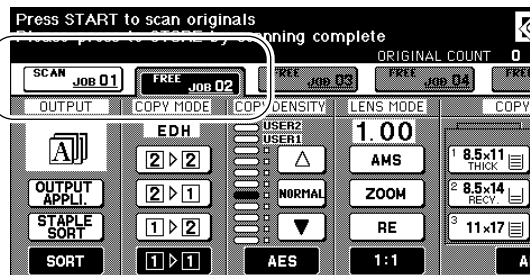

# Basic Operations

## Reserve (continued)

### Set Reserve Job (continued)

The **FREE JOB** key may be used to set the Reserve job only when another job is in progress; otherwise the key appears grayed out. Set the Reserve job as shown below.

- 1 Touch **FREE JOB** to display the Reserve Job Setting Screen.
- 2 Set the desired copying conditions for the reserve job.  
When the Reserve Job Setting Screen is displayed, all keys on the LCD and Control panel will function for the reserve job.  
NOTE: When trouble occurs while setting the reserve job, the **PRINT** or **SCAN JOB** key changes to **JAM/ADD PAPER** key on the Basic Screen. See p. 6-25 to p. 6-26.
- 3 Position original(s) FACE UP in the EDH or FACE DOWN on the platen glass after completing to scan for the current job. The message "Ready to copy" will be displayed on the Basic Screen.
- 4 Press [Start]. The original for the reserve job will be scanned.  
NOTE: When the message "Please load size \*\* paper in any tray except tray #" is displayed, load the specified paper into the tray.
- 5 When the scanning for the reserve job is completed, the Basic Screen for the current printing job is restored.
- 6 Repeat step 2 to 4 to reserve more than one job.
- 7 Copying on the reserve job will start automatically after completing the current job.

# Basic Operations



## Reserve (continued)

### Job Status Screen

Touch the **STATUS** key on the Basic Screen to display the Job Status Screen (see below). The Job Status Screen allows you to perform the following functions.

- Confirm machine status
- Change order of reserve job
- Delete reserve job
- View previous job list
- View tray information and machine status of the other machine in tandem mode

To return to the Basic Screen, touch **OK** on the Job Status Screen.

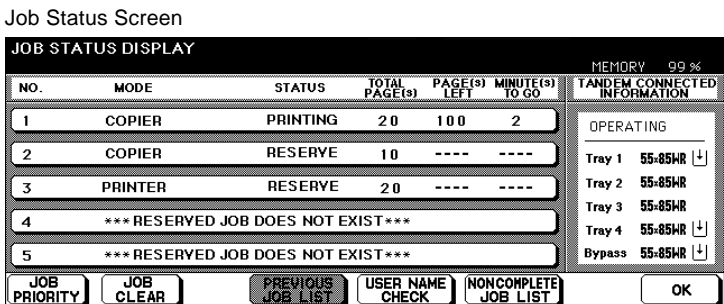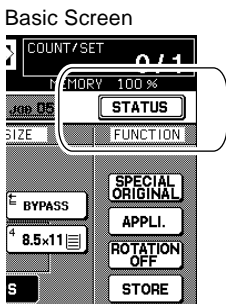

- NO. :** Displays the No. (01-99) for each job assigned to the machine.
- MODE:** Displays the machine's current mode of operation. Five modes are listed below.
- STATUS:** COPIER / RESERVE COPIER / PRINTER / RESERVE PRINTER / CONTROLLER  
Displays the current status of the machine for each job.

[Indication]	[Meaning]
READY	: Ready to use in each mode
WAITING	: Warming up in each mode
SCANNING	: Scanning original(s) in copy mode
INTERRUPT	: Interrupting the previous job
ERROR	: Error in each mode
PRINTING	: Printing in each mode
NO PAPER	: No paper in copy/print mode
STOP	: Stop in each mode
NEXT PRINT	: Waiting for the completion of the previous operation in copy/print mode
INITIALIZING	: Initializing for controller
READY TO RESERVE	: Ready to reserve
RECEIVING	: Receiving the data for controller

**TOTAL PAGE(s):** Displays the number of scanned pages for each job. (0 to 9999)

# Basic Operations

## Reserve (continued)

### Job Status Screen (continued)

- PAGE(s) LEFT: Displays the remaining copy count of the job.  
0 to 9999 (The number exceeding 9999 will be displayed as 9999↑.)  
Copy count = No. of scanned pages x Print quantity
- MINUTE(s) TO GO: Displays the time (in minutes) required for completing the job.  
Exceeding 99 minutes: 99↑  
Shorter than 1 minute: <1
- Other: The following message will be displayed on the second bar when the reserved job does not exist.

RESERVED JOB DOES NOT EXIST

- TANDEM CONNECTED INFORMATION:  
Displays the tray information and current status of the other machine when two copiers are connected and operate in tandem mode.
- [Information]  
Paper size loaded in each tray  
Paper out indicator (when depleted in the tray)  
Current status: OPERATING / STOP / NO PAPER / JAM / ERROR

### To change the order of reserve job

- 1 Touch the desired reserve job key to highlight it.
- 2 Touch **JOB PRIORITY**. The highlighted reserve job is advanced by one in printing order unless the job preceding the selected one is already in progress.
- 3 To return to the Basic Screen, touch **OK** on the Job Status Screen.

### To clear reserve job

- 1 Touch the desired reserve job key to highlight it.
- 2 Touch **JOB CLEAR**.
- 3 The Job Clear Setting Screen will be displayed. Touch **YES**. The highlighted reserve job is cleared.
- 4 To return to the Basic Screen, touch **OK** on the Job Status Screen.

### To display previous job list

- 1 Touch **PREVIOUS JOB LIST** to display the Previous Job List Screen.
- 2 Touch ↓ to scroll to the next page.  
Up to 16 previous jobs (4 pages) can be displayed. Touch ↑ to return to the previous page.
- 3 To return to the Job Status Screen, touch **OK**.
- 4 To return to the Basic Screen, touch **OK** on the Job Status Screen.

Previous Job List Screen

PREVIOUS JOB LIST DISPLAY					MEMORY 99%	
NO.	MODE	STATUS	TOTAL PAGE(S)	PAGE(S) COMPLETE	CONTROLLER INFORMATION	
1	COPIER	COMPLETE	20	100		
2	PRINTER	COMPLETE	10	10		
3	COPIER	COMPLETE	20	20		
4	***RESERVE JOB DOES NOT EXIST***					
<div><div>↓</div><div>↑</div></div>					OK	


## Basic Operations

### Reserve (continued)

#### Mishandled Paper During the Reserve Setting

If a misfeed occurs with the print/scan job in progress while you are setting a reserve job, the **PRINT/SCAN JOB** key on the screen will change to **JAM** key.

Basic Screen

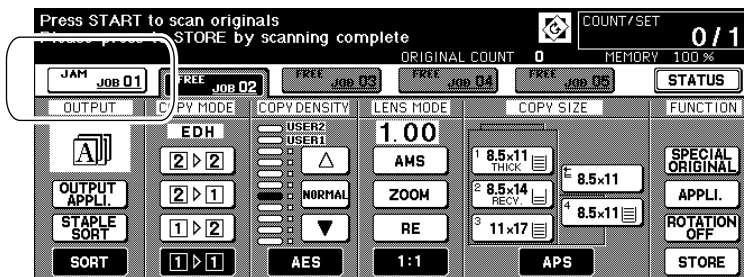

If originals of the reserve job are already scanned when the misfeed occurs, the reserve job printing can be performed after the jam is cleared and the cleared job is completed.

- 1 Touch **JAM** to display the Jam Position Screen.
- 2 To view Help Screen instructions, touch **GUIDE** and remove paper/original.
- 3 The **JAM** will change to **PRINT JOB** or **SCAN JOB**.
- 4 Press [Start]. The print/scan job will be reprocessed.
- 5 Touch **FREE JOB** to continue setting the reserve job.


If scanning is not completed when the misfeed occurs, but reserve settings has already been made, the reserve job can be performed after the cleared job is completed. Simply insert the original document and press [Start].

## Basic Operations

### Reserve (continued)

#### When Paper is Depleted for the Job in Progress

If the paper supply for a print job in progress becomes depleted while you are setting a Reserve job, the **PRINT JOB** key on the screen will change to **ADD PAPER** key (blinking).

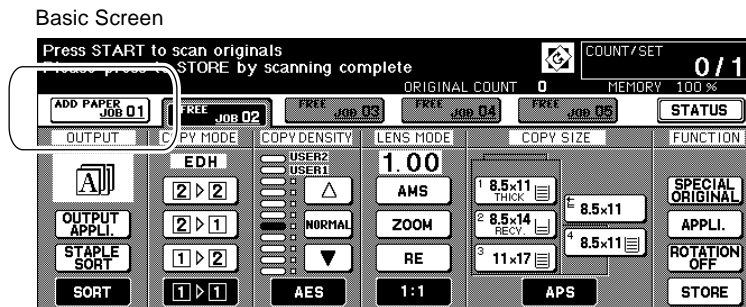

In this case, you can still continue the reserve job setting.

- 1 Touch **ADD PAPER** to display the Basic Screen for the print job.
- 2 Confirm the empty tray and supply the paper.
- 3 Press [Start]. The print job will be reprocessed.
- 4 Touch **FREE JOB** to continue setting the reserve job.

# Basic Operations

## Store Mode

Store mode allows you to scan multiple originals by touching the **STORE** key on the Basic Screen after setting copying conditions, and then outputting the complete set by pressing [Start].

Platen store mode: scan originals from the platen glass.

EDH store mode: scan originals from the EDH.


## Platen Store Mode

Use Platen store mode for originals that cannot be fed through the document handler due to thickness, size or condition.

When scanning thick originals that require keeping the document cover open, select Non-image area erase to prevent exposure of the glass area around the border of the original. This feature ensures a clean copy result and reduces toner consumption. The Non-image area erase mode automatically releases after the original for which it is selected is scanned. Additional images may be scanned.

- ☐ Incompatible Basic copying conditions: None
- ☐ Incompatible Special Originals: None
- ☐ Incompatible Applications: Storing image in Overlay Memory

Basic Screen

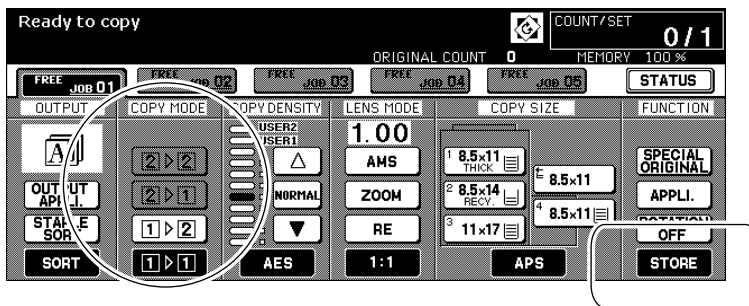

- 1 Open the document handler.
- 2 Place original FACE DOWN on the platen glass, then close the document handler.  
IMPORTANT: PLACE AND SCAN THE ORIGINALS IN REGULAR ORDER OF PAGINATION.
- 3 Make the desired copying selections, and select 1-1 or 1-2 copy mode.
- 4 Touch **STORE** on the Basic Screen to highlight it.
- 5 Press [Start] to scan the original.
- 6 Repeat steps 1, 2 and 5 until all originals are scanned.
- 7 Touch **STORE** to exit the Store mode.



# Basic Operations

## Store Mode (continued)

### Platen Store Mode (continued)

8 Enter the print quantity, using the keypad. The entered quantity will be displayed on the upper right message area of the Basic Screen.

To change the print quantity, press [C] and re-enter the correct quantity.

To delete the scanned data without printing, press [Stop], then touch **CANCEL** on the popup menu to ensure that you delete the data.

9 Press [Start]. The copier starts the printing job.

# Basic Operations


## Store Mode (continued)

### EDH Store Mode

Use this feature to scan more than 100 original into memory from the EDH. Use this function in conjunction with the Reserve function to increase efficiency of the copying job.

- ☐ Incompatible Basic Copying Conditions: None
- ☐ Incompatible Original Scanning Conditions: Resolution (Very high)
- ☐ Incompatible Applications: Image insert, Book copy, Storing image in Overlay Memory

Basic Screen

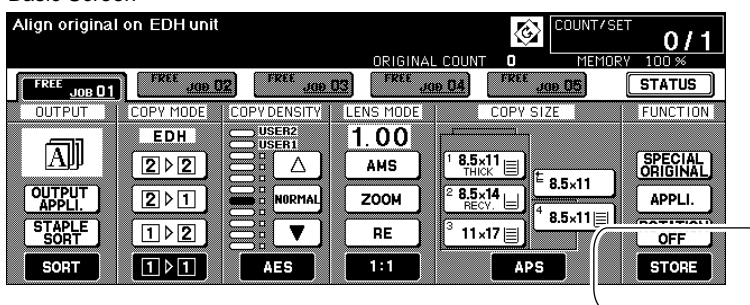

- 1 Touch **STORE** on the Basic Screen to highlight it.
- 2 Make the desired copying selections.
- 3 Position originals **FACE UP** on EDH.  
If the number of originals exceeds 100, divide them into blocks not exceeding 100 sheets and load them from the block with the first page.
- 4 Enter the print quantity, using the keypad. The entered quantity will be displayed on the upper right message area of the Basic Screen.  
To change the print quantity, press [C] and re-enter the correct quantity.
- 5 Press [Start] to scan the originals.
- 6 Repeat steps 3 and 5 until all originals are scanned.  
To delete the scanned data without printing, press [Stop], then touch **CANCEL** on the popup menu to ensure that you delete the data.
- 7 Touch **STORE** to exit the Store mode.
- 8 Press [Start]. The copier starts the printing job.

# Basic Operations

## Rotation


### 90° Rotation

This function allows you to utilize APS or AMS and copy the original size documents described below onto size 8.5"x11" or 5.5"x8.5", irrespective of the copy paper feeding direction. By default, Rotation requires APS or AMS to function; however, the key operator may set the function to always function or when APS, AMS or reduce functions. See p. 14-40 to p. 14-45.


- ☐ Rotation copying uses memory.
- ☐ Copy size: 8.5"x11", 8.5"x11"R, 5.5"x8.5"R (lengthwise type feeding ( ☐ ) only)
- ☐ Original size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", 5.5"x8.5"R
- ☐ Incompatible Basic Copying Condition: V/H zoom, Rotation Sort, Rotation Group
- ☐ Incompatible Special Original: Resolution (Very high)
- ☐ Incompatible Applications: Book Copy, Non-Image Area Erase, Repeat except 2/4/8 Repeat, AUTO Layout, Storing image in Overlay Memory

### 90° Rotation and APS

In APS, the copier automatically copies onto the same paper size as the original(s) in 1:1. For example, when size 8.5"x11" copy paper is loaded in the tray in lengthwise orientation and the copier detects that the original is placed in crosswise orientation, Rotation and APS function together to rotate the original image by 90° and output the 8.5"x11" copy to match the direction of the copy paper.

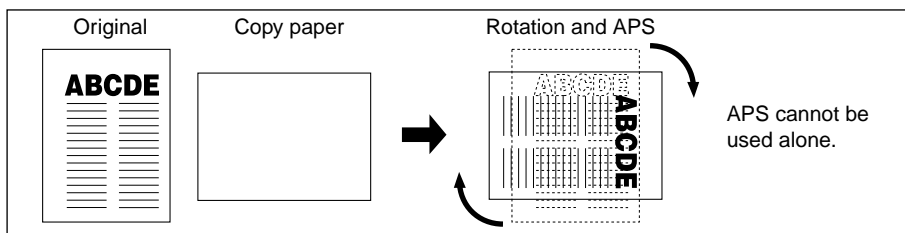

Similarly, when size 8.5"x11" copy paper is loaded in the tray in crosswise orientation and the copier detects that the original is placed in lengthwise orientation, Rotation and APS function together to rotate the original image by 90° and output the 8.5"x11" copy to match the direction of the copy paper.

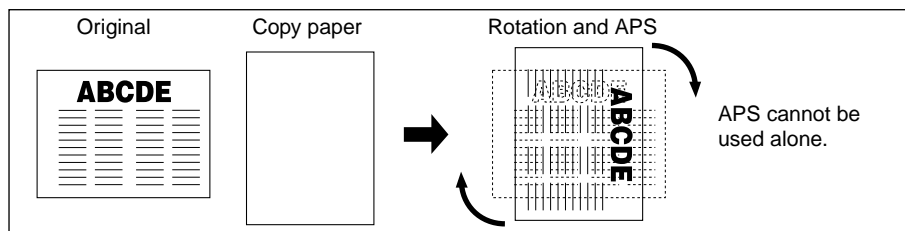


## Basic Operations


### Rotation (continued)

#### 90° Rotation and AMS

For example, when size 8.5"x11" copy paper is loaded in the tray in lengthwise orientation and the copier detects that the original is placed in crosswise orientation, Rotation (if required) rotates the original image by 90° and the copy is made with the appropriate AMS ratio to fit the crosswise style of the copy paper.

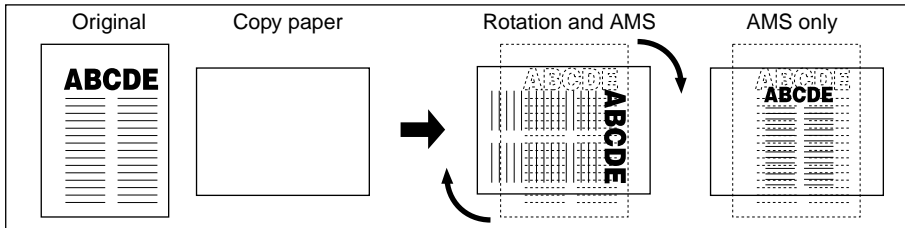

Similarly, when size 8.5"x11" copy paper is loaded in the tray in crosswise orientation and the copier detects that the original is placed in lengthwise orientation, Rotation (if required) rotates the original image by 90° and the copy is made with the appropriate AMS ratio to fit the lengthwise style of the copy paper.

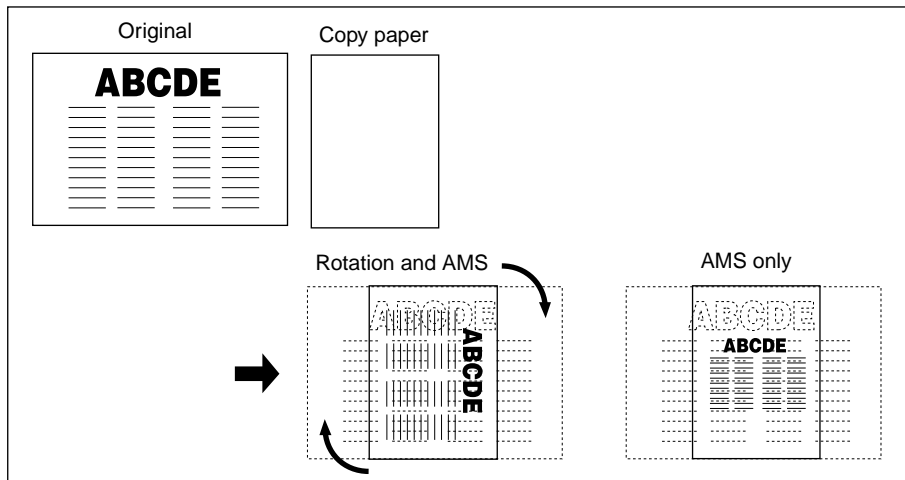


## Basic Operations

### Rotation (continued)

#### 90° Rotation and AMS (continued)

When the 5.5"x8.5" tray is selected and the copier detects that the original is placed in crosswise orientation, Rotation rotates the original image by 90° and the copy is made with the appropriate AMS ratio to fit the crosswise style of the copy paper.

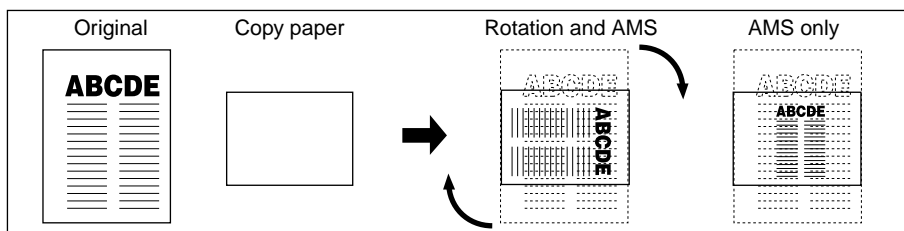

#### 180° Rotation

In 1-2 copy mode, this function arranges the even pages of the simplex crosswise originals upside down on the reverse side of duplex copies.

In 2-1 copy mode, this function arranges the reverse sides of duplex crosswise originals which read upside down to make normal simplex copies.

- ☐ 180° Rotation functions when 1-2 or 2-1 copy mode is selected, and the originals are placed in the lengthwise orientation.
- ☐ This function is effective for crosswise originals. For lengthwise originals, this function may not result satisfactorily.
- ☐ Copy size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5"
- ☐ Incompatible Basic Copying Condition: 1-1, 2-2
- ☐ Incompatible Special Original: Resolution (Very high)
- ☐ Incompatible Applications: Book Copy, Non-Image Area Erase, Repeat except 2/4/8 Repeat, AUTO Layout, Storing image in Overlay Memory

## Basic Operations


### Rotation (continued)

#### To Release Automatic Rotation

The copier is initially set to activate the Rotation function automatically.

#### To release automatic Rotation:

Basic Screen

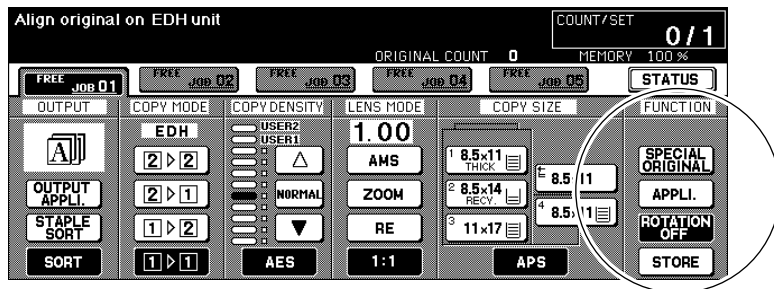

Touch **ROTATION OFF** on the Basic Screen to highlight it. The Rotation icon will go out and the Rotation function will be canceled.

NOTE: **ROTATION OFF** is initially set to activate/deactivate 90° Rotation only. If desired, key operator can set **ROTATION OFF** to activate/deactivate 180° Rotation also. See p. 14-40 to p. 14-45.

#### To resume automatic Rotation:

Touch **ROTATION OFF** on the Basic Screen to deselect it. The Rotation icon will be displayed and the Rotation function will be reactivated.

# Basic Operations

## Check Mode and Proof Copy

Use the Check mode to confirm copying selections before pressing the [Start] key. The Check Screen allows you not only to view the current settings but to change or release them directly from the Check mode.

In this mode, use Proof copy to produce a sample of the copied set before copying multiple copies. This is a convenient and cost effective way of viewing the results of the following copying selections.

- Copying conditions using Store mode
- Sheet/Cover Insertion
- Chapter
- Combination
- Booklet
- Image Insert
- Book Copy
- Program Job

With Proof copy, all originals are scanned into memory, and only one set is output after you press the [Proof Copy] key on the control panel or touch **Proof Copy** key on the Check Screen. After Proof copy, some copying condition keys may appear dimmed in the Check Screen. As to the copying condition indicated on these dimmed keys, you cannot change or release the selection.

When [Start] key is pressed, the job resumes copying until the job is completed.

- ☐ All settings made can be viewed in the Check Screen.
- ☐ Incompatible Basic Copying Condition with Proof Copy: Group
- ☐ Incompatible Special Original with Proof Copy: Resolution (Very high)
- ☐ Incompatible Applications with Proof Copy: None

Check Screen

CHECK MODE 【 BASIC & SPECIAL ORIG. 】			
Copy Quantity	9999	Exit Tray	Main tray
Duplex Mode	1-2 ( EDH )	Enhance Mode	Photo Mode
Copy Density		Special Orig.	Z-Folded Original
Lens Mode	1.00	Original	STD size
Copy Size	8.5×11		
Paper Type	Recycle		
Output Mode	Staple + Sort		
		CHANGE SETTING	RELEASE SETTING
		PROOF COPY	EXIT

You cannot change the selection if the copying condition key appears dimmed.

Proof Copy key

# Basic Operations

## Check Mode and Proof Copy (continued)

- 1 Press [Mode Check] on the control panel to display the Check Screen.
- 2 Verify the settings made for the current job.
- 3 If necessary, press [Proof Copy] on the control panel or touch **Proof Copy** on the Check Screen to output a set of sample copy.  
If only one copied set is needed and the sample set is adequate, press [Stop] to delete the stored data.
- 4 Touch **EXIT** (or press [Mode Check]) to exit from the Check mode and return to the Basic Screen.
- 5 Press [Start] when the Basic Screen is displayed.  
If set quantity is two or more, the copier will output the rest except the sample sets.

## Change/Release Settings

If you want to change or release any settings, follow the procedure below.

To change the settings:

Check Screen

CHECK MODE 【 BASIC & SPECIAL ORIG. 】			
Copy Quantity	9999	Exit Tray	Main tray
Duplex Mode	1-2 ( EDH )	Enhance Mode	Photo Mode
Copy Density	■ ■ ■ ■ ■ ■ ■ ■ ■ ■	Special Orig.	Z-Folded Original
Lens Mode	1.00	Original	STD size
Copy Size	A4 B4 A4		
Paper Type	--- Recycle OHP		
Output Mode	A A Staple + Sort		
<div>CHANGE SETTING RELEASE SETTING PROOF COPY EXIT</div>			

Basic Screen

Align original on EDH unit						COUNT/SET
						0/9999
ORIGINAL COUNT 0						MEMORY 100 %
FREE JOB 01	FREE JOB 02	FREE JOB 03	FREE JOB 04	FREE JOB 05	STATUS	
OUTPUT	COPY MODE	COPY DENSITY	LENS MODE	COPY SIZE		FUNCTION
A A	EDH	USER2	1.00	1 8.5x11 THICK		SPECIAL ORIGINAL APPLI. ROTATION OFF STORE
OUTPUT APPLI.	2 2	USER1	AMS	2 8.5x14 RECY.		
STAPLE SORT	2 1	NORMAL	ZOOM	3 11x17		
SORT	1 2	▼	RE			
	1 1	AES	1:1	APS		



# Basic Operations

## Check Mode and Proof Copy (continued)

- 1 Touch the desired copying condition key on the Check Screen to highlight it. The dimmed **CHANGE SETTING** key will become clear.

NOTES: • Any key that cannot be highlighted indicates that the copying condition cannot be changed from the Check Screen.

- Although the following application functions can be highlighted, they cannot be changed because the **CHANGE SETTING** key will be kept dimmed: Overlay, Non-image area erase, Reverse image, AUTO layout.


- 2 Touch **CHANGE SETTING**. The LCD will display an appropriate screen to change the copying condition selected.

- Selecting a basic copying condition key will display the Basic Screen.
- Selecting Enhance key will display the Change Enhance Selection Screen.
- Selecting Non STD Size key will display the Non STD Size Setting Screen.
- Selecting an application function key will display the Change Application Selection Screen.

When **BOOK MARK** has been checked on a subsequent screen, selecting the application function key will jump to that screen. See p. 9-2 for details.

- 3 Change the setting as desired, then restore the Check Screen to return to the checking steps, or to the Basic Screen to start copying.

Check Screen

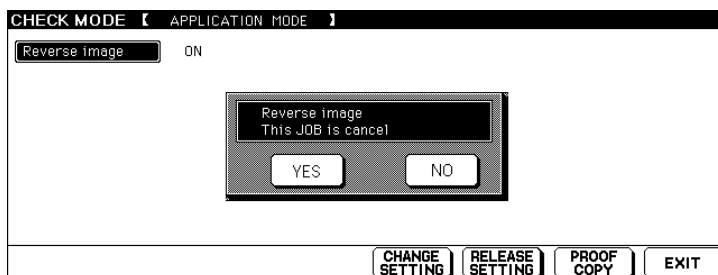

To release the settings:

- 1 Touch the desired special original key or application function key on the Check Screen to highlight it. The dimmed **RELEASE SETTING** key will be clear.

- 2 Touch **RELEASE SETTING**.

- 3 Touch **YES** to cancel the application function, or **NO** to restore.

When **YES** is touched, the selected function will be released and the key will disappear from the Check Screen.

# Basic Operations

## Interrupt Mode


Use the Interrupt mode to interrupt copying in progress to perform a simple job. When interrupt copying is completed, the settings for the initial job restore automatically and the Basic Screen displays. Press the [Interrupt] key when the copier is in the following conditions:

- Printing continuously the image stored using Store mode
- Scanning the originals using Store mode
- Scanning the originals using Store mode while printing in Reserve mode


If desired, key operator can change the timing to stop current machine operation for interrupt copying. Note that the compatible copying conditions vary according to the timing selected. See p. 14-40 ~ p. 14-45.

- ☐ Incompatible Basic Copying Conditions: Reserve
- ☐ Incompatible Special Original: None
- ☐ Incompatible Applications: Storing image in Overlay Memory

Control Panel

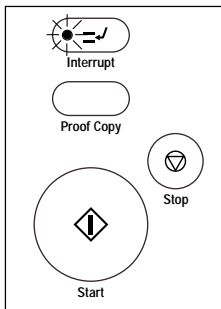

Basic Screen

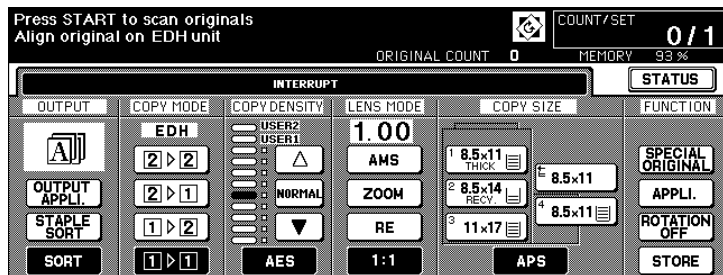

1 To stop the current copying job, press [Interrupt]. For particular jobs in progress, copying will cease only after certain phases of the immediate operation are completed, as indicated by LED conditions described below.

- Collectively printing image stored in memory  
The [Interrupt] LED blinks until one set of the current job is printed. Then the LED remains steady for the temporary job performed in Interrupt mode.
- Scanning originals into memory  
The [Interrupt] LED blinks until scanning is completed for all originals placed in the document handler. Then, the LED remains steady for the temporary job performed in Interrupt mode.
- Scanning originals into memory while printing in Reserve mode (see Note 1)  
The [Interrupt] LED blinks until the copier completes the current printing job, scans all originals placed on the document handler, and prints one set of the Reserved job. The LED remains steady for the temporary job performed in Interrupt mode.

All **JOB** indicators on the Basic Screen will change to **INTERRUPT**.

# Basic Operations

## Interrupt Mode (continued)

- 2 Remove any document from the platen glass or from the document handler, if present.
- 3 Place new original(s) on the platen glass or in the document handler.
- 4 The copying settings in Interrupt mode are as follows.

Copy Mode	: 1 ► 1
EDH	: ON
AES	: ON
Lens Mode	: 1:1 (1.00)
APS	: ON
Print Quantity	: 1
Finisher	: ON

Select other copying features that are compatible with the Interrupt mode, if desired.

- 5 Press [Start].
- 6 When Interrupt copying is completed, press [Interrupt] again to return to the settings of the initial job.
- 7 Replace the initial original, then press [Start] to resume copying.

### NOTES:

- 1 In Reserve mode, pressing [Interrupt] before the copier finishes scanning originals of the reserve job will clear the settings selected for reserve job.
- 2 When [Mode Check] is pressed during Interrupt Copying, the information displayed reflects the initial copy job settings. Check mode will not display Interrupt copy job information.


# Basic Operations

## Help Mode

Use the [Help] key to access information about the current screen mode and to learn about setting procedures. The [Help] key can be pressed from any screen except Program Memory and Key Operator Screens.

The Help Screen also includes the Help menu icon in the center. When the **HELP MENU** key is touched, the Help Menu Screen displays a list of all of the copier functions. When a function item is touched, the Help Screen displays information specific to that topic.

The **KEY OPERATOR MODE** key is also provided in the lower left position of the Help Screen. When touched, the Key Operator Password Entry Screen will be displayed to access the Key operator mode. See p. 14-2.

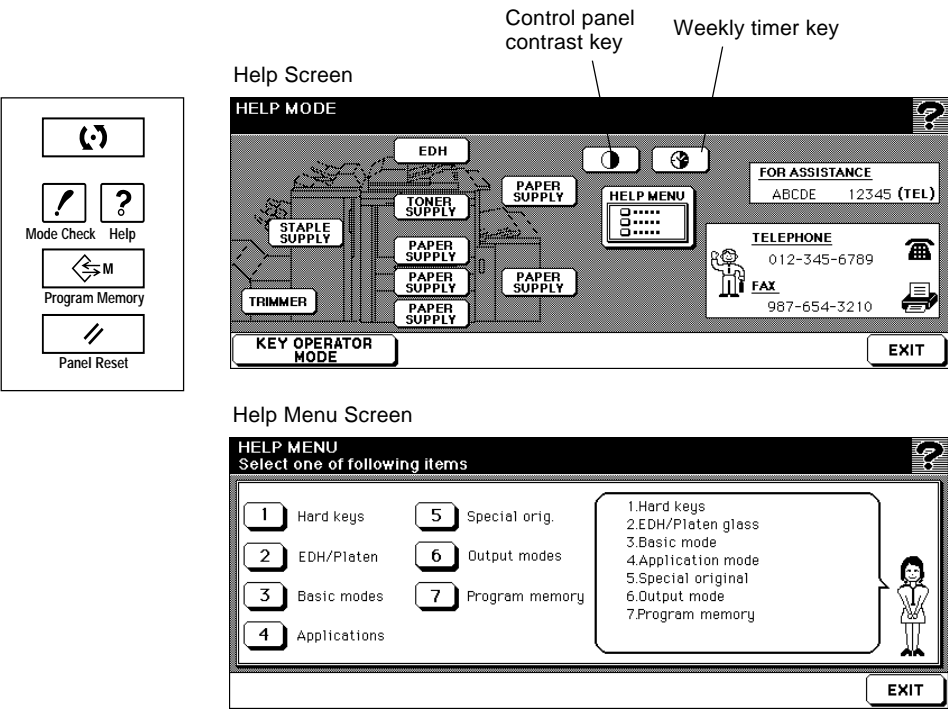

# Basic Operations

## Help Mode (continued)


- 1 While in any screen, press [Help] to display the Help Screen.
- 2 Touch **TONER SUPPLY**, **PAPER SUPPLYS**, **EDH**, **STAPLE SUPPLY**, **TRIMMER**, **FOR ASSISTANCE**, or the Service call telephone number and Fax number to display specific Help information.
- 3 For help on operations, touch **HELP MENU** in the center area of the screen. The Help Menu Screen will be displayed. Select one of the 7 Help menu items.
- 4 The Weekly timer key display only when the Weekly timer system is activated. Touch the key to display the settings of the Weekly timer.
- 5 Touch **EXIT** to return to the screen that was displayed before pressing [Help].

# Basic Operations

## Using the Multi-Sheet Bypass Tray

The Multi-sheet bypass tray can be used to stack regular 16 lb~45 lb Bond paper.

- ☐ Bypass tray paper size: 11"x17"~5.5"x8.5"
- ☐ Bypass tray paper weight range: 16 lb~45 lb
- ☐ Bypass tray paper capacity: up to 150 sheets 20 lb
- ☐ Bypass tray Transparency film capacity: 1 sheet

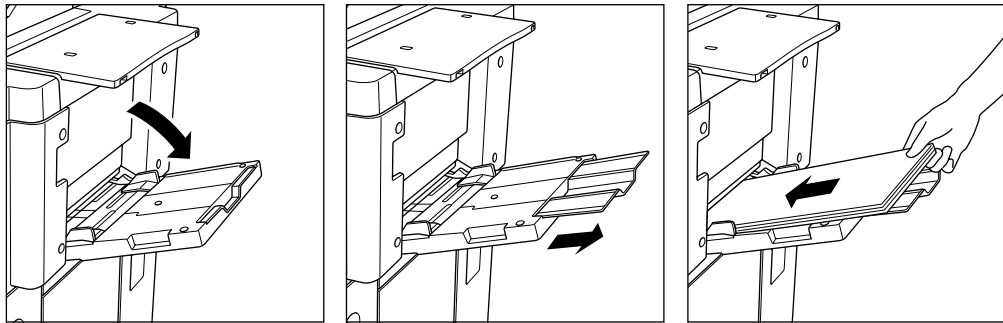


- 1 Open the Multi-sheet bypass tray located on the right side of the copier.  
When loading 11"x17" or 8.5"x14" paper, withdraw the right edge of the Multi-sheet bypass tray.
- 2 Load copy paper, and align the paper guides to the paper size.  
Load Transparency film one sheet at a time; or, stack paper, up to 150 sheets 20 lb Bond.

## Basic Operations

### Using the Multi-Sheet Bypass Tray (continued)

Load offset tabbed sheets so that the tab extensions are on the right at the rear (not front) of the tray. The top sheet is designated face up as the first tab of the finished set. Subsequent offset tab sheets follow in sequence.

When loading tabbed sheets in the Multi-sheet bypass tray, be sure to specify the paper type as Tab paper on the Paper Type/Size Selection Screen; otherwise mishandled paper may occur. See p. 6-18 to p. 6-20.

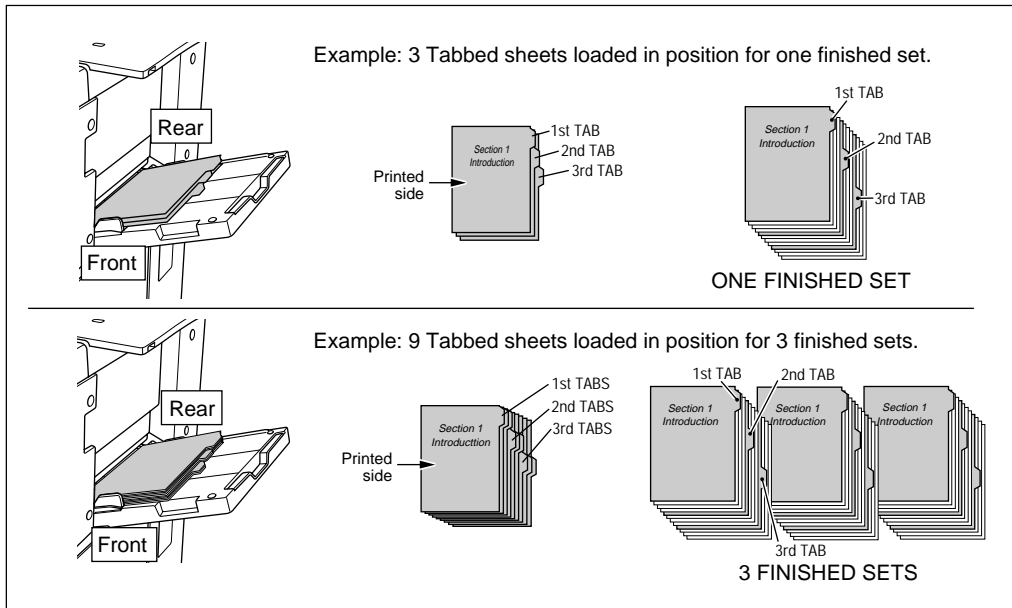

## Section 7: Output Modes

FN-104/FN-4 Finisher Specifications

Non-Sort Mode Using Primary (Main) Tray

Sort Mode Using Primary (Main) Tray

Staple-Sort Mode Using Primary (Main) Tray

Group Mode Using Primary (Main) Tray

Output Modes Using Secondary (Sub) Tray

Folding, Stapling & Folding and Trimming Modes



Cover Inserter A

Manual Stapling

Output Mode for Machine without Finisher

Face Down Exit

Face Up Exit

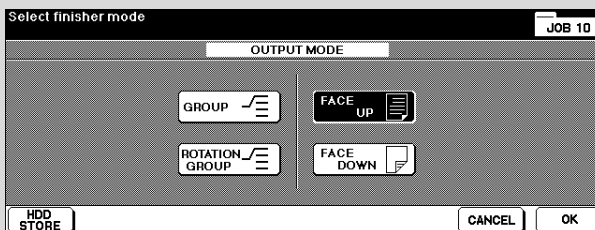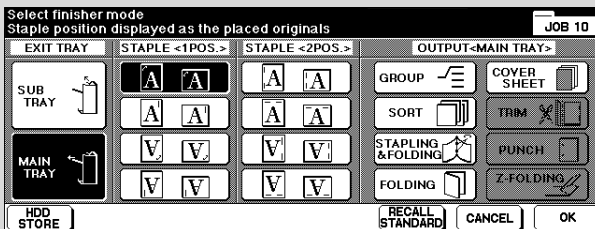



# Output Modes

## FN-104/FN-4 Finisher Specifications

Use only paper that is recommended by us and stored under the environmental conditions stated for copy quality. Special stock is not guaranteed for reliability or copy quality. Multi-sheet bypass tray, Interrupt, and Transparency interleaving are incompatible with finisher use.

This Finisher also accommodates wide paper sizes in addition to the standard sizes described below. See p. 4-9 ~ p. 4-10.

### Finisher Type

- ☐ Primary (Main) Tray with built-in 2 stapling: moving tray type
- Secondary (Sub) Tray
- Booklet Tray
- Cover Inserter A (option)
- Trimming Unit TMG-1 (option) (FN-4 Finisher only)

### Primary (Main) Tray

- Non-Sort Mode

- ☐ Paper size: 11"x17"~5.5"x8.5"
- ☐ Paper weight: 16~24 lb; Special stock (65 lb (176 g/m<sup>2</sup> cover paper), transparency film, labels, hole punch, rag content)
- ☐ Paper capacity for 20 lb: 500 sheets 5.5"x8.5"  
3,000 sheets 8.5"x11", 8.5"x11"R  
1,500 sheets 11"x17", 8.5"x14"

- Sort Mode/Group Mode

- ☐ Paper size: 11"x17"~5.5"x8.5"
- ☐ Paper weight: 16~24 lb
- ☐ Paper capacity for 20 lb: 500 sheets 5.5"x8.5"  
3,000 sheets 8.5"x11", 8.5"x11"R  
1,500 sheets 11"x17", 8.5"x14"

- Staple-Sort Mode

- ☐ Paper size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11"
- ☐ Paper weight: 16~24 lb
- ☐ Paper capacity for 20 lb: 1,000 sheets\*<sup>1</sup>
- ☐ Staple capacity: 50 sheets\*<sup>2</sup> (5.0mm thick or less)
- ☐ Staple position: See p. 7-7.

#### NOTES:

\*1: Variable according to the number of pages to be stapled. See p. 4-9 for detail.

\*2: Staple sheet capacity is changeable, and may be set to 45, 40 or 35 by service.

# Output Modes

## FN-104/FN-4 Finisher Specifications (continued)

### Secondary (Sub) Tray

- Non-sort and face down exit
- Non-sort and face up exit
- Group and face down exit
- Group and face up exit
- ☐ Paper size: 11"x17"~5.5"x8.5"
- ☐ Paper weight: 16~24 lb
- ☐ Paper capacity for 20 lb: 200 sheets

### Booklet Tray (FN-4 Finisher only)

- Folding Mode
  - ☐ Paper size: 11"x17", 8.5"x14", 8.5"x11"R, A4R (8.27"x11.69", 210mmx297mm)
  - ☐ Paper weight: 16~24 lb; Special stock (20 lb paper is recommended)
  - ☐ Number of Folding sheet: 3 sheets max.
  - ☐ Booklet tray capacity: Approx. 100 sheets max.
    - 33 sets max. of 3-sheet-folded booklet  
(33 x 3 = 99 sheets)
    - 50 sets max. of 2-sheet-folded booklet  
(50 x 2 = 100 sheets)
- Stapling & Folding Mode
  - ☐ Paper size: 11"x17", 8.5"x14", 8.5"x11"R, A4R (8.27"x11.69", 210mmx297mm)
  - ☐ Paper weight: 16~24 lb; Special stock (20 lb paper is recommended)
  - ☐ Number of Folding sheet: 16 sheets max. (using 20 lb paper only)
    - 15 sheets max. (a thick cover paper included)
  - ☐ Booklet tray capacity: Approx. 100 sheets max.
    - 20 sets max. of 5-sheet-folded booklet  
(20 x 5 = 100 sheets)
    - 10 sets max. of 10-sheet-folded booklet  
(10 x 10 = 100 sheets)
    - 6 sets max. of 16-sheet-folded booklet  
(6 x 16 = 96 sheets)

### Cover Inserter A

- ☐ Paper size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", A4, A4R (8.27"x11.69", 210mmx297mm)
- ☐ Paper weight in cover sheet mode: 13~110 lb (200g/m<sup>2</sup> thick paper)
- ☐ Paper weight in manual staple: 16~24 lb

# Output Modes

## FN-104/FN-4 Finisher Specifications (continued)

### Trimming Unit (FN-4 Finisher only)


- Trimming Mode
  - ☐ Paper size: 11"x17", 8.5"x14", 8.5"x11"R, A4R (8.27"x11.69", 210mmx297mm)
  - ☐ Paper weight: 16~24 lb; Special stock (20 lb paper is recommended)
  - ☐ Number of trimmed sheet: 3 sheets max. with Folding mode
    - 16 sheets max. using 20 lb paper only with Stapling & Folding mode
    - 15 sheets max. using a thick cover paper with Stapling & Folding mode
  - ☐ Trimming width: 10 mm max.
  - ☐ Trimming unit tray capacity: Approx. 512 sheets max.
    - 100 sets max. of 2~5-sheet-folded booklet
    - 50 sets max. of 6~10-sheet-folded booklet
    - 32 sets max. of 11~16-sheet-folded booklet

# Output Modes

## Non-Sort Mode Using Primary (Main) Tray

The Non-sort mode simply means that the offset-stacker finisher modes are not selected. Copies will be stacked upon exit without being offset by sorted sets. With the Primary (main) tray initially selected on the Finisher Mode Selection Screen, FN-104/FN-4 outputs the printed sheets **FACE DOWN** in the proper order.

- ☐ Paper size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11", 5.5"x8.5"
- ☐ Paper capacity for 20 lb: 500 sheets 5.5"x8.5"  
3,000 sheets 8.5"x11", 8.5"x11"R  
1,500 sheets 11"x17", 8.5"x14"

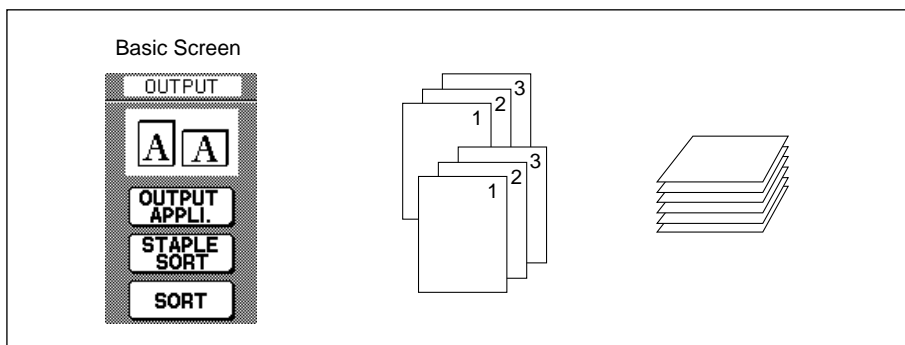

- 1 Touch **SORT** on the Basic Screen to deselect it, if highlighted.
- 2 Enter the desired print quantity.
- 3 Position original(s) in the document handler or on the platen glass, and make copying selections, as required.
- 4 Press [Start] to begin copying in Non-sort mode.  
Copies will exit face down, with the page heading toward the front of the copier.

### CAUTION:


When the finisher capacity is exceeded due to the print quantity selected, remove the copied sets while the paper is exiting; otherwise mishandled paper will occur.

# Output Modes

## Sort Mode Using Primary (Main) Tray

Use this mode when you want to output multiple copies of the original set, and have each sorted set offset upon exit. The staple mode can be selected with the sort mode. With the Primary (main) tray initially selected on the Finisher Mode Selection Screen, FN-104/FN-4 outputs the printed sheets **FACE DOWN** in the proper order.

- ☐ Paper size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11", 5.5"x8.5"  
(5.5"x8.5" paper is available in landscape type feeding ( ☐ ) only)
- ☐ Paper capacity for 20 lb: 500 sheets 5.5"x8.5"  
3,000 sheets 8.5"x11", 8.5"x11"R  
1,500 sheets 11"x17", 8.5"x14"

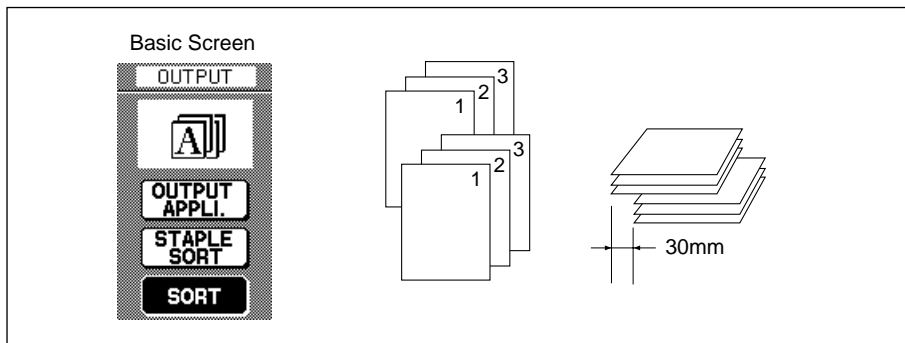

- 1 Touch **SORT** on the Basic Screen to highlight it.
- 2 Enter the desired print quantity.
- 3 Position originals in the document handler, and make copying selections as required.  
When using Store mode, see p. 6-27 to p. 6-29.
- 4 Press [Start].

### CAUTION:

When the finisher capacity is exceeded due to the print quantity selected, remove the copied sets while the paper is exiting; otherwise mishandled paper will occur.


# Output Modes

## Staple-Sort Mode Using Primary (Main) Tray

Use this mode when you want to offset and staple each copied set. Stapling position and number of staples (1 or 2) can be designated on the Finisher Mode Selection Screen. Each finished set will be offset from the next copied set.

With the Primary (main) tray initially selected on the Finisher Mode Selection Screen, FN-104/FN-4 outputs the printed sheets **FACE DOWN** in the proper order.



- ☐ Stapled paper at 1 position: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11" (5.5"x8.5" is available in crosswise orientation only.)
- ☐ Stapled paper at 2 positions: only 8.5"x11" paper loaded with larger dimension vertical  
11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11" paper loaded with larger dimension horizontal
- ☐ Paper capacity for 20 lb: 1,000 sheets (Variable according to the number of pages to be stapled. See p. 4-9 for details.)
- ☐ Staple capacity: 50 sheets 20 lb (5.0mm thick or less)  
(Staple capacity is changeable, and may be set to 45, 40, or 35 by service.)
- ☐ Staple position: 1 oblique staple; 1 parallel staple; 2 parallel staples

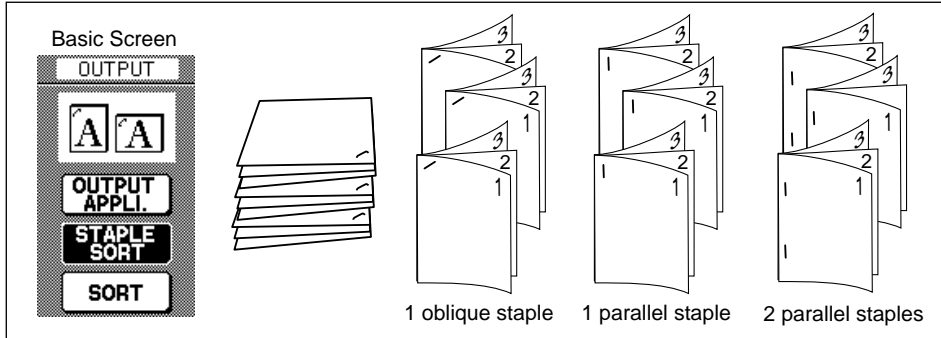

# Output Modes

## Staple-Sort Mode Using Primary (Main) Tray (continued)

- 1 Touch **STAPLE SORT** on the Basic Screen to highlight it. The Staple Position icon will be displayed in the OUTPUT icon area. When not changing the staple position, proceed to step 5.

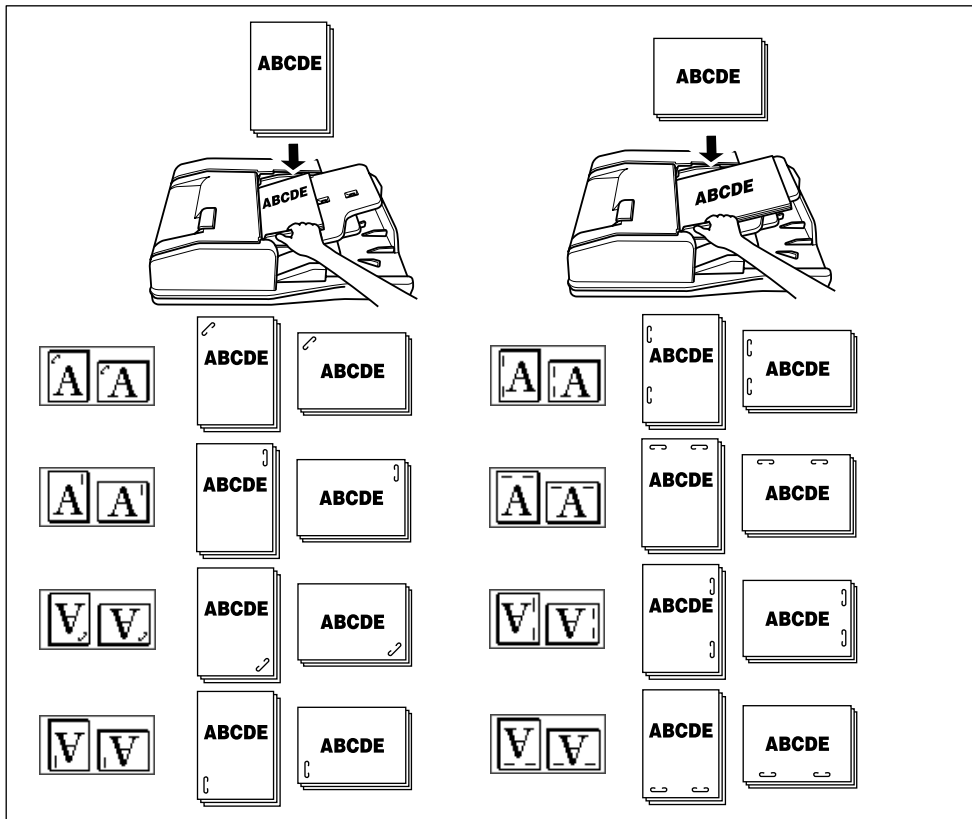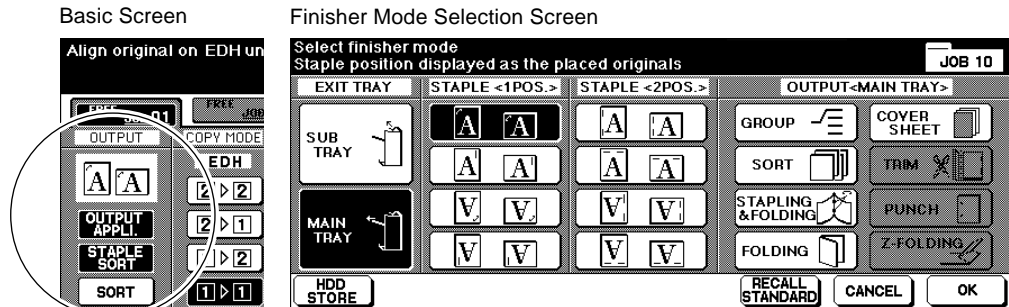

# Output Modes

## Staple-Sort Mode Using Primary (Main) Tray (continued)

- 2 Touch **OUTPUT APPLI.** on the Basic Screen to display the Finisher Mode Selection Screen.
- 3 Touch the desired key among the eight keys on the screen to select the staple position.
- 4 Touch **OK** on the Finisher Mode Selection Screen to complete the setting and return to the Basic Screen.  
The selection made in stapling position will be displayed in the OUTPUT icon area.
- 5 Select additional copying features, as required.
- 6 Enter the desired print quantity.
- 7 Position originals in the document handler. When using Store mode, see p. 6-27 to p. 6-29.
- 8 Press [Start].

### **CAUTION:**

When the finisher capacity is exceeded due to the print quantity selected, remove the copied sets while the paper is exiting; otherwise mishandled paper will occur.





# Output Modes

## Group Mode Using Primary (Main) Tray

Use this mode when you want to group together multiple copies of each original, and offset the sets upon exit. Grouped sets cannot be stapled.

- ❑ Paper size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11", 5.5"x8.5"  
(5.5"x8.5" paper is available in landscape type feeding ( ☐ ) only)
- ❑ Paper capacity for 20 lb: 500 sheets 5.5"x8.5"  
3,000 sheets 8.5"x11"R, 8.5"x11"  
1,500 sheets 11"x17", 8.5"x14"

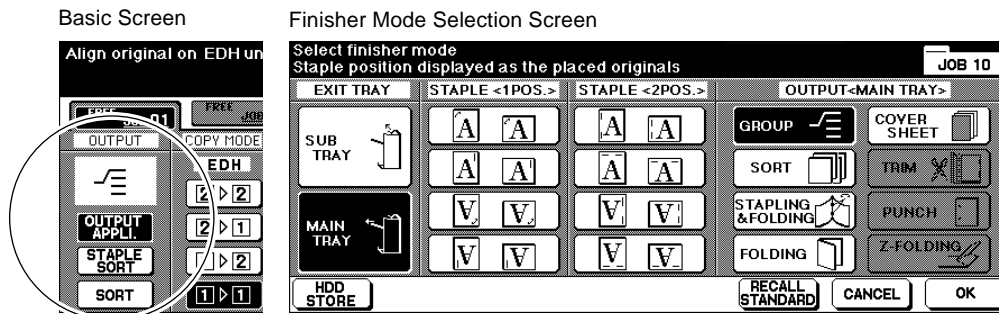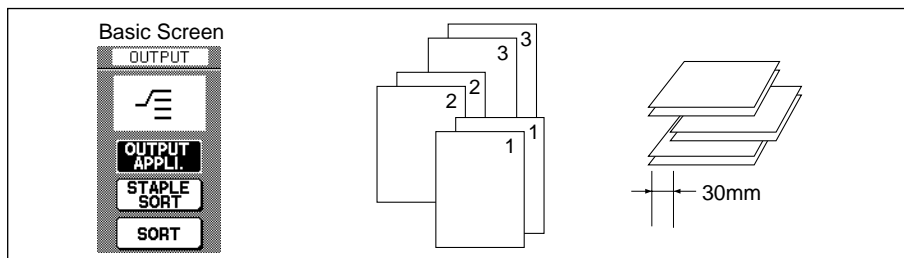

- 1 Touch **OUTPUT APPLI.** on the Basic Screen to display the Finisher Mode Selection Screen.
- 2 Touch **GROUP**, then **OK** to complete the setting and return to the Basic Screen.  
The GROUP icon will be displayed in the OUTPUT icon area.
- 3 Enter the desired print quantity.
- 4 Position originals in the document handler, and make copying selections as required.  
When using Store mode, see p. 6-27 to p. 6-29.
- 5 Press [Start].

### ⚠ CAUTION:

When the finisher capacity is exceeded due to the print quantity selected, remove the copied sets while the paper is exiting; otherwise mishandled paper will occur.

# Output Modes


## Output Modes Using Secondary (Sub) Tray

In addition to the Primary (main) tray, FN-104/FN-4 Finisher is equipped with a Secondary (sub) tray that can be selected on the Finisher Mode Selection Screen. The Secondary (sub) tray provides 4 types of output mode as specified below, also to be specified on the Finisher Mode Selection Screen.


- (1) Face down non-sort exit
- (2) Face up non-sort exit
- (3) Face down group exit
- (4) Face up group exit

- ☐ Paper size: 11"x17"~5.5"x8.5"
- ☐ Paper weight: 16~24 lb
- ☐ Paper capacity for 20 lb: 200 sheets


Non sort + Face down Finisher Mode Selection Screen

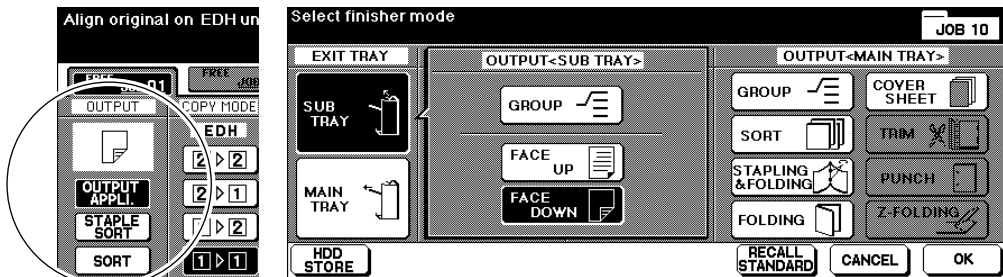

Non sort + Face up Finisher Mode Selection Screen

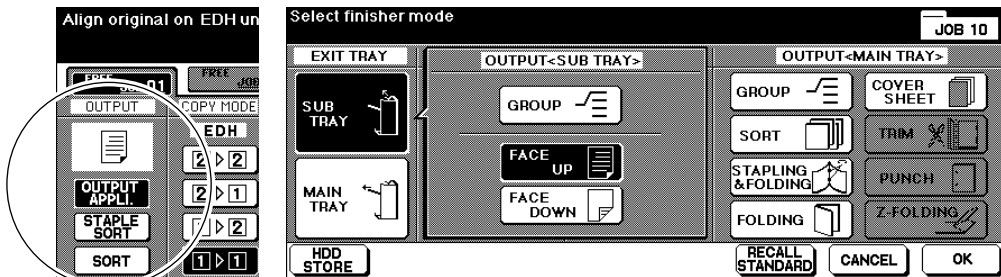


Group + Face down Finisher Mode Selection Screen

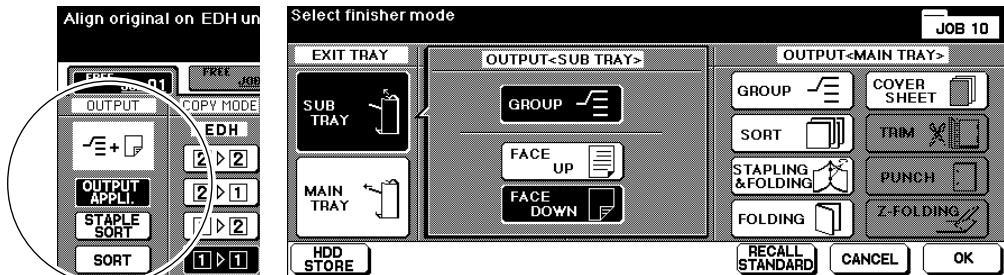

# Output Modes

## Output Modes Using Secondary (Sub) Tray (continued)

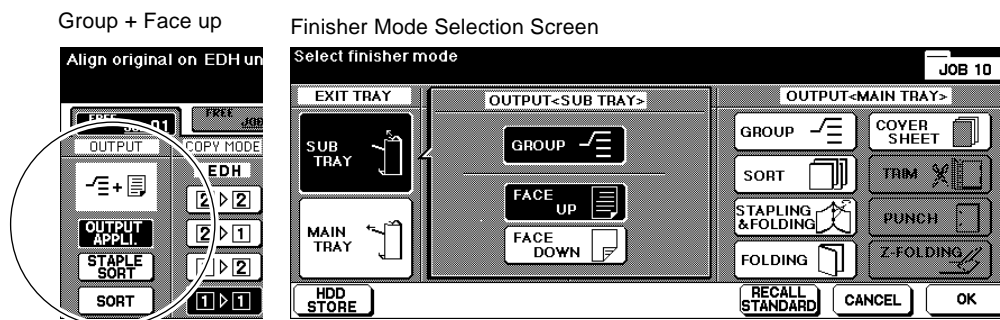

- 1 Touch **OUTPUT APPLI.** on the Basic Screen to display the Finisher Mode Selection Screen.
- 2 Touch **SUB TRAY** to display the popup menu OUTPUT<SUB TRAY>.
- 3 Touch the desired key(s) on the popup menu to specify one of the four output modes.  
 To select Non-sort and face down exit, touch **FACE DOWN**.  
 To select Non-sort and face up exit, touch **FACE UP**.  
 To select Group and face down exit, touch **GROUP** and **FACE DOWN**.  
 To select Group and face up exit, touch **GROUP** and **FACE UP**.
- 4 Touch **OK** on the Finisher Mode Selection Screen to complete the setting and return to the Basic Screen.  
 The selection made in output mode using secondary (sub) tray will be reflected in the OUTPUT icon area of the Basic Screen.
- 5 Enter the desired print quantity.
- 6 Position originals in the document handler, and make copying selections as required.  
 When using Store mode, see p. 6-27 to p. 6-29.
- 7 Press [Start].

### CAUTION:

When the finisher capacity is exceeded due to the print quantity selected, remove the copied sets while the paper is exiting; otherwise mishandled paper will occur.

# Output Modes

## Folding, Stapling & Folding and Trimming Modes

The Folding and Stapling & Folding modes are available only when the FN-4 Finisher option is installed. The Trimming modes (Folding and Trimming, Stapling & Folding and Trimming) are available only when the TMG-1 Trimming unit option is installed on the FN-4 Finisher. When any mode is selected, the Booklet feature is automatically selected and indicated on the Application Selection Screen.

NOTES: 1. When copying two-sided signature originals using the Folding, Stapling & Folding or Trimming mode, release the automatically selected Booklet mode on the Application Selection Screen.  
2. When copying dark originals or using Reverse Image mode together with Folding, Stapling & Folding or Trimming mode, the folded line of the output copies may be slightly shifted.

The following copy results may be expected when using Folding, Stapling & Folding or Trimming mode:

In the Folding mode, each copied set is folded and output to the Booklet tray of the finisher.

In the Stapling & Folding mode, each copied set is stapled at two positions (saddle stitched), then folded and output to the Booklet tray of the finisher.


In the Trimming modes, each copied set is either folded or stapled & folded; trimmed at the edge that opens the booklet; then output to the Trimming unit tray.

- ☐ Use EDH.
- ☐ Max. number of folded sheets (20 lb Bond) in both modes:
  - Folding; 3 sheets (less than in Staple & Folding mode because they are not cinched first)
  - Stapling & Folding: 16 sheets
  - 15 sheets when using thick cover paper
  - Folding and Trimming; 3 sheets
  - Stapling & Folding and Trimming; 16 sheets
  - 15 sheets when using thick cover paper
- ☐ Paper size: 11"x17", 8.5"x14", 8.5"x11"R, A4R
- ☐ Paper weight: 16~24 lb; Special stock (20 lb paper is recommended)
- ☐ Booklet tray capacity:
  - When the Booklet tray capacity is exceeded, the finisher will stop operating. Select an appropriate print quantity referring to the following capacity.
  - Approx. 100 sheets max.
    - Folding; 33 sets max. of 3-sheet-folded booklet (33 x 3 = 99 sheets)
    - Stapling & Folding; 20 sets max. of 5-sheet-folded booklet (20 x 5 = 100 sheets)
    - 6 sets max. of 15-sheet-folded booklet (6 x 15 = 90 sheets)
- ☐ Trimming unit tray capacity:
  - When the Trimming unit tray capacity is exceeded, the finisher and Trimming unit will stop operating. Select an appropriate print quantity referring to the following capacity.
  - Approx. 512 sheets max.
    - Folding and Trimming; 100 sets max. of 3-sheet-folded booklet (300 sheets max.)
    - Stapling & Folding and Trimming; 100 sets max. of 2~5-sheet-folded booklet (500 sheets max.)
    - 50 sets max. of 6~10-sheet-folded booklet (500 sheets max.)
    - 32 sets max. of 11~16-sheet-folded booklet (512 sheets max.)
- ☐ Incompatible Basic Copying Conditions with Booklet selected: APS, Sort, Staple-sort, Group, Cover sheet feeding, 1-1, 2-1, Rotation Sort, Rotation Group


# Output Modes

## Folding, Stapling & Folding and Trimming Modes (continued)


- ☐ Incompatible Special Originals with Booklet selected: Resolution (Very high), Mixed Original, Non STD size
- ☐ Incompatible Applications with Booklet selected: Sheet/Cover Insertion, Combination, Transparency Interleave, Program Job, Non-Image Area Erase, Repeat, Frame/Fold Erasure, AUTO Layout, Shift mode in Image Shift, Overlay
- ☐ Incompatible conditions without Booklet: Sort, Staple-sort, Group, Rotation Sort, Rotation Group, Mixed Original with APS, Transparency Interleave

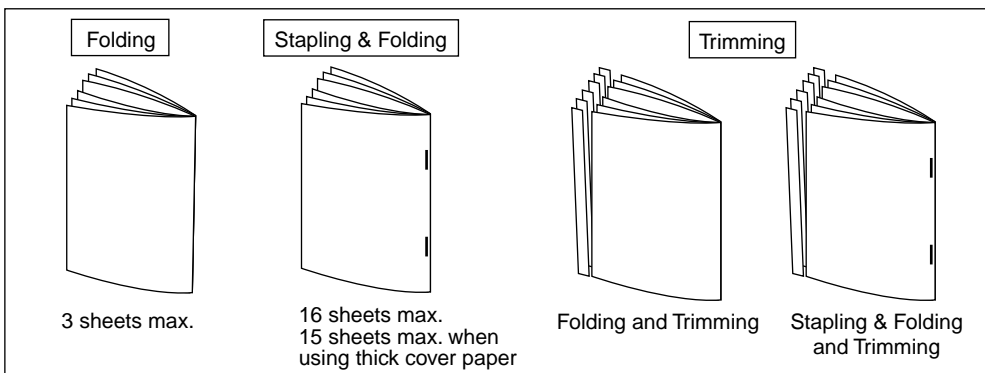


Folding

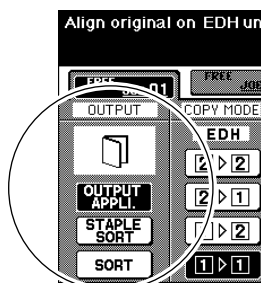


Finisher Mode Selection Screen

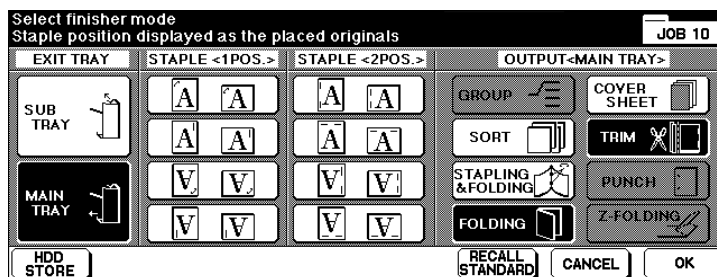

Stapling & Folding

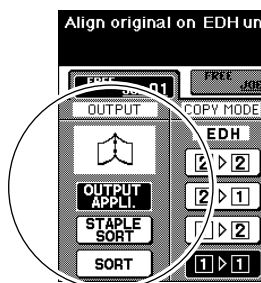

Finisher Mode Selection Screen

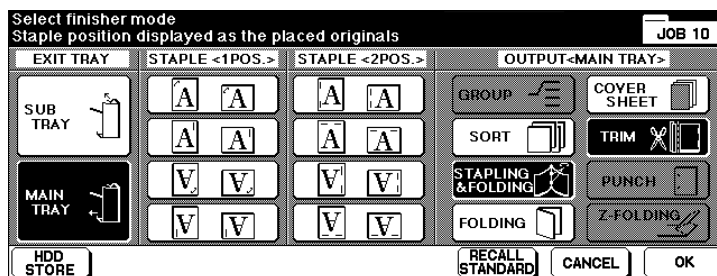

# Output Modes

## Folding, Stapling & Folding and Trimming Modes (continued)

- 1 Close the EDH securely, then press [Panel Reset].
- 2 Touch **OUTPUT APPLI.** on the Basic Screen to display the Finisher Mode Selection Screen.
- 3 Touch **STAPLING & FOLDING** or **FOLDING**, as desired.  
When selecting **STAPLING & FOLDING**, the machine with the Trimming unit installed selects **TRIM** automatically. To cancel the trimming mode, touch **TRIM** to deselect it.  
When selecting **FOLDING**, the machine with the Trimming unit installed does not automatically select **TRIM**. Touch **TRIM** to highlight it, if desired.

NOTE: Selecting **FOLDING** or **STAPLING & FOLDING** will automatically switch the output tray to Booklet tray. Notice that the arrow pointing to the **MAIN TRAY** shifts to the Booklet tray.

- 4 Touch **OK** on the Finisher Mode Selection Screen. The Basic Screen will be restored and the selection made in the output mode will be reflected in the **OUTPUT** icon area.
- 5 Select additional copying features, as required.  
**NO COVER SHEET** of Booklet is automatically selected. To change this selection, touch **APPLI.** on the Basic Screen to display the Application Selection Screen, then touch **Booklet** twice to display the Booklet Mode Selection Screen to make another selection or to release the setting.
- 6 Enter the desired print quantity.
- 7 Position originals in the document handler. When using Store mode, see p. 6-27 to p. 6-29.

NOTE: When loading originals, heed the following limits on capacity:

Folding / Folding and Trimming mode;

6 pages or less for simplex copying

12 pages or less for duplex copying

Stapling & Folding / Stapling & Folding and Trimming mode;

32 pages or less for simplex copying

64 pages or less for duplex copying

Exceeding the above limits on capacity may cause trouble in the finisher.

- 8 Press [Start].

NOTE: CLOSE THE TRIMMER STACKER COVER; otherwise the machine cannot print/copy.

DO NOT OPEN THE TRIMMER STACKER COVER DURING PRINTING/COPYING; otherwise, the machine will cease operating and a paper misfeed will occur.

### CAUTION

When the Booklet tray / Trimming unit tray capacity is exceeded, the finisher will cease operating. To avoid such trouble, select an appropriate print quantity from the specifications shown on p. 7-13.

# Output Modes


## Cover Inserter A

The Cover Inserter A is available as an option on the FN-104/FN-4 finisher. Load cover sheet paper into this device and use the sheets as front covers for copied sets output to the Main tray; or use the sheets as booklet type covers for copied sets output to the Booklet tray in the Folding or Stapling & Folding mode.


### NOTES:

- Paper loaded into the cover sheet feeder cannot be copied.
- This function is incompatible with cover sheet mode (COVER WITH COPY SHEET and COVER WITH BLANK SHEET) in Booklet and Thick paper mode in Sheet/Cover Insertion.


- ☐ Cover paper size: 11"x17"~5.5"x8.5" (13~110 lb (200g/m2 cover paper))
- ☐ Copy paper size: 11"x17"~5.5"x8.5" (20 lb paper recommended)
- ☐ Incompatible Basic Copying Conditions: Output to Secondary (sub) tray, Rotation Sort, Rotation Group
- ☐ Incompatible Special Originals: Mixed Original with APS
- ☐ Incompatible Applications: Cover Sheet mode in Booklet

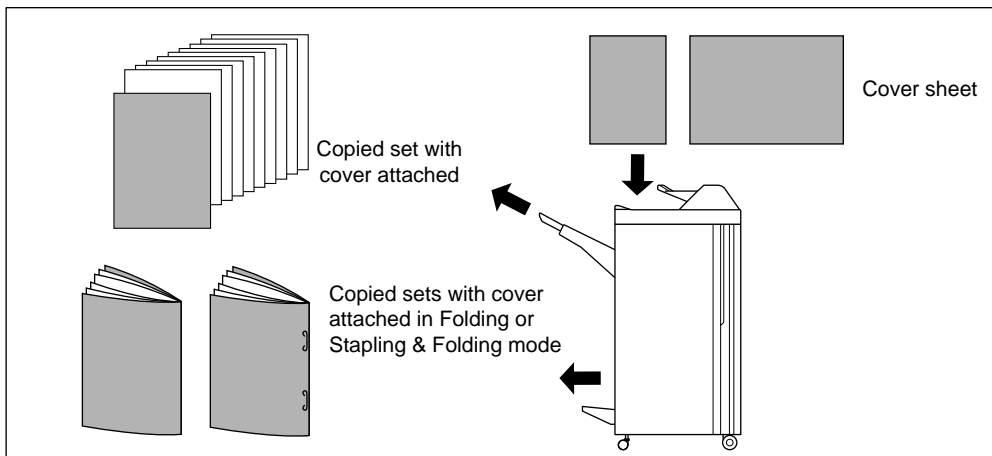

Basic Screen

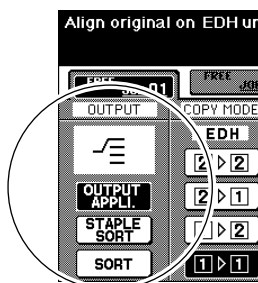


Finisher Mode Selection Screen

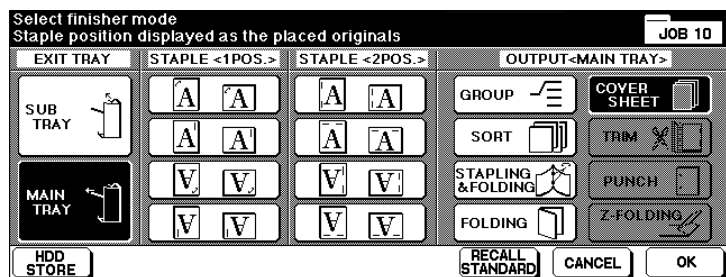

# Output Modes

## Cover Inserter A (continued)


Cover Sheet Insert Selection Screen

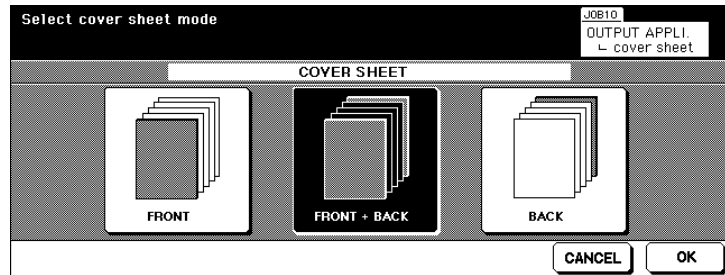

- 1 Close the EDH securely, then press [Panel Reset].
- 2 Touch **OUTPUT APPLI.** on the Basic Screen to display the Finisher Mode Selection Screen.
- 3 Touch **COVER SHEET** to display the Cover Sheet Insert Selection Screen.
- 4 Touch **FRONT**, **FRONT+BACK**, or **BACK** to highlight it, then touch OK to restore the Finisher Mode Selection Screen.
- 5 Touch OK on the Finisher Mode Selection Screen. The Basic Screen will be restored.
- 6 Select additional copying features, as required.
- 7 Load the cover sheet paper into the optional cover inserter of the FN-104/FN-4 finisher.  
If the paper size loaded in the cover inserter is not suitable, the following messages will be displayed and copying will be unavailable.

Please load cover sheet in  
cover inserter

Adapt paper size between  
cover sheet and selected paper

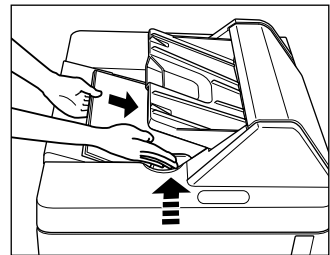

- 8 Enter the desired print quantity.
- 9 Position originals in the document handler or on the platen glass.  
When using Store mode, see p. 6-27 to p. 6-29.
- 10 Press [Start].

### CAUTION:

When the finisher capacity is exceeded due to the print quantity selected, remove the copied sets as they exit; otherwise, mishandled paper will occur.



# Output Modes

## Manual Stapling

The Manual Stapling function is available only with the Cover Inserter A option installed on the FN-104/FN-4 Finisher. To use this convenient function, simply place a set of paper to be stapled into the cover inserter of the finisher, select the desired staple mode from the manual stapling operation panel located on the top of the finisher, then press the Staple Start/Stop button. The stapled set will be delivered to the Booklet tray or the Primary (main) tray according to the selected mode, as described below. When selecting the Stapling & Folding, the machine with the Trimming unit installed trims the end of booklet automatically and delivers it to the Trimming unit tray.


- Stapling & Folding (2 staples in the center + Folding): Booklet tray, or Stapling & Folding and Trimming (2 staples in the center + Folding + Trimming): Trimming unit tray
- 1 oblique staple: Primary (main) tray
- 2 parallel staples: Primary (main) tray

### Specifications for Manual Stapling & Folding mode

- ☐ Paper size: 11"x17", 8.5"x14", 8.5"x11"R, A4, A4R (8.27"x11.69", 210mmx297mm)
- ☐ Paper weight: 16~24 lb (20 lb paper is recommended)
- ☐ Staple capacity: 16 sheets max. (20 lb paper)  
15 sheets max. (20 lb paper with a thick paper cover)
- ☐ Output tray: Booklet tray / Trimming unit tray


### Specifications for Manual Stapling 1 oblique staple and 2 parallel staples

- ☐ Paper size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5", A4, A4R (8.27"x11.69", 210mmx297mm)
- ☐ Paper weight: 16~24 lb (20 lb paper is recommended)
- ☐ Staple capacity: 50 sheets max. (20 lb paper)
- ☐ Output tray: Primary (main) tray

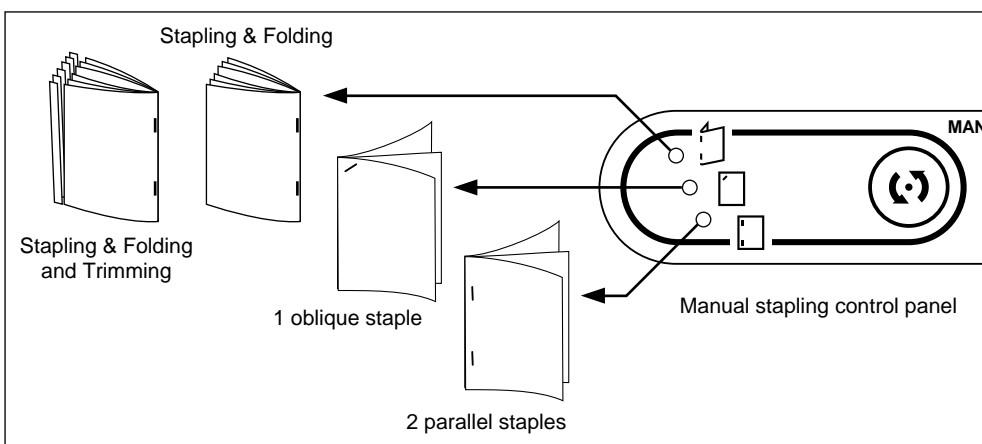

# Output Modes

## Manual Stapling (continued)

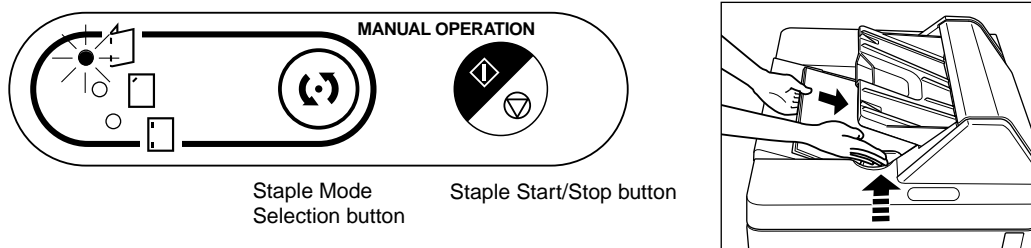

- 1 Place a set of paper to be stapled into the cover inserter, then align the guide plate. The indicator light of Staple Start/Stop button will turn green.

NOTE: Refer to the specifications on previous page for available paper size in each mode.

- 2 Press Staple Mode Selection button to select the desired staple mode.
- 3 Press Staple Start/Stop button.

Stapled sheets will be delivered to the appropriate tray according to the selected staple mode.

NOTE: CLOSE THE TRIMMER STACKER COVER; otherwise the machine cannot print/copy.  
DO NOT OPEN THE TRIMMER STACKER COVER DURING PRINTING/COPYING; otherwise, the machine will cease operating and a paper misfeed will occur.

NOTE: If you want to stop the manual stapling operation, press the Staple Start/Stop button again. The finisher will cease operating. When using Stapling & Folding mode, the unfinished set will be left in the stacker unit inside the finisher.

### CAUTION

When the Booklet tray / Trimming unit tray capacity is exceeded, the finisher will cease operating. To avoid such trouble, select an appropriate print quantity from the specifications on p. 7-13.

### CAUTION:


When the finisher capacity is exceeded due to the print quantity selected, remove the copied sets as they exit; otherwise, mishandled paper will occur.

# Output Modes

## Output Mode for Machine without Finisher

This section describes eight output modes for a copier without the Finisher.

- ☐ Face down non-sort exit (default)
- ☐ Face down rotation sort exit
- ☐ Face down group exit
- ☐ Face down rotation group exit
- ☐ Face up non-sort exit
- ☐ Face up rotation sort exit
- ☐ Face up group exit
- ☐ Face up rotation group exit

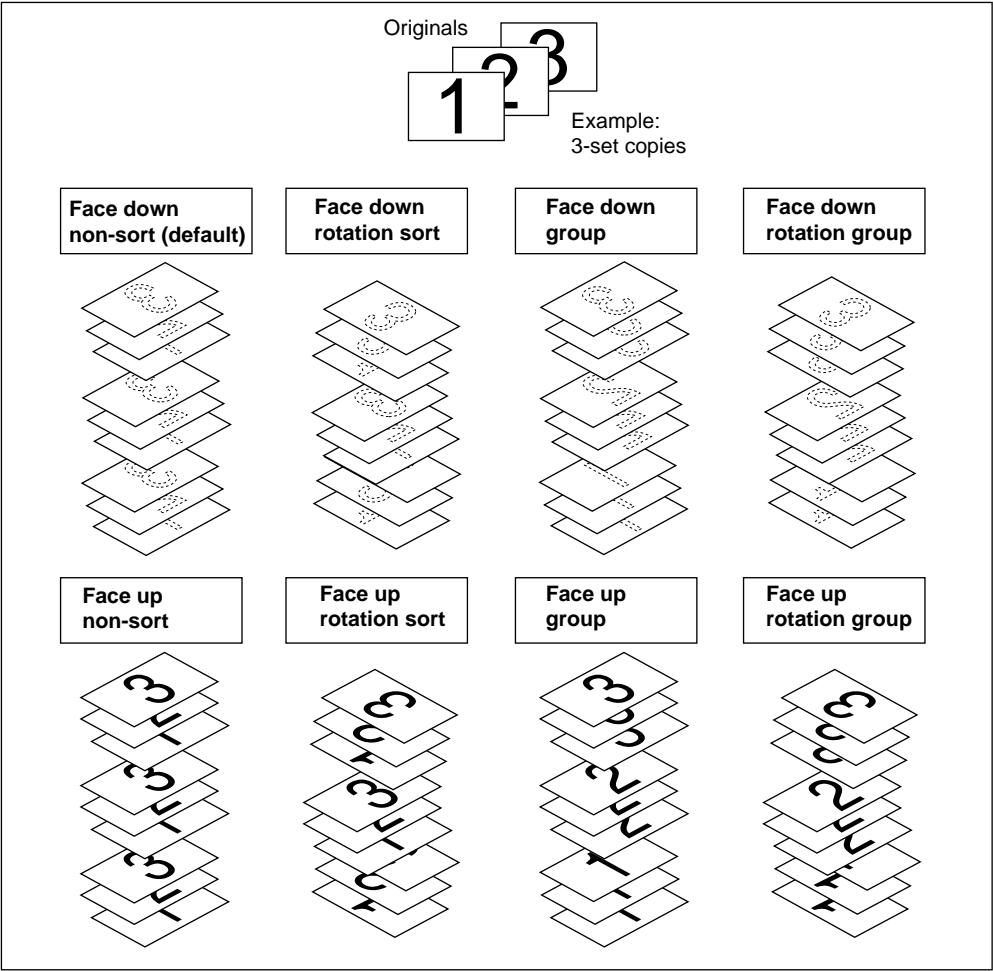


# Output Modes

## Output Mode for Machine without Finisher (continued)

### Face Down Exit

- Non-sort mode copies the original set in amounts determined by the print quantity setting, then outputs sorted sets normally.
- Rotation sort mode rotates every other sorted sets by 90° upon exit, provided the same paper size is loaded in two trays, one tray with paper loaded in crosswise orientation and the other tray with paper loaded in lengthwise orientation.
- Group mode copies each original page in amounts determined by the print quantity setting, then outputs grouped sets normally.
- Rotation group mode rotates every other grouped set by 90° upon exit, provided the the same paper size is loaded in two trays, one tray with paper loaded in crosswise orientation and the other tray with paper loaded in lengthwise orientation, e.g., 8.5"x11" and 8.5"x11"R.

Basic Screen

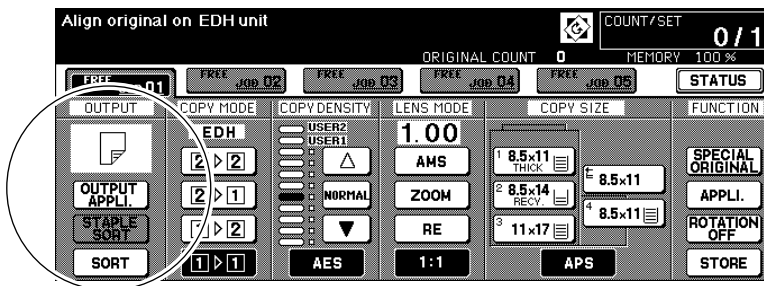

### To Set Face Down Non-Sort Exit


- 1 Confirm that the **OUTPUT APPLI.** key is not highlighted.  
If **OUTPUT APPLI.** is highlighted, touch **OUTPUT APPLI.** to display the Output Menu Screen. Select to highlight **FACE DOWN** and deselect all the other keys, then touch **OK**.
- 2 Confirm that the **SORT** key is not highlighted.  
If **SORT** is highlighted, touch **SORT** to deselect it.

# Output Modes

## Output Mode for Machine without Finisher (continued)

### Face Down Exit (continued)


Basic Screen

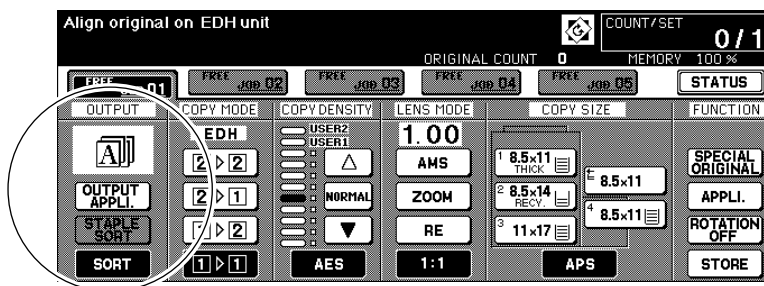


### To Set Face Down Rotation Sort Exit

- 1 Confirm that the **OUTPUT APPLI.** key is not highlighted.  
If **OUTPUT APPLI.** is highlighted, touch **OUTPUT APPLI.** to display the Output Menu Screen. Select to highlight **FACE DOWN** and deselect all the other keys, then touch **OK**.
- 2 Touch **SORT** to highlight it.

Basic Screen

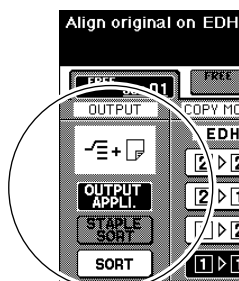

Output Menu Screen

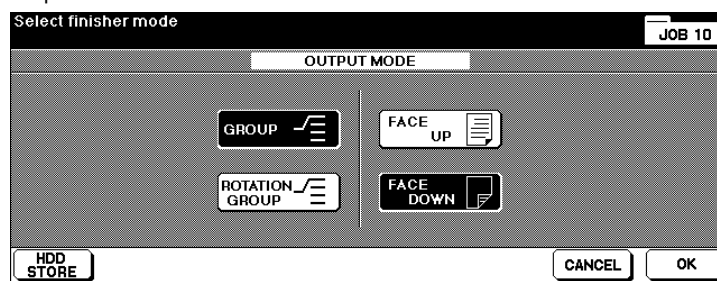


### To Set Face Down Group Exit

- 1 Touch **OUTPUT APPLI.** on the Basic Screen to display the Output Menu Screen.
- 2 Touch **GROUP** and **FACE DOWN** to highlight them.
- 3 Touch **OK** to complete the setting and return to the Basic Screen.

## Output Modes

### Output Mode for Machine without Finisher (continued)

### Face Down Exit (continued)

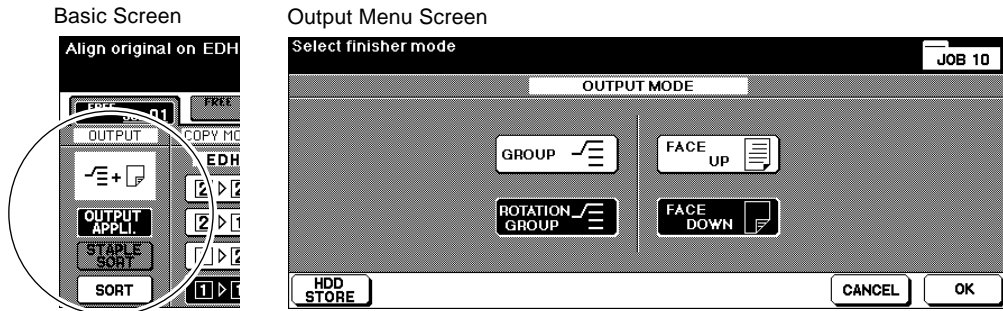

### To Set Face Down Rotation Group Exit

- 1 Touch **OUTPUT APPLI.** on the Basic Screen to display the Output Menu Screen.
- 2 Touch **ROTATION GROUP** and **FACE DOWN** to highlight them.
- 3 Touch **OK** to complete the setting and return to the Basic Screen.


# Output Modes

## Output Mode for Machine without Finisher (continued)

### Face Up Exit

Unless Face Up Exit is selected, all simplex copies and odd numbered duplex copies exit to the tray face down. When Face Up Exit is selected, all simplex copies and odd numbered duplex copies exit face up. While the Face Up Exit mode reduces the amount of paper movement, you will be required to arrange pages in the correct order, manually.

- ☐ Face up exit can be selected together with Non-sort, Rotation sort, Group, or Rotation group.
- ☐ When using the platen glass with simplex (1-1) copying, start copying from the last page first and continue in that reverse order to output the set in correct order.
- ☐ Incompatible: None
- ☐ When using the Multi-sheet bypass tray, the Face Up mode is automatically selected. To release this setting, contact your service representative.

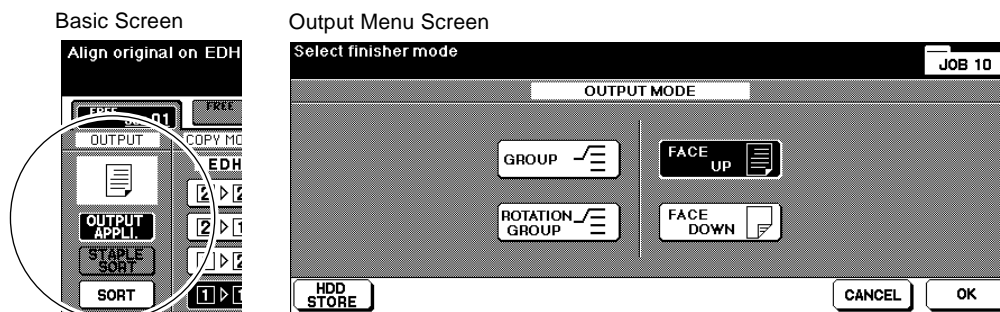


### To Set Face Up Non-Sort Exit

- 1 Confirm that the **SORT** key is not highlighted.  
If **SORT** is highlighted, touch **SORT** to deselect it.
- 2 Touch **OUTPUT APPLI.** to display the Output Menu Screen.
- 3 Touch **FACE UP** to highlight it.
- 4 Touch **OK** to complete the setting and return to the Basic Screen.

## Output Modes


### Output Mode for Machine without Finisher (continued)

#### Face Up Exit (continued)

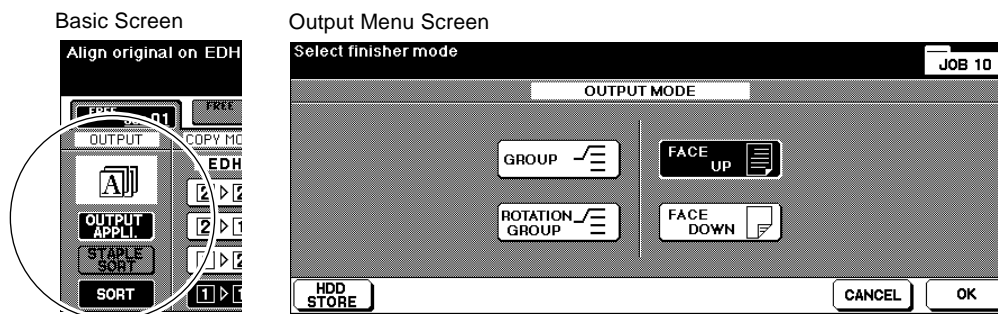

#### To Set Face Up Rotation Sort Exit

- 1 Touch **OUTPUT APPLI.** to display the Output Menu Screen.
- 2 Touch **FACE UP** to highlight it.
- 3 Touch **OK** to complete the setting and return to the Basic Screen.
- 4 Touch **SORT** to highlight it.

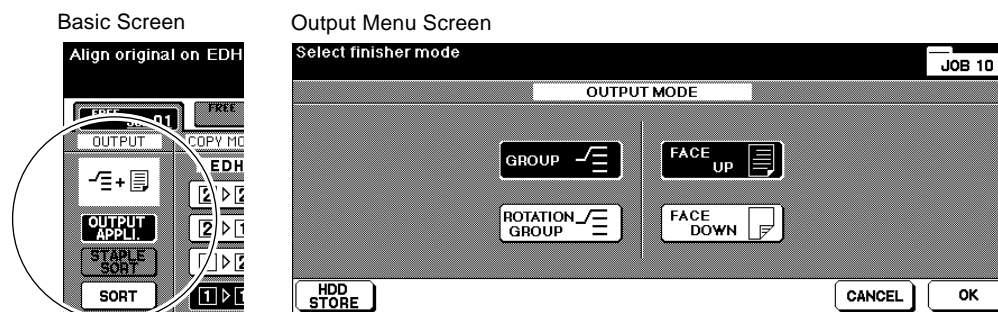

#### To Set Face Up Group Exit


- 1 Touch **OUTPUT APPLI.** to display the Output Menu Screen.
- 2 Touch **GROUP** and **FACE UP** to highlight them.
- 3 Touch **OK** to complete the setting and return to the Basic Screen.



## Output Modes

### Output Mode for Machine without Finisher (continued)

### Face Up Exit (continued)

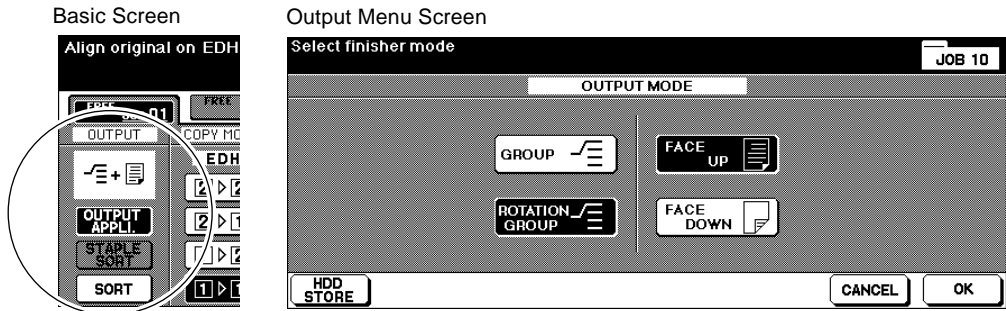

### To Set Face Up Rotation Group Exit

- 1 Touch **OUTPUT APPLI.** to display the Output Menu Screen.
- 2 Touch **ROTATION GROUP** and **FACE UP** to highlight it.
- 3 Touch **OK** to complete the setting and return to the Basic Screen.

## Section 8: Special Original

Special Original Screen

Resolution (Image Quality)

High Mode

Very High Mode

600 Dpi

Text/Photo Enhance

Special Original




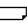






Mixed Original

Z-Folded Original

SDF (Single Document Feed)

Original Form

Select condition to scan originals JOB 10

IMAGE QUALITY	Text/Photo ENHANCE	SPECIAL ORIGINAL	ORIGINAL
Normal mode	AUTO	Normal mode	STD size
High mode 	Increase Contrast 	Mixed Original 	Non STD size 
Very High mode 	Photo 	Z-Folded original 	Tab paper 
600 dpi	Text 	SDF 	

RECALL STANDARD CANCEL OK

# Special Original

## Special Original Screen


When **SPECIAL ORIGINAL** on the Basic Screen is touched, the Special Original Screen will be displayed. If one function on the menu is incompatible with another, it will appear dimmed.

The function keys initially selected for each of four sections are highlighted. Touch and highlight the desired key to change the standard setting. Some function keys display subsequent screen when touched.


When all settings are made for each function, the **OK** key can be touched to complete the settings, and return you to the Basic Screen. With the Basic Screen displayed, you can press [Start] key to perform the operation.

To cancel the change before returning to the Basic Screen, touch **CANCEL**.

To recall the standard setting of the Special Originals, touch **RECALL STANDARD**.

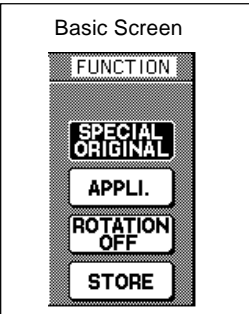

Special Original Screen

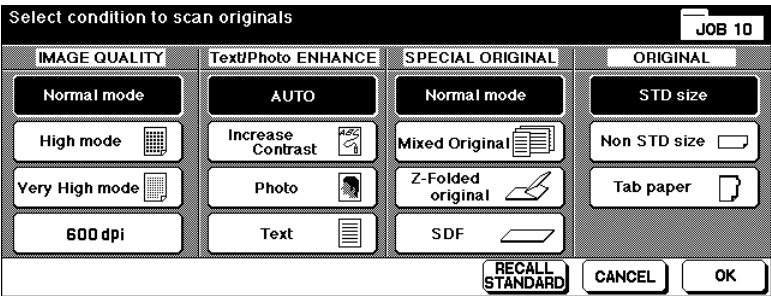

# Special Original

## Resolution (Image Quality)

Image quality in the normal default mode (400 dpi) is adequate for most copying needs. Special modes are available for jobs that require enhanced image quality, as for complex text or graphic images, or high quality photos, etc.


## High Mode

High mode sharpens the image more than the normal mode, but uses more memory than the normal default mode. Fewer originals can be copied at one time.

☐ Incompatible Copying Conditions: Storing image in Overlay Memory

NOTE: When using Program job function, selecting High or Very High mode in one JOB will be incompatible with 600dpi in another JOB. See p. 9-21 to p. 9-22.

Special Original Screen

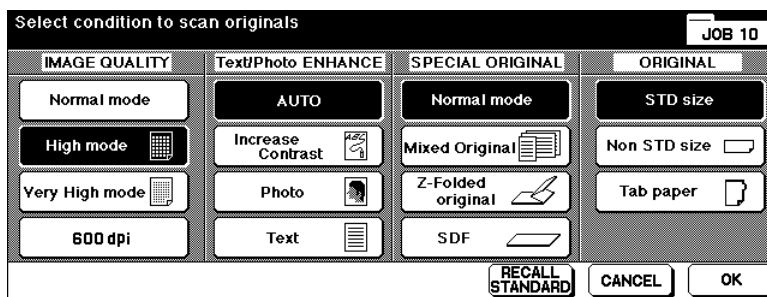

- 1 Touch **SPECIAL ORIGINAL** on the Basic Screen to display the Special Original Screen.
- 2 Touch **High mode**.
- 3 Select additional copying features, as desired.
- 4 Touch **OK** to complete the setting and return to the Basic Screen.
- 5 Make other compatible selections.
- 6 Position original(s) in the document handler or on the platen glass.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.
- 7 Press [Start].  
After copying is completed, press [Panel Reset] to release the mode and reset the machine.

# Special Original

## Resolution (Image Quality) (continued)




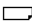






### Very High Mode

Very High mode is used for high quality photo output.

- ☐ Incompatible Basic Copying Conditions: Using EDH, Sort, Staple-Sort, 1-2, 2-2, EDH Store Mode, Reserve, Proof Copy
- ☐ Incompatible Special Originals: Mixed Original, Z-Folded Original
- ☐ Incompatible Applications: Sheet/Cover insertion, Chapter, Combination, Booklet, Image insert, Repeat, Overlay, Overlay Memory

NOTE: When using Program job function, selecting High or Very High mode in one JOB will be incompatible with 600dpi in another JOB. See p. 9-21 to p. 9-22.

Special Original Screen

Select condition to scan originals				JOB 10
IMAGE QUALITY	TextPhoto ENHANCE	SPECIAL ORIGINAL	ORIGINAL	
Normal mode	AUTO	Normal mode	STD size	
High mode 	Increase Contrast 	Mixed Original 	Non STD size 	
Very High mode 	Photo 	Z-Folded original 	Tab paper 	
600 dpi	Text 	SDF 		
				RECALL STANDARD CANCEL OK

- 1 Touch **SPECIAL ORIGINAL** on the Basic Screen to display the Special Original Screen.
  - 2 Touch **Very High mode**.
  - 3 Select additional copying features, as desired.
  - 4 Touch **OK** to complete the setting and return to the Basic Screen.
  - 5 Make other compatible selections.
  - 6 Position original(s) on the platen glass.
  - 7 Press [Start].
- After copying is completed, press [Panel Reset] to release the mode and reset the machine.

# Special Original

## Resolution (Image Quality) (continued)

### 600 Dpi

Select 600 dpi mode to improve the resolution. This mode uses more memory than the normal default mode or the High mode.

☐ Incompatible Copying Conditions: Storing image in Overlay Memory

NOTE: When using Program job function, selecting High or Very High mode in one JOB will be incompatible with 600dpi in another JOB. See p. 9-21 to p. 9-22.

Special Original Screen

The image shows a touch-screen interface titled "Select condition to scan originals" with a "JOB 10" label in the top right corner. The interface is divided into four main columns: "IMAGE QUALITY", "Text/Photo ENHANCE", "SPECIAL ORIGINAL", and "ORIGINAL".

- IMAGE QUALITY**: Contains buttons for "Normal mode", "High mode" (with a grid icon), "Very High mode" (with a grid icon), and "600 dpi" (highlighted with a dark background).
- Text/Photo ENHANCE**: Contains buttons for "AUTO", "Increase Contrast" (with a document icon), "Photo" (with a photo icon), and "Text" (with a document icon).
- SPECIAL ORIGINAL**: Contains buttons for "Normal mode", "Mixed Original" (with a document icon), "Z-Folded original" (with a folded paper icon), and "SDF" (with a document icon).
- ORIGINAL**: Contains buttons for "STD size", "Non STD size" (with a document icon), and "Tab paper" (with a document icon).

At the bottom of the screen are three buttons: "RECALL STANDARD", "CANCEL", and "OK".

- 1 Touch **SPECIAL ORIGINAL** on the Basic Screen to display the Special Original Screen.
- 2 Touch **600 dpi**.
- 3 Select additional copying features, as desired.
- 4 Touch **OK** to complete the setting and return to the Basic Screen.
- 5 Make other compatible selections.
- 6 Position original(s) in the document handler or on the platen glass.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.
- 7 Press [Start].  
After copying is completed, press [Panel Reset] to release the mode and reset the machine.

# Special Original

## Text/Photo Enhance

Use this function to enhance the reproducibility of half tone and give an image closer to that of the original.

### Text Mode

Use the Text mode when copying the text original. In this mode, text is improved in comparison to using the general mode.

### Photo Mode

Use the Photo mode to reproduce a half-tone photo image. The copy will closely represent the half-tones of the original image.

### Increase Contrast Mode

Select Increase Contrast to darken lightly printed images (e.g., pencil) without changing background exposure. In cases where the image is light and background is dark, the background will not be changed.

- ☐ Original/Copy paper: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5"
- ☐ Incompatible Copying Conditions: None

Special Original Screen


Select condition to scan originals

JOB 10

IMAGE QUALITY	Text/Photo ENHANCE	SPECIAL ORIGINAL	ORIGINAL
Normal mode	AUTO	Normal mode	STD size
High mode	Increase Contrast	Mixed Original	Non STD size
Very High mode	Photo	Z-Folded original	Tab paper
600 dpi	Text	SDF	
<div>RECALL STANDARD    CANCEL    OK</div>			

# Special Original

## Text/Photo Enhance (continued)

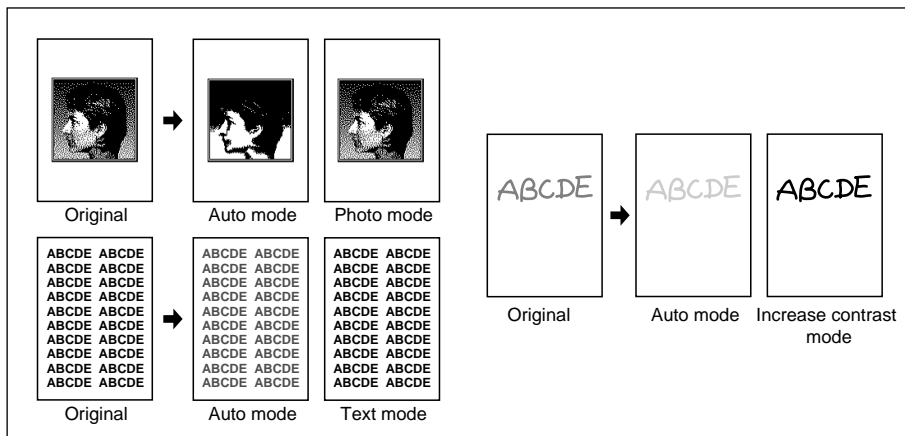

- 1 Touch **SPECIAL ORIGINAL** on the Basic Screen to display the Special Original Screen.
- 2 Touch **Text**, **Photo**, or **Increase Contrast**, as required.
- 3 Touch **OK** to return to the Basic Screen.
- 4 Select additional copying features, as desired.
- 5 Enter print quantity.
- 6 Position original(s) **FACE UP** in the document handler or **FACE DOWN** on the platen glass.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.  
Option: Press [Mode Check] to view the selection, and make a Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 7 Press [Start].  
After copying is completed, press [Panel Reset] to release the mode and reset the machine.



# Special Original


## Special Original

### Mixed Original

Use the Mixed original mode with the document feeder or with Store mode to copy ledger (11"x17"), legal (8.5"x14"), letter (8.5"x11") and 5.5"x8.5"\* or legal (8.5"x14"), letter/R (8.5"x11"R and 8.5"x11") and 5.5"x8.5"\* originals. Each original in the mixed set will be copied to paper of the same size (APS mode) or to paper of desired size with appropriate ratio automatically selected (AMS mode).

- ☐ Use EDH.
- ☐ Platen store mode is available.
- ☐ Original paper: 11"x17", 8.5"x14", 8.5"x11" and 5.5"x8.5"\* mixed (16 lb ~ 32 lb)  
8.5"x14", 8.5"x11"R, 8.5"x11" and 5.5"x8.5"\* mixed (16 lb ~ 32 lb)  
\* 5.5"x8.5" original is available in portrait type feeding only.
- ☐ EDH capacity: Max. 100 sheets
- ☐ APS is automatically selected (can be switched to AMS when copy size is selected).
- ☐ Rotation can be used with AMS.
- ☐ Incompatible Basic Copying Conditions: Staple-Sort with APS, Rotation Sort, Folding, Stapling & Folding, Trimming
- ☐ Incompatible Special Original: Resolution (Very high), Z-Folded Original, SDF, Non STD Size, Tab Paper
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Transparency Interleave, Image Insert, Book Copy, Program Job, Non-Image Area Erase, Repeat, AUTO Layout, Overlay, Storing image in Overlay Memory


Special Original Screen

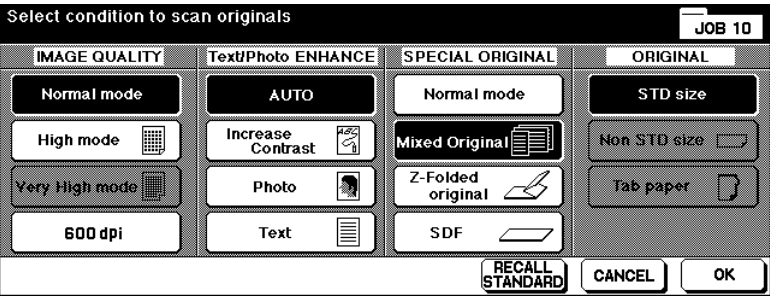

# Special Original

## Special Original (continued)

## Mixed Original (continued)

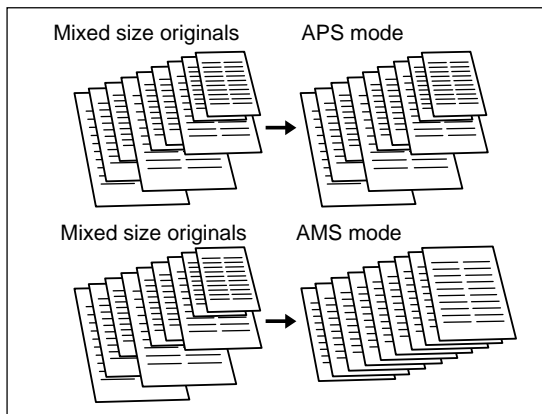

- 1 Touch **SPECIAL ORIGINAL** on the Basic Screen to display the Special Original Screen.
- 2 Touch **Mixed Original**.

3 Select additional copying features, as desired.

4 Touch **OK** to complete the setting and to return to the Basic Screen.

5 Select APS mode to copy each original size to a matching copy size in 1:1 mode; or select AMS mode to copy all originals to the same paper size, with a ratio selected automatically.

APS is automatically selected.

To select AMS, touch the tray key on the Basic Screen to select the desired copy size.

6 Enter the desired print quantity.

7 Position mixed originals FACE UP in the document handler; 11"x17", 8.5"x14", 8.5"x11" and 5.5"x8.5" mixed, or 8.5"x14", 8.5"x11"R, 8.5"x11" and 5.5"x8.5" mixed.

When using Platen store mode, see p. 6-27 to p. 6-28.

When using EDH store mode, see p. 6-29.

Option: Press [Mode Check] to view the selection, and make the Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.

8 Press [Start].

After copying is completed, press [Panel Reset] to release the mode and reset the machine.

# Special Original

## Special Original (continued)

### Z-Folded Original

Use the Z-folded original mode with the document feeder to copy Z-folded originals so as not to cause paper misfeed.

- ☐ Use EDH.
- ☐ EDH capacity: Max. 100 sheets
- ☐ Incompatible Basic Copying Conditions: Using platen glass
- ☐ Incompatible Special Original: Resolution (Very high), Mixed Original, SDF, Tab Paper
- ☐ Incompatible Applications: Non-image area erase, Repeat, AUTO layout, Storing image in Overlay Memory

Special Original Screen

The image shows a touch-screen interface titled "Select condition to scan originals" with a "JOB 10" label in the top right corner. The interface is divided into four main columns: "IMAGE QUALITY", "Text/Photo ENHANCE", "SPECIAL ORIGINAL", and "ORIGINAL".

- IMAGE QUALITY**: Contains buttons for "Normal mode", "High mode" (with a grid icon), "Very High mode" (with a grid icon), and "600 dpi".
- Text/Photo ENHANCE**: Contains buttons for "AUTO", "Increase Contrast" (with a magnifying glass icon), "Photo" (with a photo icon), and "Text" (with a document icon).
- SPECIAL ORIGINAL**: Contains buttons for "Normal mode", "Mixed Original" (with a document icon), "Z-Folded original" (with a folded paper icon), and "SDF" (with a document icon).
- ORIGINAL**: Contains buttons for "STD size", "Non STD size" (with a document icon), and "Tab paper" (with a tabbed paper icon).

At the bottom of the screen are three buttons: "RECALL STANDARD", "CANCEL", and "OK".

- 1 Touch **SPECIAL ORIGINAL** on the Basic Screen to display the Special Original Screen.
  - 2 Touch **Z-Folded Original**.
  - 3 Select additional copying features, as desired.
  - 4 Touch **OK** to complete the setting and return to the Basic Screen.
  - 5 Make other compatible selections.
  - 6 Position Z-folded original(s) in the document handler.
- NOTE: Normal originals can also be loaded at the same time.
- 7 Press [Start].

After copying is completed, press [Panel Reset] to release the mode and reset the machine.

# Special Original

## Special Original (continued)

### SDF (Single Document Feed)

Use the SDF mode to copy thick originals to be fed one sheet at a time in the document feeder.

- ☐ Use EDH.
- ☐ EDH capacity: 1 sheet at a time
- ☐ Key operator can set the machine to automatically feed the original one second after placing the original in the document handler (Auto Start), when the SDF mode is used together with Store mode. If the original has already been placed in the document handler before selecting the SDF mode, the Auto Start will not function. In this case, touch **STORE** then press [Start] to scan.
- ☐ Incompatible Basic Copying Conditions: Using platen glass, Staple-Sort, Group, Rotation Sort, Rotation Group
- ☐ Incompatible Special Originals: Mixed Original, Z-Folded Original, WHOLE AREA in Non STD Size
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Image Insert, Non-Image Area Erase, Repeat except 2/4/8 Repeat, Auto Layout, Overlay, Storing image in Overlay Memory

Special Original Screen

The image shows a touch-screen interface titled "Select condition to scan originals" with a "JOB 10" label in the top right corner. The screen is divided into four main columns: IMAGE QUALITY, Text/Photo ENHANCE, SPECIAL ORIGINAL, and ORIGINAL. Under IMAGE QUALITY, there are buttons for Normal mode, High mode (with a grid icon), Very High mode (with a grid icon), and 600 dpi. Under Text/Photo ENHANCE, there are buttons for AUTO, Increase Contrast (with a photo icon), Photo (with a photo icon), and Text (with a document icon). Under SPECIAL ORIGINAL, there are buttons for Normal mode, Mixed Original (with a document icon), Z-Folded original (with a folded paper icon), and SDF (with a document icon). Under ORIGINAL, there are buttons for STD size, Non STD size (with a document icon), and Tab paper (with a document icon). At the bottom of the screen, there are three buttons: RECALL STANDARD, CANCEL, and OK.

- 1 Touch **SPECIAL ORIGINAL** on the Basic Screen to display the Special Original Screen.
- 2 Touch **SDF**.
- 3 Select additional copying features, as desired.
- 4 Touch **OK** to complete the setting and return to the Basic Screen.
- 5 Make other compatible selections.
- 6 Position a sheet of original in the document handler.  
IMPORTANT: BE SURE TO SET ONLY ONE ORIGINAL AT A TIME.  
When using EDH store mode, see p. 6-29.

Option: Press [Mode Check] to view the selection, and make the Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.

- 7 Press [Start].  
After copying is completed, press [Panel Reset] to release the mode and reset the machine.

# Special Original


## Original Form

The copier usually detects the standard size of originals fed through EDH or positioned on the platen glass (STD size mode).


Use Non STD size mode to specify the scanning area manually for copying or printing special size originals. Use Tab paper mode to copy tabbed original including the image on the tab part onto tabbed copy paper.

- ☐ Scanning sizes in Non STD size mode: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11", 5.5"x8.5"R, A3, B4, A4R, B5, A4, B5, WHOLE AREA
- ☐ Original sizes in Tab paper mode: 8.5"x14", 8.5"x11"R, 8.5"x11", A3, B4, A4R, A4, B5
- ☐ Incompatible Basic Copying Conditions: Folding / Stapling & Folding / Trimming with Booklet
- ☐ Incompatible Special Original: Mixed Original (Non STD Size and Tab Paper cannot be selected at the same time.)
- ☐ Incompatible Applications: Combination, Booklet, Book Copy, Non-Image Area Erase, Image Shift, Storing image in Overlay Memory


Special Original Screen

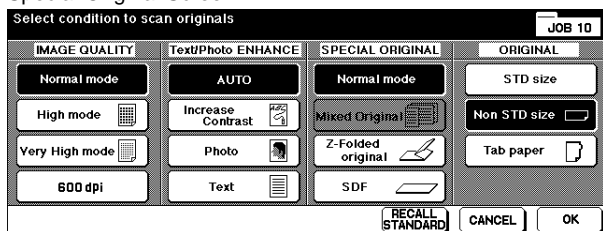

Popup menu for Non STD size mode

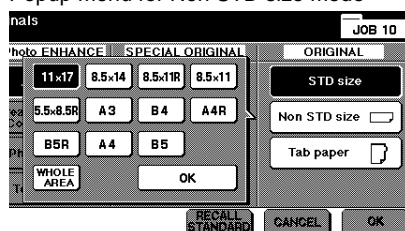

Popup menu for Tab paper mode

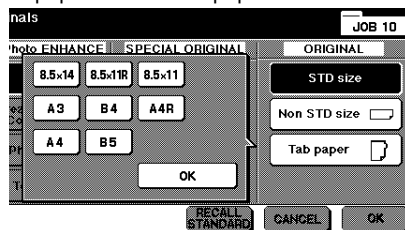

- 1 Touch **SPECIAL ORIGINAL** on the Basic Screen to display the Special Original Screen.
- 2 Touch **Non STD Size** or **Tab paper**.
- 3 Touch the desired size key. When selecting **WHOLE AREA** on the Non STD size mode menu, the copier scans the whole area of the platen glass and copies with the paper size or magnification ratio currently selected.
- 4 Touch **OK** on the popup menu of the size keys.
- 5 Touch **OK** to complete the setting and return to the Basic Screen.
- 6 Make other compatible selections.
- 7 Position original(s) **FACE UP** in the document handler, or **FACE DOWN** on the platen glass.
- 8 Press [Start]. After copying is completed, press [Panel Reset] to release the mode and reset the machine.

## Section 9 : Applications

### Application Function Menu

Sheet/Cover Insertion

Chapter

Combination

Booklet

Transparency Interleave

Image Insert

Book Copy

Program Job

Non-Image Area Erase

Reverse Image

Repeat Image

Frame/Fold Erasure

AUTO Layout

All-Image Area


Image Shift

Stamp

Overlay

Overlay Memory

To Store Overlay Image in HDD  
To Overlay Image Stored in HDD

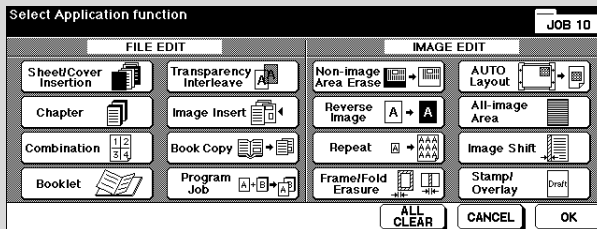

# Applications

## Application Function Menu

When **APPLI.** key on the Basic Screen is touched, the Application Selection Screen displays on the touch panel. If one function on the menu is incompatible with another, it will appear dimmed. The function always dimmed on the screen is now under development.


When a function key is touched, it becomes highlighted. If you touch a function key, another screen or two will display to enable you to enter the appropriate settings. For example, you may select Repeat from the Application Selection Screen and then choose a desired repeat image mode, another screen will display when you touch **ENTER REPEAT WIDTH BY KEYPAD**, which allows you to specify the repeat width using the touch screen keypad. Check **BOOK MARK** in the message area of the subsequent screen, if desired, so that the screen may be directly accessed from the Check Screen to change the setting you made.

When all settings are made for each function, the **OK** key can be touched to complete the settings, and return you to the Application Selection Screen. If no other Applications are desired, the **OK** key can be touched again to complete your selections, and bring you back to the Basic Screen. With the Basic Screen displayed, you can press the [Start] key to perform the operation.


To restore the original copying conditions, touch **CANCEL**.

To clear all Application settings, touch **ALL CLEAR**.

Basic Screen

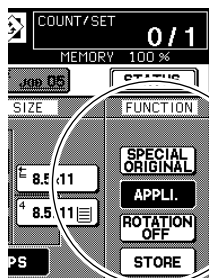

Application Selection Screen

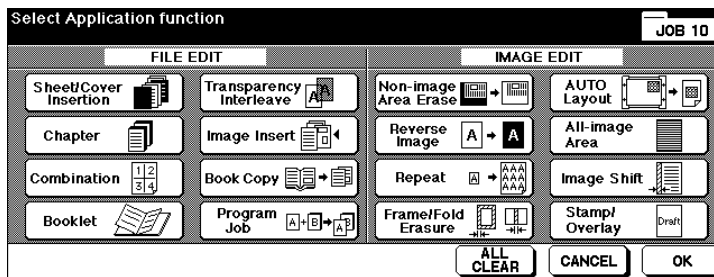

### NOTES:

- 1 The **APPLI.** key on the Basic Screen will be highlighted when application selections have been made.
- 2 When incompatible selections are made, the last key touched will be selected.
- 3 To cancel individual functions in application mode, touch the highlighted key.  
To cancel all application selections, touch **ALL CLEAR** key on the Application Selection Screen.

# Applications

## Sheet/Cover Insertion

Use Sheet/Cover Insertion in copy mode or blank mode to insert chapter sheets or separator sheets into the finished set, as well as front and back covers.

### Specifications for Sheet/Cover Insertion

- ☐ Scan and store originals into memory, then print all the pages collectively.
- ☐ Max. insert sheets: 30 locations, from 1~250, including front and back covers
- ☐ Original paper: 11"x17", 8.5"x14", 8.5"x11", 13 lb ~ 34 lb
- ☐ AMS Automatic Magnification Selection: Functions when a different copy size is selected.
- ☐ Incompatible Basic Copying Conditions: APS, Group, Folding / Stapling & Folding / Trimming with Booklet, Rotation Sort, Rotation Group
- ☐ Incompatible Special Originals: Resolution (Very high), Mixed Original, SDF, Tab Paper
- ☐ Incompatible Applications: Combination, Booklet, Transparency Interleave, Image Insert, Book Copy, Program Job, Non-Image Area Erase, Repeat, AUTO Layout, Overlay, Storing image in Overlay Memory

Sheet/Cover Insertion Screen

Select covers and/or insertion sheets.  
Enter page number to be inserted.

☐ BOOK MARK JOB 1.0  
Application  
L S/C Insertion

COVERS		INSERT(S)	PAGE SETTING (Enter by keypad)			
Bypass THICK		TRAY1 COLOR				
FRONT COPY	BACK COPY	COPY INSERT				
FRONT BLANK	BACK BLANK	BLANK INSERT				
			DELETE	SET	➡	
CHANGE OF THE COVERS TRAY		CHANGE OF THE INSERTION TRAY	CANCEL		OK	



# Applications

## Sheet/Cover Insertion (continued)

### **Insertion Mode**

This mode is classified as Copy insertion and Blank insertion. The Copy insertion mode copies and inserts plain or colored sheets at locations designated in the page setting area of the Sheet/Cover Insertion Screen. The Blank insertion mode inserts non copied (plain or colored) sheets.

The tray source for insertions can be selected and displayed on the Sheet/Cover Insertion Screen.

### **Front Cover Mode**

This mode is classified as Front copy and Front blank. The Front copy mode copies and inserts a plain or colored sheet into the finished set, as a Front cover. The Front blank mode inserts a non copied plain or colored sheet into the finished set, as a Front cover. When either Front copy or Front blank is selected, the corresponding icon will appear on the upper-left corner key in the page setting area of the Sheet/Cover Insertion Screen. The tray source will be the same as that for back cover, and can be selected and displayed on the Sheet/Cover Insertion Screen.

### **Back Cover Mode**



This mode is classified as Back copy and Back blank. The Back copy mode copies and inserts a plain or colored sheet into the finished set, as a Back cover. The Back blank mode inserts a non copied plain or colored sheet into the finished set, as a Back cover. When either Back copy or Back blank is selected, its icon will appear as the last (fixed) key, with one active blank key preceding it in the page setting area of the Sheet/Cover Insertion Screen.

The tray source will be the same as that for front cover, and can be selected and displayed on the Sheet/Cover Insertion Screen.

The insertion type can be selected separately for front cover, back cover, and insertion sheets. This allows multiple combinations, such as blank front cover and copied insertions. See the following illustration for details.

# Applications


## Sheet/Cover Insertion (continued)

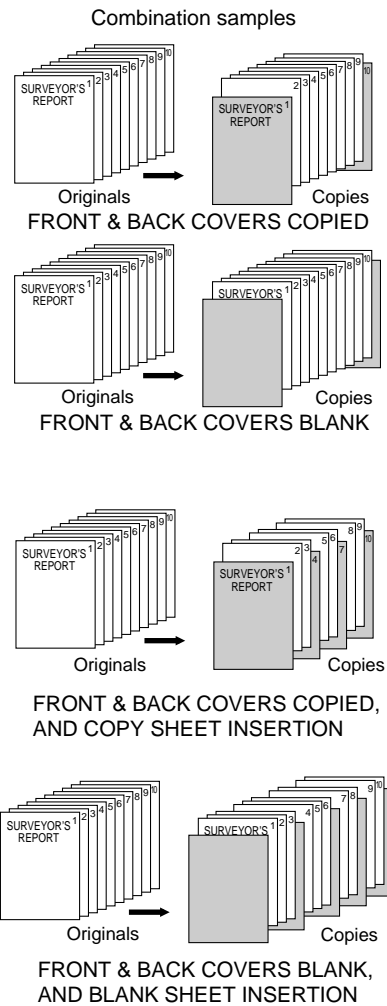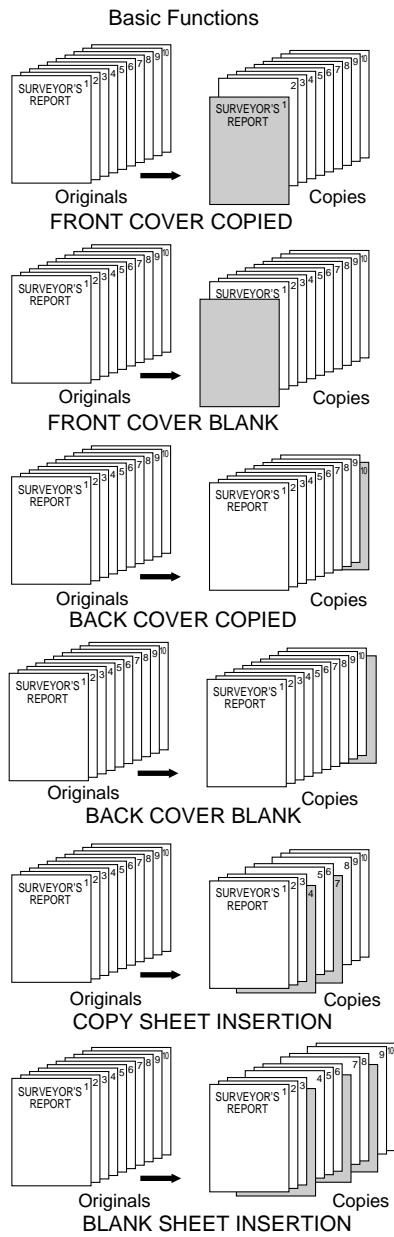


# Applications

## Sheet/Cover Insertion (continued)


Application Selection Screen

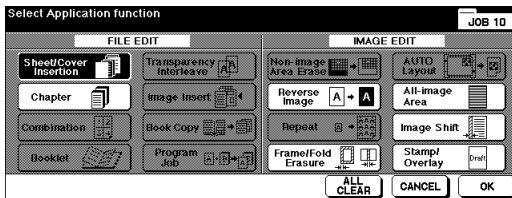

Sheet/Cover Insertion Screen

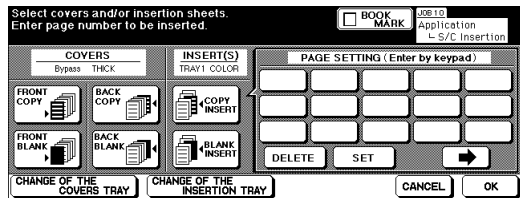

Sheet/Cover Insertion Screen  
(with FRONT COPY, BACK BLANK and COPY INSERT selected)

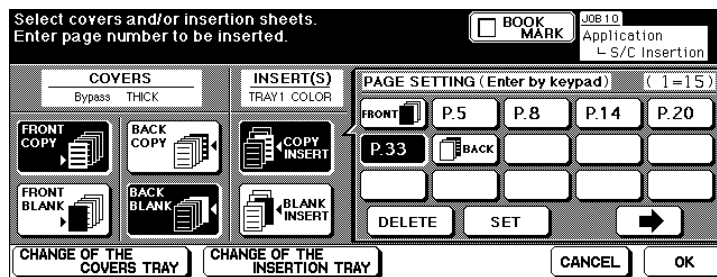

### Max. insertion locations: 30

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **Sheet/Cover Insertion** to display the Sheet/Cover Insertion Screen.
- 3 Select Front Cover Insertion, if desired.  
Touch **FRONT COPY** to insert a copied front cover, or **FRONT BLANK** to insert a blank front cover.  
Proceed to step 4 to select Back Cover Insertion, if desired.  
Proceed to step 5 to select Sheet Insertion, if desired.
- 4 Select Back Cover Insertion.  
Touch **BACK COPY** to insert a copied back cover, or **BACK BLANK** to insert a blank back cover.  
Return to step 3 to select Front Cover Insertion, if desired.  
Proceed to step 5 to select Sheet Insertion, if desired.
- 5 Select Sheet Insertion.  
Touch **COPY INSERTION** to insert copied sheets, or **BLANK INSERTION** to insert blank sheets.  
Return to step 3 to select Front Cover Insertion, if desired.  
Return to step 4 to select Back Cover Insertion, if desired.

# Applications

## Sheet/Cover Insertion (continued)

- 6 The page setting area of the Sheet/Cover Insertion Screen displays 15 keys to designate each insertion location.

The first (upper left) key displays the Front Cover icon if selected. The Back Cover icon appears, if selected, as the last (fixed) key, with one active blank key preceding it. (See the previous page.)

Use the control panel keypad to enter the page number of each insertion location.

Touch **SET** after each entry to move to the next key.

Example: If p. 4 is entered in blank mode, a blank sheet will be inserted between p. 4 and p. 5; in copy mode, a copied sheet is inserted at p. 4.

To clear an incorrect entry, touch **DELETE** or press [C]. The insertion location will be deleted.

When setting more than 15 locations, touch the arrow key to move to the next page.

NOTES:

- 1 The page numbers entered at random will be sorted automatically.
- 2 The same page number will be ignored, if entered for the second time.

- 7 The tray sources for covers and insertions currently selected are displayed on the Sheet/Cover Insertion Screen.

Touch **CHANGE OF THE COVERS TRAY** or **CHANGE OF THE INSERTION TRAY** to select another tray, if desired. Every touching the key shifts the selection in the display that includes paper type, if specified in Key operator mode.

When all settings are completed, touch **OK** to return to the Application Selection Screen.

- 8 Select additional copying features, as desired.
- 9 Touch **OK** to complete the setting and return to the Basic Screen.
- 10 Enter the desired print quantity.
- 11 Position originals FACE UP in the document handler.
- When using Platen store mode, see p. 6-27 to p. 6-28.
- When using EDH store mode, see p. 6-29.

Option: Press [Mode Check] to view the selection, and make the Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.

- 12 Press [Start].
- After copying is completed, touch **Sheet/Cover Insertion** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.


# Applications

## Chapter


Chapter is used with EDH in 1-2 or 2-2 mode for the purpose of locating title pages on the right side, rather than reverse side, of a duplex copy.

To effectively locate the title page on the right, a blank sheet will be automatically created on the reverse side of a sheet, if required.


- ☐ Title pages: Max. 30 from 1 ~ 999
- ☐ Copy mode: 1-2 mode is automatically selected. (2-2 mode can be selected.)
- ☐ Use document handler (EDH).  
Store mode is also available; in this case use platen glass or EDH.
- ☐ Use STAMP together with this function to print chapter number onto chapter page in addition to page number, numbering, or watermark numbering. See p. 9-38 to p. 9-42.
- ☐ Incompatible Basic Copying Conditions: 1-1, 2-1, Group, Rotation Sort, Rotation Group, Face Up
- ☐ Incompatible Special Originals: Resolution (High, Very high), Mixed Original, SDF, Tab Paper
- ☐ Incompatible Applications: Combination, Transparency Interleave, Image Insert, Program Job, Non-Image Area Erase, Repeat, Storing image in Overlay Memory

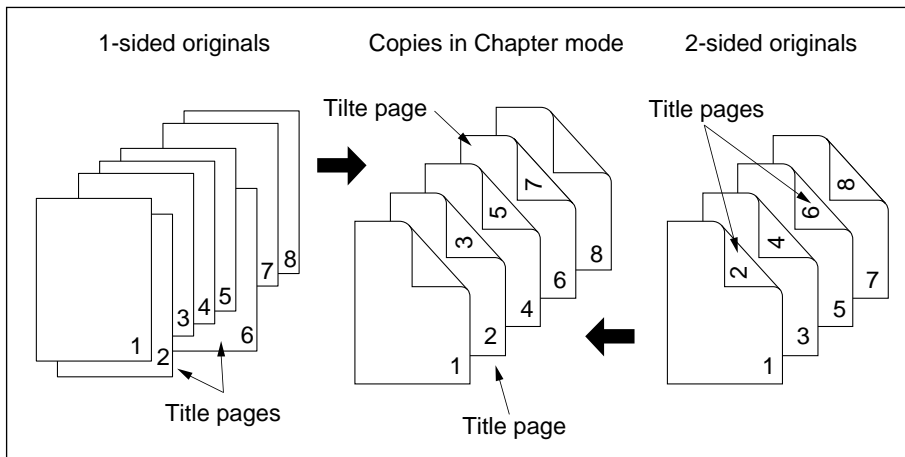

Application Selection Screen

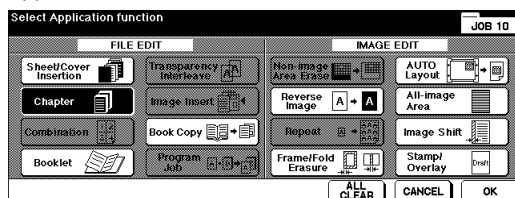

Chapter Insertion Setting No. Screen

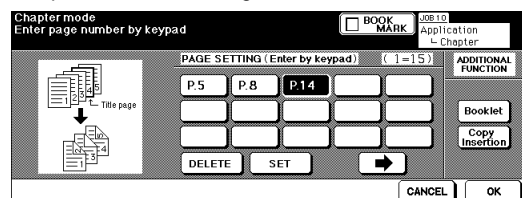

# Applications

## Chapter (continued)

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **Chapter.** The Chapter Insertion Setting No. Screen will be displayed. The 1-2 copy mode is automatically selected.
- 3 Use the keypad on the control panel to enter the page number of each title page.
- 4 Touch **SET.**  
To clear an incorrect entry, touch **DELETE** or press [C]. The insertion location will be deleted.  
To enter the correct page number, touch **SET** and use keypad.
- 5 Repeat this for each title page number you want to appear on the right hand side.  
When setting more than 15 locations, touch the arrow key to move to the next page.  
Be sure to touch **SET** after each page number entry, up to a total of 30 entries.  
Option: Touch **Booklet** on the Chapter Insertion Setting No. Screen to use this function. To change the selection of paper tray for copying title pages, touch **Copy Insertion** on the screen. In this case, you can touch **CHANGE OF THE INSERTION TRAY** to change the currently selected paper tray displayed on the screen.
- 6 When all entries are made, touch **OK** to return to the Application Selection Screen.
- 7 Select additional copying features, as desired.
- 8 Touch **OK** to complete the setting and return to the Basic Screen.
- 9 Enter the desired print quantity.
- 10 Position originals FACE UP on the document handler. 100 originals can be set.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.  
Option: Press [Mode Check] to view the selection, and make the Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 11 Press [Start].  
After copying is completed, touch **Chapter** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.

### NOTES:

- 1 Entering "0" or the same page number twice will be ignored on the screen.
- 2 Chapter insertions occur in sequence even if original page numbers are entered out of sequence.
- 3 When a page number is larger than the total original page count, insertion occurs as the last page of the document.


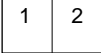










# Applications

## Combination


Use this function to lay out and copy a fixed number (2, 4, or 8) of pages onto one sheet of copy paper (2 in 1, 4 in 1, or 8 in 1).

### Combination Specifications


- ☐ Scan and store originals into memory.
- ☐ Use EDH.  
Store mode is also available; in this case use platen glass or EDH.
- ☐ AMS is automatically selected.
- ☐ Original/Copy size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11", 5.5"x8.5"
- ☐ Incompatible Basic Copying Conditions: APS, Group, Rotation Sort, Rotation Group, Folding / Stapling & Folding / Trimming with Booklet
- ☐ Incompatible Special Originals: Resolution (Very high), Mixed Original, SDF, Tab Paper
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Booklet, Transparency Interleave, Image Insert, Book Copy, Program Job, Non-Image Area Erase, Repeat, Stamp, Overlay, Storing image in Overlay Memory

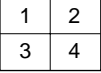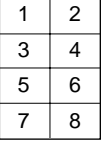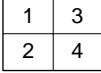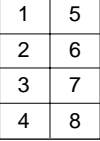Layout Original	Horizontal order			Vertical order	
	2 in 1	4 in 1	8 in 1	4 in 1	8 in 1
Crosswise type 					
Lengthwise type 					

Application Selection Screen

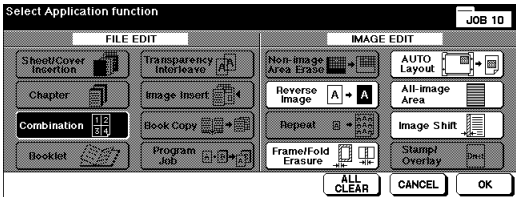

Combination Mode Selection Screen

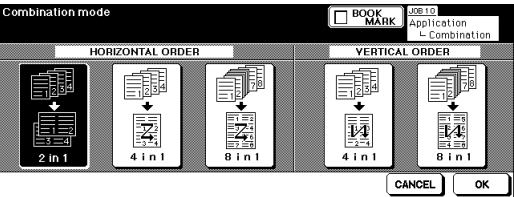

# Applications

## Combination (continued)

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **Combination** to display the Combination Mode Selection Screen.
- 3 Touch **2 in 1**, **4 in 1**, or **8 in 1** in the desired order area, referring to the illustration on the previous page.
- 4 Touch **OK** to return to the Application Selection Screen.
- 5 Select additional copying features, as desired.
- 6 Touch **OK** to complete the setting and return to the Basic Screen.
- 7 AMS is automatically selected. When selecting any tray other than the one that is set and displayed on the Basic Screen, touch the desired tray key.
- 8 Enter the desired print quantity.
- 9 Place original(s) FACE UP in the document handler.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.  
Option: Press [Mode Check] to view the selection, and make the Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 10 Press [Start].  
After copying is completed, touch **Combination** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.




# Applications


## Booklet

Use the Booklet to make a multiple page signature booklet on both sides of ledger, legal, or 8.5"x11"R paper from any tray unless it is specified as Thick 2 or Tab paper of the paper type in the Key operator mode. Original images are scanned into memory and automatically arranged in booklet format in correct order.


- ☐ Scan and store original into memory, then print all the pages collectively.
- ☐ Store up to 1500 pages in memory unless memory overflow occurs.
- ☐ Use EDH.
- Store mode is also available; in this case use platen glass or EDH.
- ☐ AMS is automatically selected.
- ☐ Copy mode: 1-2 or 2-2 mode only.
- ☐ Folding or Stapling & Folding output mode is available when copier is equipped with FN-4.
- ☐ Trimming output mode is available when the finisher is equipped with the Trimming unit TMG-1.
- ☐ Original size: One-sided or two-sided letter sheets (8.5"x11").
- ☐ Copy size: 11"x17", 8.5"x14", 8.5"x11"R
- ☐ Incompatible Basic Copying Conditions: APS, Group, Rotation Sort, Face Up, 1-1, 2-1, Cover mode in Booklet using Cover Inserter A
- ☐ Incompatible Special Originals: Resolution (Very high), Mixed Original, SDF, Tab Paper
- ☐ Incompatible Applications: Sheet/Cover Insertion, Combination, Transparency Interleave, Program Job, Non-Image Area Erase, Repeat, Storing image in Overlay Memory-
- ☐ Key operator can specify the position of page numbering of Stamp

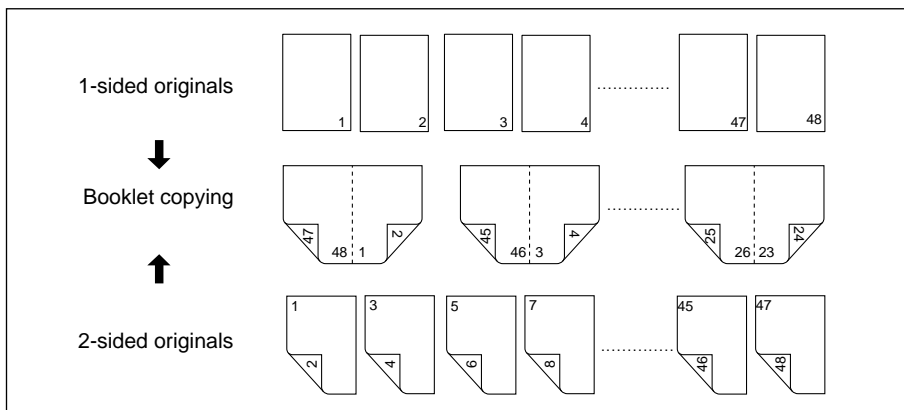

Application Selection Screen

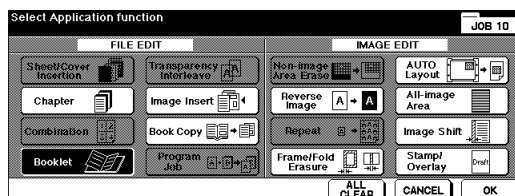

Booklet Mode Selection Screen

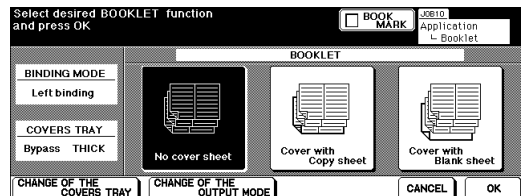

# Applications

## Booklet (continued)


- 1 Load 11"x17" or 8.5"x11"R copy paper in a tray. When selecting cover sheet mode (**COVER WITH COPY SHEET** or **COVER WITH BLANK SHEET**), load the same size paper in any other tray unless it is specified as Thick 2 or TAB of the paper type in the Key operator mode.
- 2 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 3 Touch **Booklet** to enter the Booklet Mode Selection Screen.
- 4 Touch **NO COVER SHEET**, **COVER WITH COPY SHEET**, or **COVER WITH BLANK SHEET**, as required. When a cover sheet is required, touch **CHANGE OF THE COVERS TRAY** to select the cover sheet tray source.  
Touch **CHANGE OF THE OUTPUT MODE** if you want to change the binding mode.
- 5 Touch **OK**.
- 6 Select additional copying features, as desired.
  - When using the Reduce & shift mode or Page space function of Image shift, make the binding area in the center of copies.
  - Key operator can set the machine to position the page numbers automatically on the outside edges of the copy when using Booklet with Page Numbering in Stamp. See p. 14-40 to p. 14-45.
- 7 Touch **OK** on the Application Selection Screen to complete the selections and return to the Basic Screen.
- 8 Select the **1-2** or **2-2** copy mode.
- 9 AMS is selected automatically.  
When selecting any tray other than the tray that is set and displayed on the Basic Screen, touch the desired tray key. To release AMS, select the desired magnification, then select copy size.
- 10 If the copier is equipped with FN-4 Finisher, Folding/Stapling & Folding output mode is available. Follow the procedure below.
  - (1) Touch **OUTPUT APPLI.** on the Basic Screen to display the Output Menu Screen, then touch **MAIN TRAY** to highlight it.  
Touch **STAPLING & FOLDING** or **FOLDING**, as desired.  
When selecting **STAPLING & FOLDING**, the machine with the Trimming unit installed selects **TRIM** automatically. To cancel the trimming mode, touch **TRIM** to deselect it.  
When selecting **FOLDING**, the machine with the Trimming unit installed does not automatically select **TRIM**. Touch **TRIM** to highlight it, if desired.

NOTE: Selecting **FOLDING** or **STAPLING & FOLDING** will automatically switch the output tray to Booklet tray. Notice that the arrow pointing to the **MAIN TRAY** shifts to the Booklet tray.

# Applications


## Booklet (continued)

Output Menu Screen

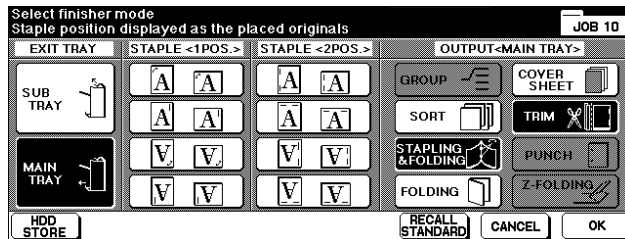

(2) Touch **OK** on the Output Menu Screen. The Basic Screen will be restored with the **OUTPUT APPLI.** highlighted.

11 Enter the desired print quantity.

12 Position letter-size originals **FACE UP** in crosswise orientation (  ) onto the document handler.

When using Platen store mode, see p. 6-27 to p. 6-28.

When using EDH store mode, see p. 6-29.

NOTE: When loading originals, heed the following limits on capacity:

Folding / Folding and Trimming mode;

6 pages or less for simplex copying

12 pages or less for duplex copying

Stapling & Folding / Stapling & Folding and Trimming mode;

32 pages or less for simplex copying

64 pages or less for duplex copying

Exceeding the above limits on capacity may cause trouble in the finisher.

Option: Press [Mode Check] to view the selection, and make the Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.

13 Press [Start].

NOTE: CLOSE THE TRIMMER STACKER COVER; otherwise the machine cannot print/copy.

DO NOT OPEN THE TRIMMER STACKER COVER DURING PRINTING/COPYING; otherwise, the machine will cease operating and a paper misfeed will occur.

After copying is completed, touch **Booklet** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.

### CAUTION

The roller drive unit is located inside the Booklet tray of the finisher. **DO NOT** put your hand into the roller drive unit when removing folded or stapled & folded sheets; otherwise, you may be injured.

# Applications


## Transparency Interleave

Use the Transparency interleave function in 1-1 or 2-1 mode to copy onto overhead projection transparencies, and output a blank or copied interleaf sheet with each copied transparency.

In the blank mode, a blank interleaf sheet is output with each transparency to keep the film material from sticking together.

In the copy mode, a copied interleaf sheet is output with each transparency to provide reference during a presentation; a medium for photocopying; and a set for filing or inserting into a binder.


- ☐ AMS is automatically selected.
- ☐ Transparency source: Multi-sheet bypass tray
- ☐ Multi-sheet bypass tray capacity: 1 transparency sheet
- ☐ Transparency size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11"
- ☐ Interleaving paper source: Tray 1, 2, 3, or 4
- ☐ Interleaving paper size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11"
- ☐ Number of originals/number of copies: 1
- ☐ Incompatible Basic Copying Conditions: APS, 1-2, 2-2, Staple-Sort, Sort, Group, Rotation Sort, Rotation Group, Folding, Stapling & Folding, Trimming, Using Cover Inserter, Tandem Mode
- ☐ Incompatible Special Originals: Mixed Original, Tab Paper
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Image Insert, Program Job, Repeat, Overlay, Storing image in Overlay Memory

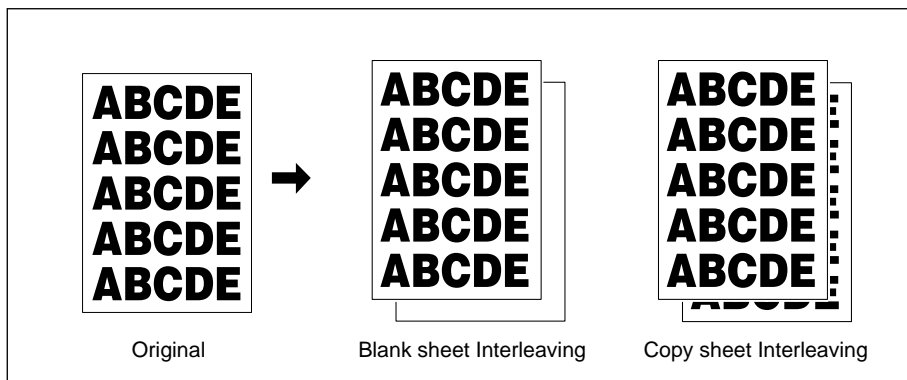


# Applications

## Transparency Interleave (continued)

Application Selection Screen

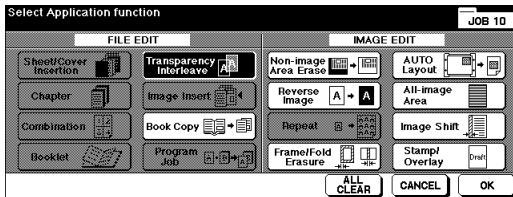

Transparency Interleave Screen

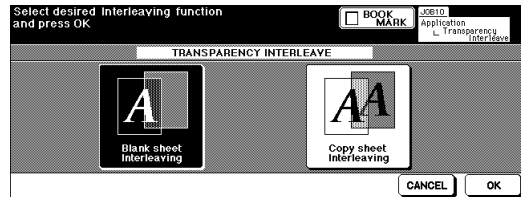

- 1 Load copy paper in tray 1, 2, 3, or 4 to match the size of transparencies.
- 2 Open the Multi-sheet bypass tray. Insert one transparency at a time into the Multi-sheet bypass tray, and adjust the paper guides.  
IMPORTANT: DO NOT LOAD TRANSPARENCIES INTO ANY OTHER TRAY.
- 3 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 4 Touch **Transparency Interleave** to display the Transparency Interleave Screen.
- 5 Touch **Blank sheet Interleaving** or **Copy sheet Interleaving**, unless it is already highlighted.
- 6 Touch **OK**.
- 7 Make additional Application selections, or touch **OK** to return to the Basic Screen.
- 8 Print quantity is already set to 1. Not available to enter any other number.
- 9 Place original FACE UP in the document handler or FACE DOWN on the platen glass.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.  
Option: Press [Mode Check] to view the selection, and make the Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 10 Press [Start].  
After copying is completed, touch **Transparency Interleave** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.


# Applications

## Image Insert

Use the Image insert mode to combine images scanned from the platen glass, such as photos, paste-ups, newspaper articles, graphs, etc., with images scanned from the document handler. Then, output the combined images as a finished set.

The selected copy paper size is determined by the size of originals loaded in the document handler.

- ☐ All images are stored in memory.
- ☐ Max. image insert: 30 locations
- ☐ Original/Copy size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11", 5.5"x8.5"
- ☐ Incompatible Basic Copying Conditions: Group, Rotation Sort, Rotation Group
- ☐ Incompatible Special Originals: Mixed Original, Resolution (Very high), SDF, Tab Paper
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Combination, Transparency Interleave, Book Copy, Program Job, Non-Image Area Erase, Repeat, AUTO Layout, Overlay, Storing image in Overlay Memory

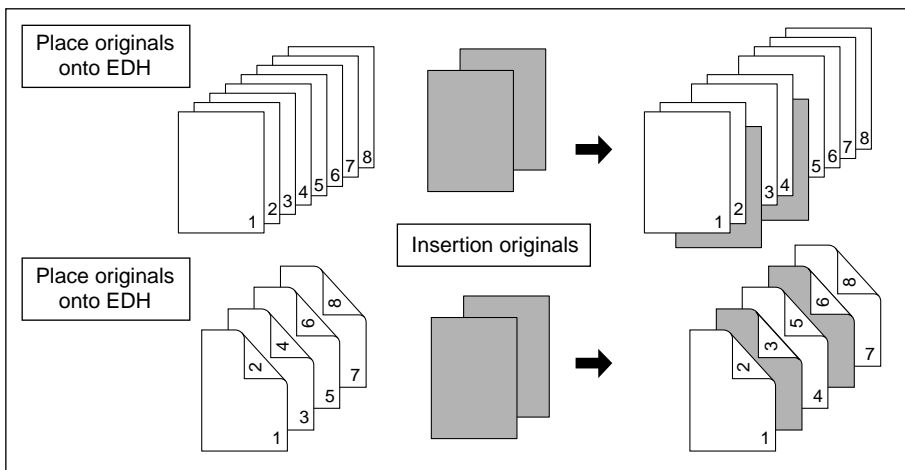

Application Selection Screen


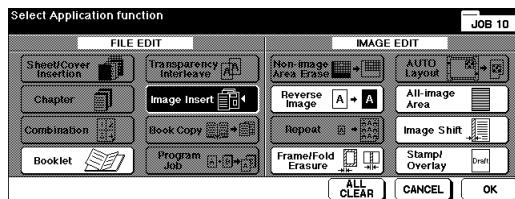


Image Insertion No. Setting Screen

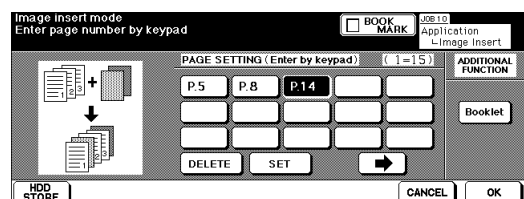

# Applications

## Image Insert (continued)

- 1 Review pages to be scanned from the document handler, and note the page number locations for inserting images scanned from the platen glass.  
To insert more than one sheet at the same location, enter the page number repeatedly. For example, if insertion locations are [2/2/6], scanned platen images will be inserted as follows:
  - The first scanned platen image will be inserted after page 2.
  - The second scanned platen image will be inserted directly after the first scanned Image insertion.
  - The third scanned platen image will be inserted after page 6.
- 2 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 3 Touch **Image Insert** to display the Image Insertion No. Setting Screen.
- 4 Use the keypad to enter the page numbers for up to 30 insertion locations, touching **SET** after each entry.
  - When a page number is larger than the total original count, a sheet is inserted as the last page.
  - Insertions occur in sequence, even if page numbers are entered out of sequence.
  - To clear an incorrect entry, touch **DELETE** or [C], then enter the correct page number.
  - When setting more than 15 locations, touch the arrow key to move to the next page.  
Option: Touch **Booklet** on the Image Insertion No. Setting Screen to use this function.
- 5 When all page number entries are made, touch **OK**. The Application Selection Screen will be restored.
- 6 Select additional copying features, as desired.
- 7 Touch **OK** to complete the setting and return to the Basic Screen. The Store mode is automatically selected.
- 8 Scan the document handler images.
  - (1) Position originals FACE UP in the document handler.
  - (2) Press [Start] to scan originals.
- 9 Enter the desired print quantity.
- 10 Scan the platen glass images.
  - (1) Open the document handler.
  - (2) Position an original FACE DOWN on the platen glass, then close the document handler.  
**IMPORTANT: PLACE AND SCAN THE ORIGINALS ACCORDING TO PAGINATION.**
  - (3) Press [Start] to scan the original.
  - (4) Remove the original, and repeat for each original.  
Be sure to press [Start] for each original.  
Option: Press [Mode Check] to view the selection, and make a Proof copy if desired; then **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 11 Start printing.
  - (1) Touch **STORE** to deselect it.
  - (2) Press [Start].After copying is completed, touch **Image Insert** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.

# Applications


## Book Copy

Use this function to copy an open book or a ledger sheet onto two 8.5"x11" sheets in 1-1 mode, or onto the front and back sides of one 8.5"x11" sheet in 1-2 mode. If you select another copy size, image division will perform incorrectly.


The following three modes can be selected from the Book Copy Screen.

- 1 Full Scan mode: Image division Starts from the first scan.
- 2 Front Cover + Full Scan mode: Image division Starts from the second scan, after the first scan copies normally.
- 3 Front/Back Cover + Full Scan mode: Image division Starts from the third scan, after the first and second scan copy normally.


- ☐ Scan and store originals into memory, then print all pages collectively.
- ☐ Original size: Max. 11"x17" (ledger) sheet or open book
- ☐ Copy paper size: 8.5"x11" (letter)
- ☐ Incompatible Basic Copying Conditions: APS, AMS, Rotation Sort, Rotation Group, Folding / Stapling & Foldings / Trimming with Booklet
- ☐ Incompatible Special Originals: Mixed Original, Tab Paper
- ☐ Incompatible Applications: Sheet/Cover Insertion, Combination, Image Insert, Program Job, Repeat, Reduce & Shift in Image Shift, Overlay, Storing image in Overlay Memory

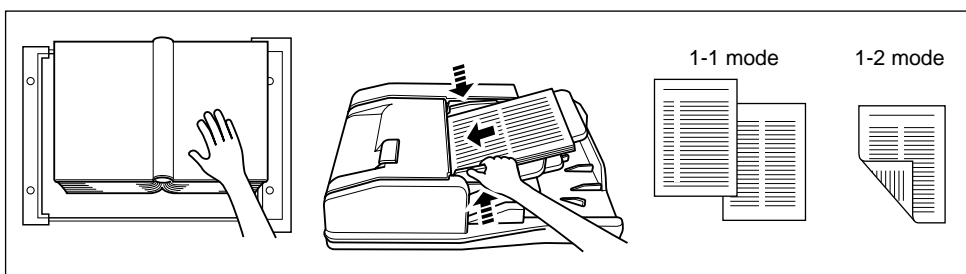

Application Selection Screen

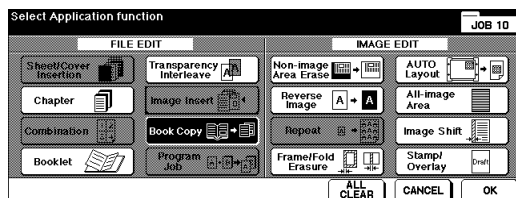

Book Copy Screen

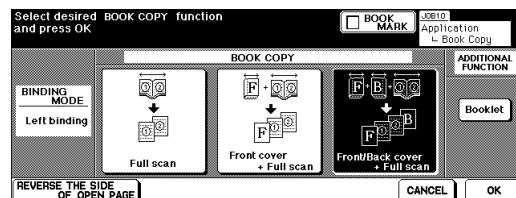



# Applications

## Book Copy (continued)

- 1 Load 8.5"x11" sheets in a tray or in the Multi-sheet bypass tray.
- 2 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 3 Touch **Book Copy** to enter the Book Copy Screen. AUTO layout and Non-image area erase will be automatically selected. (Available to be released.)
- 4 Touch **Full scan**, **Front cover + Full scan**, or **Front/Back cover + Full scan**, as required. Touch **REVERSE THE SIDE OF OPEN PAGE** to change the binding mode according to the original.

Option: Touch Booklet on the Book Copy Screen to use this function.

- 5 Touch **OK** to return to the Application Selection Screen.
- 6 Make additional application selections, or touch **OK** to return to the Basic Screen. The Store mode is automatically selected.
- 7 Select the copy mode (1-1 or 1-2).
- 8 Enter the desired print quantity.
- 9 Position the open book or sheet on the platen glass in the right rear corner, aligning the edge with the right measuring guide.

If **Full scan** is selected and the originals can be loaded in the document handler, EDH store mode is also available. If desired, position originals into the document handler.

Option: Press [Mode Check] to view the selection and make a Proof copy; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.


- 10 Press [Start] to Start scanning.
- 11 Remove the first original(s). Repeat the procedure for subsequent originals, pressing [Start] for each original.  
When **Front cover + Full scan** or **Front/Back cover + Full scan** is selected, only the front and back covers are required to be scanned from the platen glass. If you want to use EDH store mode for scanning the rest of the originals, close the document handler and position originals, then press [Start].
- 12 Touch **STORE** to deselect the store mode, then press [Start] to print.  
After copying is completed, touch **Book copy** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.

# Applications

## Program Job

In the ordinary Store mode, the combined features selected for the job are applied to all originals to be scanned. In the Program Job mode, you may scan multiple sets of originals and apply different settings on each set (referred to as JOB), then output them all as a complete set.


- ☐ Scan and store originals into memory, then print all the pages collectively.
- ☐ Max. 100 JOBS can be programmed for an output job.
- ☐ Available original sizes vary conforming to copy conditions selected for each JOB.
- ☐ Copy size specified for the first JOB cannot be changed. Only the trays containing the same paper size can be designated for subsequent JOBS.  
Once specified, paper type/size setting for Multi-sheet bypass tray cannot be changed for another JOB.
- ☐ Output mode settings cannot be specified for each JOB. The last settings made will be applied to all JOBS.
- ☐ Print quantity cannot be specified for each JOB. Entered quantity will be the number of complete copied sets and can be changed anytime before printing.
- ☐ The image data scanned into memory using Program Job mode can be stored in HDD using Image Store & Output Mode in server function. See p. 11-7 to p. 11-8.
- ☐ Program Job settings cannot be stored in Program Memory.
- ☐ Incompatible Basic Copying Conditions: APS, Change copy size, Rotation, Group, Rotation Sort, Rotation Group, Folding, Stapling & Folding, Trimming, Server function
- ☐ Incompatible Special Originals: Using Normal/High/Very High with 600dpi, Mixed Original
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Transparency Interleave, Image Insert, Book Copy, 2/4/8 Repeat in Repeat, Overlay, Storing image in Overlay Memory

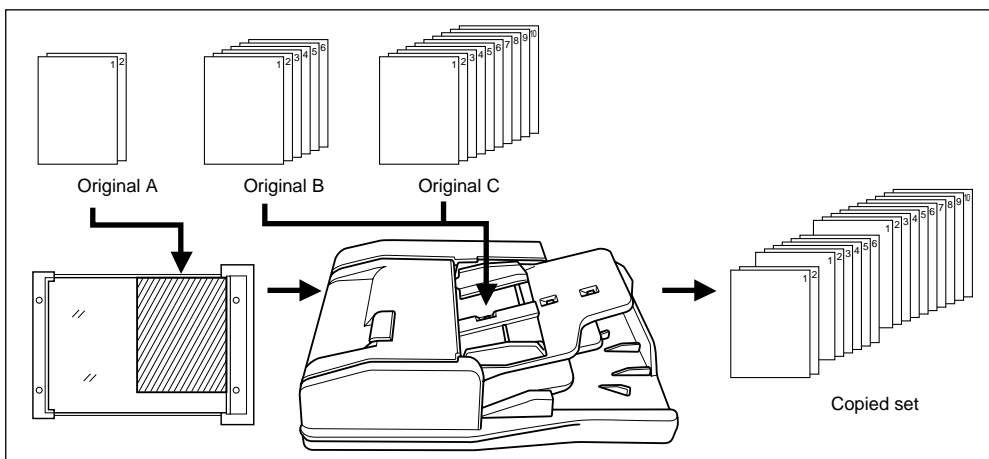


# Applications

## Program Job (continued)

Application Selection Screen

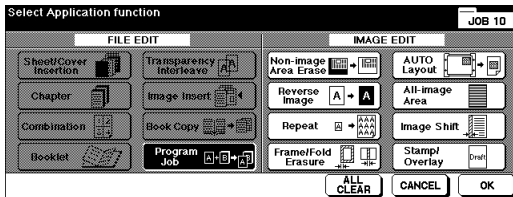

Basic Screen

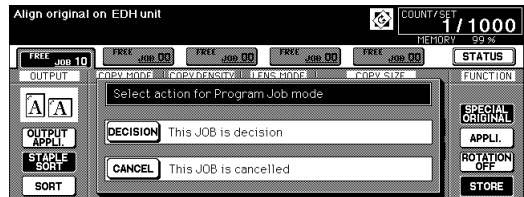


- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **Program Job**. The incompatible function keys will be dimmed to show inactivity.
- 3 Select additional copying features, as desired.
- 4 Touch **OK** to complete the setting and return to the Basic Screen.
- 5 Store mode is selected automatically. Select basic copying and special original features on the Basic Screen and Special Original Screen, as desired.
- 6 Position original(s) FACE UP in the document handler or FACE DOWN on the platen glass, select the tray you want to use, then press [Start] to scan.
- 7 When scanning for the current JOB is completed, the popup menu will be displayed in the Basic Screen.  
To store the current JOB images, touch **DECISION**.  
To delete the images, touch **CANCEL**.
- 8 Repeat steps 3 to 7 until all JOB originals are scanned.  
IMPORTANT: PLACE AND SCAN EACH ORIGINAL SET IN THE CORRECT ORDER OF PAGINATION.
- 9 Select the desired output mode.
- 10 Enter the desired print quantity.
- 11 Touch **STORE** on the Basic Screen to exit the Store mode.  
To delete the scanned data without printing, press [Stop], then touch **CANCEL** on the popup menu to ensure that you delete the data.
- 12 Press [Start]. The copier Starts the printing job.  
After copying is completed, press [Panel Reset] to release the mode and reset the machine.

# Applications

## Non-Image Area Erase

The Non-image area erase mode is used to copy non standard or special originals, such as books, magazines, paste-ups, graphs, thin or thick materials, etc. from the platen glass. The exposed glass area outside the borders of the original will not be copied. This mode helps to preserve the condition of originals; improves copy quality, and eliminates unnecessary toner consumption. Keep the document cover open throughout the procedure.

The Non-image area erase has two modes; namely, Rectangular erase mode and Oblique erase mode. The copier is initially set to Rectangular erase mode. Contact your service representative if you desire the Oblique erase mode.

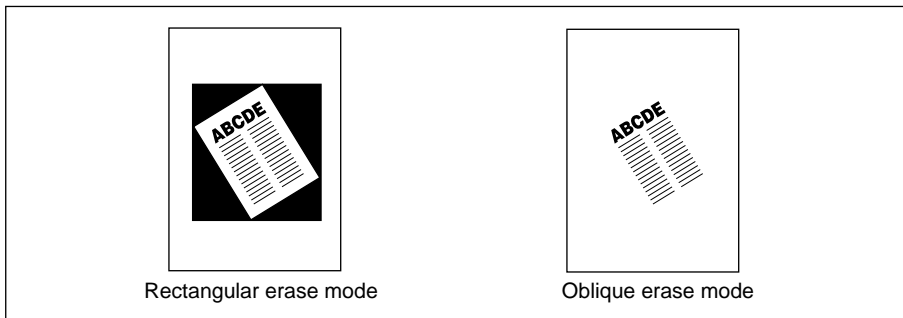


- ☐ Copy mode: 1-1 mode only (when using Store mode, 1-2 mode can be selected.)
- ☐ Use the platen glass only.
- ☐ Original size: 11"x17" ~ 10mm x 10mm
- ☐ Image cutoff width: leading end 5mm, trailing end 4mm, top and bottom 2mm.
- ☐ Incompatible Basic Copying Conditions: Using EDH, APS, AMS, Rotation, 2-2, 2-1, Rotation Sort, Rotation Group, Folding, Stapling & Folding, Trimming
- ☐ Incompatible Special Originals: Mixed Original, Z-Folded Original, SDF
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Image Insert, Book Copy in EDH Store mode, Reverse Image, All-Image Area, Reduce & Shift in Image Shift, Storing image in Overlay Memory


NOTE: The Non-image area erase function may not operate properly if the lighting in the work place is directly over the platen glass. In this case, consult your service representative about an appropriate place for installation.

# Applications

## Non-Image Area Erase (continued)

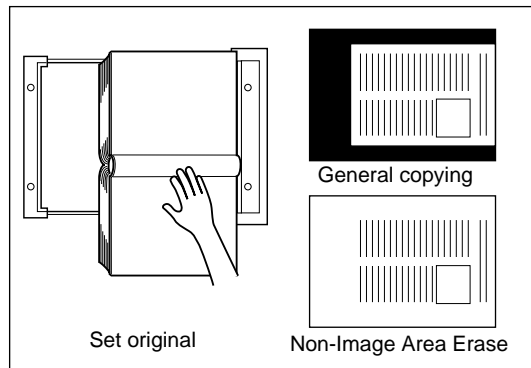

Application Selection Screen

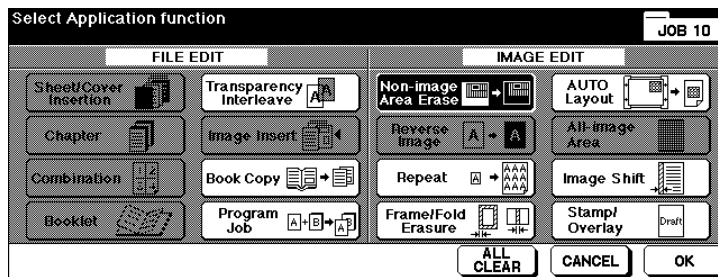

1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.

2 Touch **Non-image Area Erase.**

3 Select additional copying features, as desired.

4 Touch **OK** to complete the setting and return to the Basic Screen.

5 Enter print quantity.

6 Position original(s) **FACE DOWN** on the platen glass.

**IMPORTANT: KEEP THE DOCUMENT HANDLER OPEN THROUGHOUT THE PROCEDURE.**

When using Platen store mode, see p. 6-27 to p. 6-28.

Option: Press [Mode Check] to view the selection, and make a Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.

7 Press [Start].

After copying is completed, touch **Non-image Area Erase** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.



# Applications

## Reverse Image

Use Reverse image to reverse the image from black-on-white to white-on-black, and vice versa.

- ☐ Original/Copy paper: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x8.5"
- ☐ Incompatible Basic Copying Conditions: Folding, Stapling & Folding, Trimming
- ☐ Incompatible Special Originals: None
- ☐ Incompatible Applications: Non-Image Area Erase, Repeat, All-Image Area, Overlay Memory

Application Selection Screen

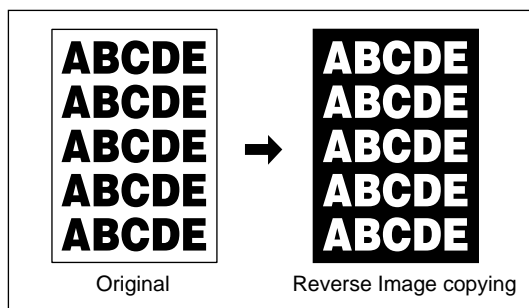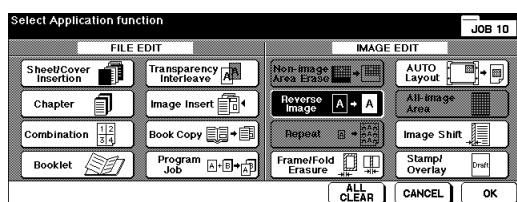

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **Reverse Image**.
- 3 Select additional copying features, as desired.
- 4 Touch **OK** to complete the setting and return to the Basic Screen.
- 5 Enter print quantity.
- 6 Position original(s) **FACE UP** in the document handler or **FACE DOWN** on the platen glass.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.  
Option: Press [Mode Check] to view the selection, and make a Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 7 Press [Start].  
After copying is completed, touch **Reverse Image** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.

# Applications

## Repeat Image

Use Repeat image to create labels, business cards, tickets, etc., by repeating the selected image down the page.

### **Vertical/Horizontal Width Setting mode**

Repeat the selected image area of 10mm ~ 150mm in both vertical and horizontal widths measured from the rear right corner of the 11"x17" original area indicated on the right edge of the platen glass.

### **Auto Detection mode**

Selecting this mode will automatically set the equal repeat area to the size of the original placed onto the platen glass by activating Non-image area erase.

### **Repeat mode**

Select the repeating times of the original to be arranged in one copy sheet.

#### ☐ **Vertical/Horizontal Width Setting Mode Specifications**

Use the platen glass. (Document handler cannot be used.)

Repeat width: 10~150mm (in 1mm increments)

Copy mode: 1-1 mode only (When selecting 1-2 mode, Platen store mode will function automatically.)

#### ☐ **Auto Detection Mode Specifications**

Use the platen glass. Non-Image Area Erase will function automatically.

Scanning area: 11"x17" ~ 10mm x 10mm

Repeat image area: Original image area detected by Non-Image Area Erase

Copy mode: 1-1 mode only (When selecting 1-2 mode, Platen store mode will function automatically.)

#### ☐ **Repeat Mode Specifications**

Magnification ratio: Set to 1.00 (100 %) automatically. Magnification can be changed, however, Rotation will not function when changed.

Scanning area: 11"x17" ~ 10mm x 10mm

Repeat image area: A portion of the selected copy size equally divided according to the mode (2, 4, or 8 Repeat) designated on the screen. If detected image size is larger than the size figured out as above, the copy result may not be satisfactory.

#### ☐ **Incompatible Conditions with Vertical /Horizontal Width Setting Mode**

Basic copying conditions: Using EDH, Rotation, 2-2, 2-1, APS, AMS, Group, Rotation Sort, Rotation Group

Special Originals: Resolution (Very high), Mixed Original, Z-Folded Original, SDF

Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Transparency Interleave, Image Insert, Book Copy, Non-Image Area Erase, Reverse Image, Frame/Fold Erasure, AUTO Layout, Image Shift, Overlay, Storing image in Overlay Memory

#### ☐ **Incompatible Conditions with Auto Detection Mode**

Basic copying conditions: Using EDH, Rotation, 2-2, 2-1, APS, AMS, Group, Rotation Sort, Rotation Group

Special Originals: Resolution (Very high), Mixed Original, Z-folded Original, SDF

Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Transparency Interleave, Image Insert, Book Copy, Reverse Image, Frame/Fold Erasure, AUTO Layout, All-Image Area, Image Shift, Overlay, Storing image in Overlay Memory

# Applications

## Repeat Image (continued)


### ❑ Incompatible Conditions with Repeat Mode

Basic copying conditions: Rotation (when magnification is changed from 1.00), APS, AMS, Group, Rotation Sort, Rotation Group


Special Originals: Resolution (Very high), Mixed Original, Z-folded Original

Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Transparency Interleave, Image Insert, Book Copy, Non-image Area Erase, Reverse Image, Frame/Fold Erasure, AUTO Layout, Image Shift with 4/8 Repeat, Overlay, Storing image in Overlay Memory


NOTE: The Auto Detection and Repeat mode of the Repeat image function may not operate properly if the lighting in the work place is directly over the platen glass. In this case, consult your service representative about an appropriate place for installation.

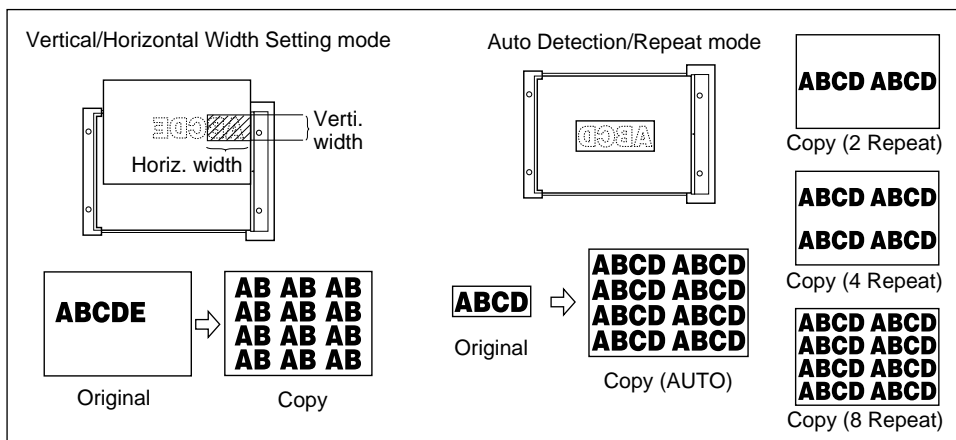

Application Selection Screen

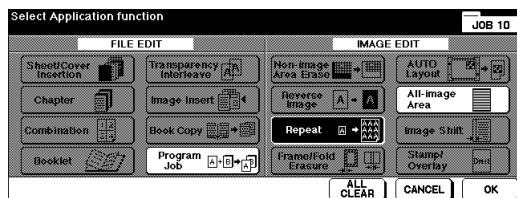

Repeat Mode Selection Screen

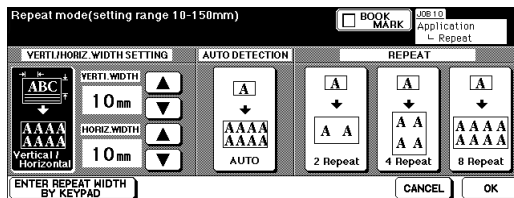

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **Repeat** to display the Repeat Mode Selection Screen.



# Applications

## Repeat Image (continued)


3 To select the Vertical/Horizontal width setting mode:

(1) Touch **Vertical/Horizontal**.

(2) Specify the vertical and horizontal widths of the scanning area using up/down arrow key, from 10~150 mm in 1 mm increments. Keep touching the key to increase/decrease the value continuously.

Or, touch **ENTER REPEAT WIDTH BY KEYPAD** to display the popup screen to enter the value from the touch screen keypad. Touch **Verti./Horiz** key on the popup screen each time to shift it from one to another. Touch **OK** to restore the Repeat Mode Selection Screen

Repeat Mode Selection Screen (with popup screen displayed)

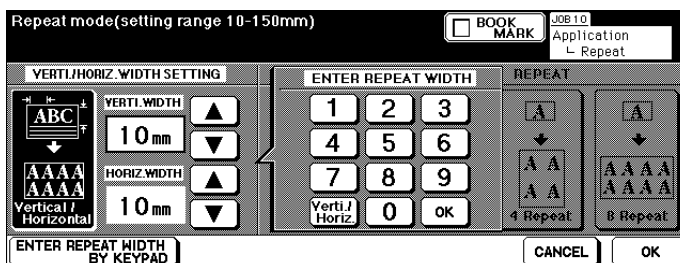

To select the Auto detection mode, touch **AUTO**. Non-image area erase will function automatically.

To select the Repeat mode, touch **2 Repeat**, **4 Repeat**, or **8 Repeat**, as desired.

4 Touch **OK** to return to the Application Selection Screen.

5 Select additional copying features, as desired.

When 2 Repeat mode is selected, Page space function of Image shift can be used to make the desired amount of blank space between the two images on a page. See p. 9-34 to p. 9-37.

6 Touch **OK** to complete the setting and return to the Basic Screen.

7 Enter the desired print quantity.

8 Position original(s) **FACE DOWN** on the platen glass.

**IMPORTANT: DO NOT CLOSE THE DOCUMENT HANDLER WHEN AUTO, 2 REPEAT, 4 REPEAT, OR 8 REPEAT IS SELECTED IN STEP 3.**

When using Platen store mode, 1-2 mode can be selected. See p. 6-27 to p. 6-28.

Option: Press [Mode Check] to view the selection, and make a Proof copy if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.

9 Press [Start].

After copying is completed, touch **Repeat** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.


# Applications

## Frame/Fold Erasure



Use Frame/Fold Erasure to eliminate black copy marks along borders.

- ☐ Frame erasure amount: 1~15 mm in 1 mm increments
- ☐ Initial frame erasure value: 10 mm
- ☐ Fold erasure amount: 1~30 mm in 1 mm increments
- ☐ Initial fold erasure value: 10 mm
- ☐ Original/copy paper size: 11"x17", 8.5"x14", 8.5"x11"
- ☐ Incompatible Basic Copying Conditions: None
- ☐ Incompatible Special Originals: None
- ☐ Incompatible Applications: Repeat, All-Image Area

Application Selection Screen

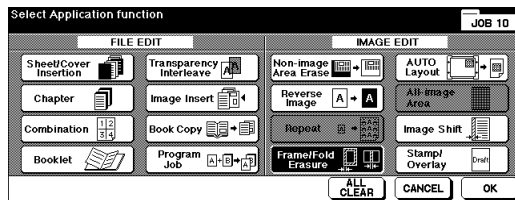

Frame/Fold Erasure Selection Screen

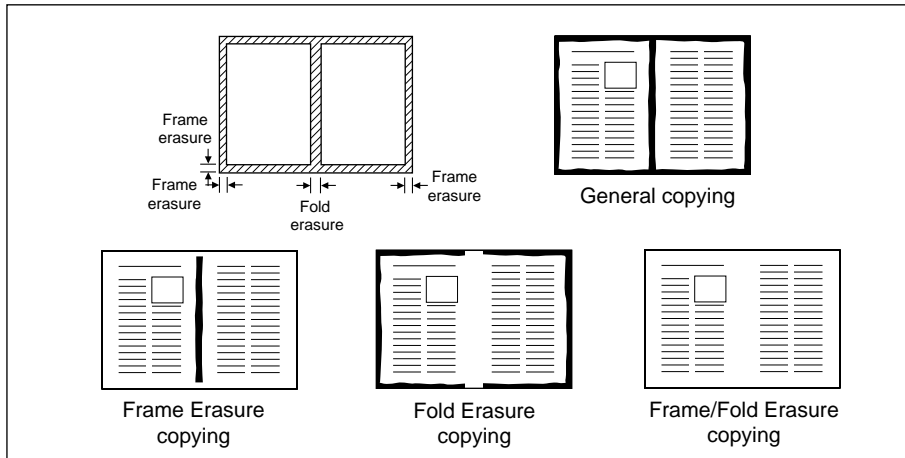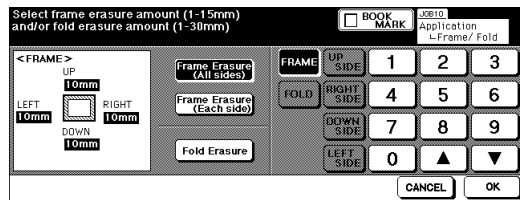

# Applications

## Frame/Fold Erasure (continued)

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **Frame/Fold Erasure** to display the Frame/Fold Erasure Selection Screen.
- 3 Touch **Frame Erasure (All sides)** or **Frame Erasure (Each side)**. Touch **Fold Erasure** to use the Fold erasure mode.
  - Touch **Frame Erasure (All sides)** to enter the frame erasure amount of the up, down, right and left sides collectively using the touch screen keypad or up/down arrow key, from 1~15mm.
  - Touch **Frame Erasure (Each side)** to enter the frame erasure amount of the up, down, right or left side individually. Touch **UP SIDE**, **RIGHT SIDE**, **DOWN SIDE**, or **LEFT SIDE**, then use the touch screen keypad or up/down arrow key to enter the desired amount, from 1~15mm.
  - To enter the fold erasure amount, touch **Fold Erasure**, then touch **FOLD**. Use the touch screen keypad or up/down arrow key to enter the desired amount, from 1~30mm.

Frame/Fold Erasure Selection Screen  
(with Each side selected)

Select frame erasure amount (1-15mm)  
and/or fold erasure amount (1-30mm)

BOOK MARK JOB10 Application L-Frame/ Fold

<FRAME> UP 10mm  
LEFT 0mm RIGHT 0mm  
DOWN 0mm

Frame Erasure (All sides)  
Frame Erasure (Each side)  
Fold Erasure

FRAME UP SIDE 1 2 3  
FOLD RIGHT SIDE 4 5 6  
DOWN SIDE 7 8 9  
LEFT SIDE 0 ▲ ▼

CANCEL OK

Frame/Fold Erasure Selection Screen  
(with FOLD selected)

Select frame erasure amount (1-15mm)  
and/or fold erasure amount (1-30mm)

BOOK MARK JOB10 Application L-Frame/ Fold

<FRAME> UP 10mm  
LEFT 0mm RIGHT 0mm  
DOWN 0mm

Frame Erasure (All sides)  
Frame Erasure (Each side)  
Fold Erasure

FRAME UP SIDE 1 2 3  
FOLD RIGHT SIDE 4 5 6  
DOWN SIDE 7 8 9  
LEFT SIDE 0 ▲ ▼

<FOLD> 30mm

CANCEL OK

- 4 Touch **OK** to complete the setting. The Application Selection Screen will be displayed.
- 5 Touch **OK** to return to the Basic Screen or make additional application selections.
- 6 Select desired Copy Size.
- 7 Enter desired print quantity.
- 8 Position original(s) FACE UP in the document handler or FACE DOWN on the platen glass.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.
- Option: Press [Mode Check] to view the selection, and make a Proof copy if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 9 Press [Start].  
After copying is completed, touch **Frame/Fold Erasure** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.

NOTE: While copy size and original size generally should be the same, it is possible to use Frame/Fold Erasure to copy an 11"x17" original to 8.5"x11"R by selecting 0.65 reduction after selecting Copy Size.


# Applications

## AUTO Layout


Use this function to detect the image area of the original and center the whole image on the copy paper.

- ☐ Copy mode is automatically set to 1-1; 1-2 mode is also available only when using Store mode.
- ☐ APS and AMS are automatically released. Changing Magnification is available.
- ☐ Non-image area erase is automatically selected. (Release it manually when using EDH to scan originals.)
- ☐ Original/Copy size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11", 5.5"x8.5"
- ☐ Incompatible Basic Copying Conditions: APS, AMS, Rotation Sort, Rotation Group, Folding or Stapling & Folding with Booklet
- ☐ Incompatible Special Originals: Mixed Original, Z-folded Original, SDF
- ☐ Incompatible Applications: Sheet/Cover Insertion, Combination, Booklet, Image Insert, Reverse Image, Repeat, All-Image Area, Image Shift, Overlay, Storing image in Overlay Memory

NOTE: The AUTO layout function may not operate properly if the lighting in the work place is directly over the platen glass. In this case, consult your service representative about an appropriate place for installation.

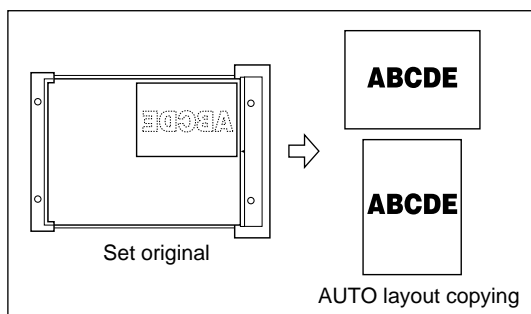

Application Selection Screen

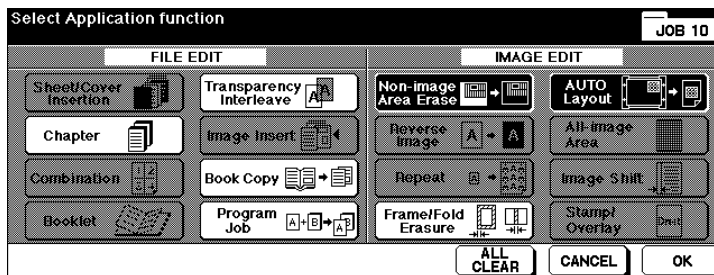

# Applications

## AUTO Layout (continued)

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **AUTO Layout**. The incompatible function keys will be dimmed to show inactivity.
- 3 Select additional copying features, as desired. When using EDH to scan originals, touch **Non-image Area Erase** to deselect it.
- 4 Touch **OK** to complete the setting and return to the Basic Screen.
- 5 Select the desired copy size.
- 6 Enter the desired print quantity.
- 7 Position original(s) FACE UP in the document handler or FACE DOWN on the platen glass.  
IMPORTANT: DO NOT CLOSE THE DOCUMENT HANDLER WHEN USING PLATEN GLASS. PLACING ORIGINAL OBLIQUELY ON THE PLATEN GLASS MAY CAUSE BLACK COPY MARKS.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.  
Option: Press [Mode Check] to view the selection, and make a Proof copy if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 8 Press [Start].  
After copying is completed, touch **AUTO Layout** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.


# Applications

## All-Image Area

Use this function to make copies printed completely to the edges.

- ☐ Copies will be made without image cutoff on the edges.
- ☐ Incompatible Basic Copying Conditions: Rotation Sort
- ☐ Incompatible Special Originals: None
- ☐ Incompatible Applications: Non-Image Area Erase, Reverse Image, Frame/Fold Erasure

Application Selection Screen

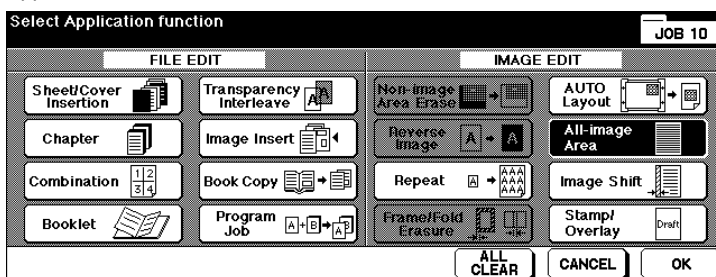

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
  - 2 Touch **All-image Area**.
  - 3 Select additional copying features, as desired.
  - 4 Touch **OK** to complete the setting and return to the Basic Screen.
  - 5 Select the desired copy size.
  - 6 Enter the desired print quantity.
  - 7 Position original(s) **FACE UP** in document handler or **FACE DOWN** on platen glass.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.
- Option: Press [Mode Check] to view the selection, and make a Proof copy if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 8 Press [Start].  
After copying is completed, touch **All-image Area** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.

# Applications


## Image Shift

Use Image Shift to create a new binding margin on originals copied in the 1-1 or 2-2 mode, or adjust existing margins on originals copied in the 1-2 or 2-1 mode. If image loss is likely, select the Reduce & Shift mode instead of regular Image shift.


Page space function is available only when Booklet or 2 Repeat mode of Repeat has been already selected. Use this function to make the desired amount of blank space between the two images on a page.

- ☐ Shift amount in Image Shift mode: 0 ~ 250 mm in 1 mm increments (Setting in 0.1 mm increments using up/down arrow key is also available by key operator setting.); To be set collectively or individually for the front and back pages.
- ☐ Shift amount in Reduce & Shift mode: 0 ~ 250 mm in 1 mm increments (Setting in 0.1 mm increments using up/down arrow key is also available by key operator setting.); To be set collectively for the front and back pages, however, the shift amount for the back page can be altered in order to position the image exactly the same as on the front page.
- ☐ In Reduce & Shift mode, AMS is automatically selected and cannot be released.
- ☐ Page Space functions only when Booklet or 2 Repeat mode of Repeat is previously selected.
- ☐ Original/copy size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R
- ☐ Incompatible conditions with Image Shift mode
  - Basic copying conditions: None
  - Special Originals: None
  - Applications: AUTO Layout, Storing image in Overlay Memory
- ☐ Incompatible conditions with Reduce & Shift mode
  - Basic copying conditions: Change magnification, V/H zoom, APS
  - Special Originals: Mixed Original
  - Applications: Book Copy, Non-Image Area Erase, Repeat, AUTO Layout, Overlay, Storing image in Overlay Memory

Application Selection Screen when selecting Image Shift mode

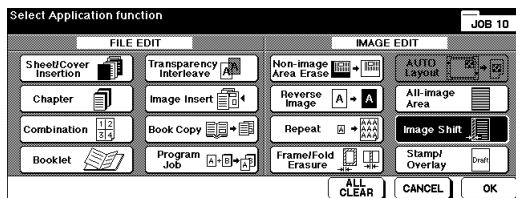

Application Selection Screen when selecting Reduce & Shift mode

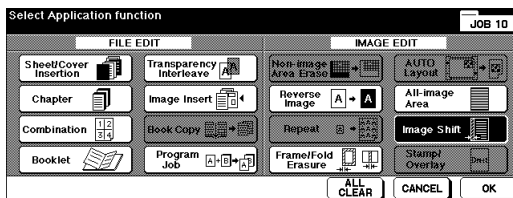

# Applications

## Image Shift (continued)

Image Shift Selection Screen (Image Shift mode)

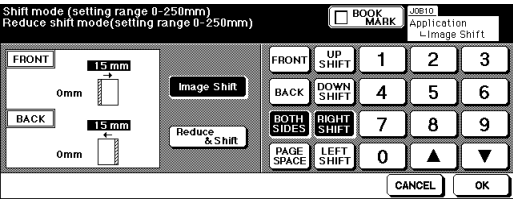


Image Shift Selection Screen (Reduce & Shift mode)



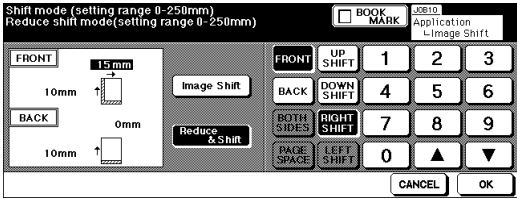


Image Shift Selection Screen (PAGE SPACE selected)

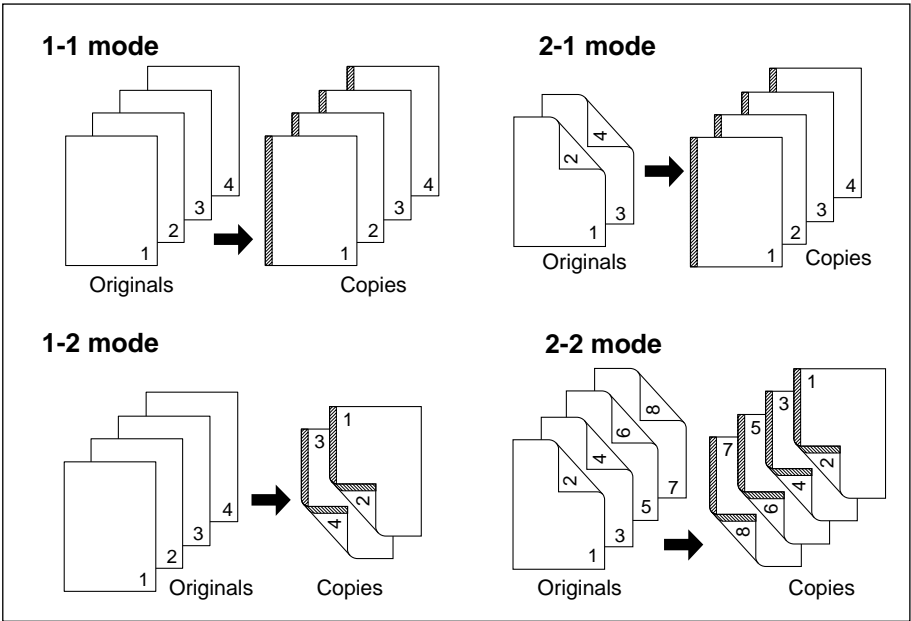


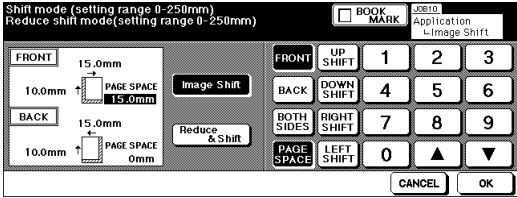

# Applications

## Image Shift (continued)

- 1 Select the copy mode and copy size from the Basic Screen, as required.
- 2 Touch **APPLI.** on the Basic Screen to enter the Application Selection Screen.
- 3 Touch **Image Shift** to display the Image Shift Selection Screen.
- 4 Touch **Image Shift** or **Reduce & Shift**.
- 5 To set shift amount in Image Shift:
  - (1) Touch **FRONT**, **BACK**, or **BOTH SIDES**. When **BOTH SIDES** is selected, the entered shift direction and amount will be reflected immediately in the **FRONT** and **BACK** Images on the screen. Touch **FRONT** or **BACK** to specify the shift direction and amount individually.

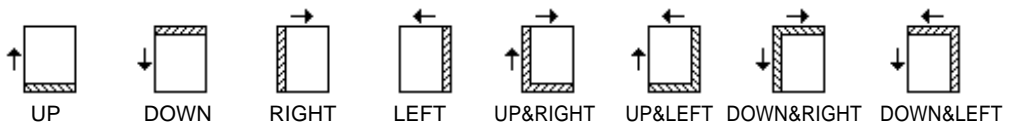

- (2) Touch **UP SHIFT**, **DOWN SHIFT**, **RIGHT SHIFT**, or **LEFT SHIFT** to specify the shift direction, then use the touch screen keypad or up/down arrow key to select the desired shift amount (available range: 0~250mm). Keep touching the arrow key to increase or decrease the value continuously.

The image display on the screen allows you to view the binding margin to be created on the printed sheets. The following icons will appear to show the currently selected conditions.
- 6 To set shift amount in Reduce & Shift:
  - (1) Touch **FRONT**. In Reduce & Shift mode, the **BOTH SIDES** key appears dimmed to show inactivity.

The message "Select magnification ratio on FRONT side" will be displayed when **BACK** is selected first.
  - (2) Touch **UP SHIFT**, **DOWN SHIFT**, or **RIGHT SHIFT** to specify the shift direction. In Reduce & Shift mode, the **LEFT SHIFT** key with **FRONT** selected appears dimmed to show inactivity.

Use the touch screen keypad or up/down arrow key to select the desired shift amount (available range: 0~250mm). Keep touching the arrow key to increase or decrease the value continuously.

The AMS will automatically determine the magnification ratio according to the shift amount specified for the front page. The shift amount and magnification ratio determined for the front page will be automatically applied to the back page.
  - (3) Touch **BACK** and make direction and amount change, if any positioning adjustment is required.

With **BACK** selected, the magnification ratio will not be changed, while the direction and amount can be altered.

# Applications

## Image Shift (continued)

- 7 When Booklet or 2 Repeat mode of Repeat has been already selected, the **PAGE SPACE** key appears clear on the screen to show its availability, with PAGE SPACE indication displayed in the image area.  
If desired, touch **PAGE SPACE** to highlight it, then enter the desired amount using the touch screen keypad or up/down arrow key.
- 8 Touch **OK** to complete the setting and return to the Application Selection Screen.
- 9 Select additional Application functions, or touch **OK** to return to the Basic Screen.
- 10 Enter the desired print quantity.
- 11 Position original(s) FACE UP in document handler or FACE DOWN on platen glass.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.  
Option: Press [Mode Check] to view the selection, and make a Proof copy if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 12 Press [Start].  
After copying is completed, touch **Image Shift** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.

# Applications

## Stamp

Stamp allows you to print regular stamp, numbering, page numbering, date and time, watermark, and watermark numbering onto the output copies. These 6 types of stamps can be used individually or in multiple combinations.

- STAMP prints the letters selected from 8 options onto the scanned image at the location designated on the screen.
- SET NUMBERING prints the numbers in the specified form over the scanned image at the location designated on the screen.
- PAGE NUMBERING prints the page numbers in the specified form over the scanned image at the location designated on the screen.
- DATE/TIME prints the date and time in the specified form over the scanned image at the location designated on the screen.
- WATERMARK prints the letters selected from 8 options over the scanned image, positioning it in the center of the page.
- WATERMARK NUMBERING repeatedly prints the numbers in the specified form over the scanned image.

- ☐ All 6 types of stamps can be used in combination.
- ☐ A watermark is printed obliquely in the center of the page. Watermark numbering prints a number repeatedly over the scanned image.
- ☐ Stamp, Set numbering, Page numbering, and Date/Time settings each allow you to select a printing position from 9 locations.
- ☐ Stamp, Set numbering, and Date/Time settings each allow you to choose whether to print the stamp on all pages or on the cover only.
- ☐ Page numbering allows you to choose whether to print on all pages, on all pages except the front cover, or on all pages except the front and back covers.

Furthermore, with Sheet/Cover Insertion or Chapter selected, Page numbering allows you to specify the following option.

COPIED INSERT	Print ON	: Page number will be printed.
	Print OFF	: Page number will not be printed but will be counted.
	Skip page	: Page number will not be printed or counted.
BLANK INSERT	Print OFF	: Page number will not be printed but will be counted.
	Skip page	: Page number will not be printed or counted.


- ☐ When Chapter is already selected, Set numbering, Page numbering, and Watermark numbering each allow you to print chapter number on each chapter page, in addition to each numbering function. When used in duplex copying, specified right/left printing position will be automatically reversed on back pages. When used in duplex copying and top/bottom staple position is selected, specified top/bottom printing position will be automatically reversed on back pages.
- ☐ Image cutoff width: leading end 5mm, trailing end 4mm, top and bottom 2mm.

# Applications


## Stamp (continued)

- ☐ Incompatible Basic Copying Conditions: Tandem mode (with NUMBERING and WATERMARK NUMBERING)
- ☐ Incompatible Special Originals: Resolution (Very high)
- ☐ Incompatible Applications: Combination, Reverse image, Repeat except 2/4/8 Repeat, Overlay (with WATERMARK and WATERMARK NUMBERING), Overlay Memory


NOTE: STAMP and WATERMARK are available only with HDD installed in the machine. Without HDD, these function keys will be dimmed to show inactivity.

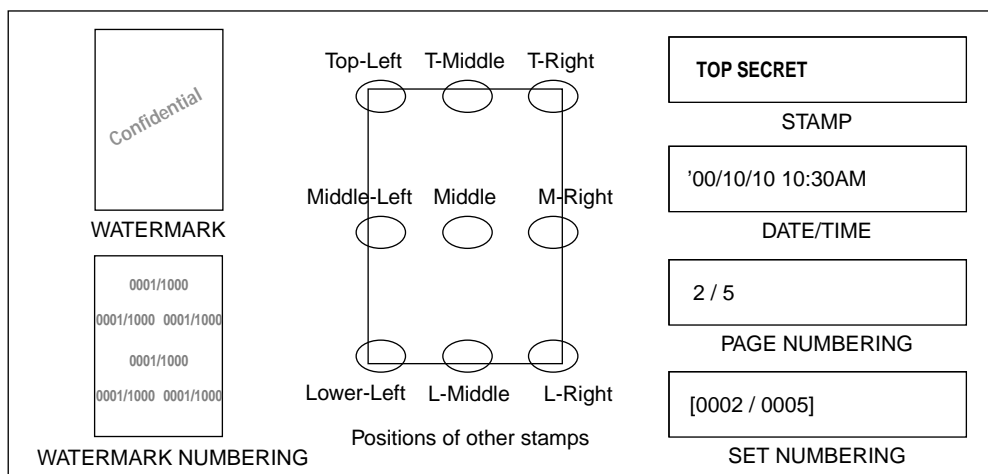

Application Selection Screen

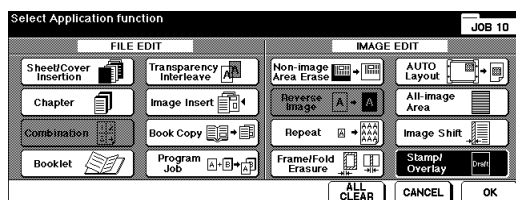

Stamp/Overlay Selection Screen

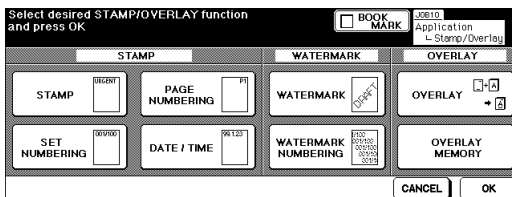

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
  - 2 Touch **Stamp/Overlay.** The Stamp/Overlay Selection Screen will be displayed.
  - 3 Touch to select the desired stamp to display the subsequent screen.
- On each screen, you can specify the desired type of the selected stamp.

# Applications

## Stamp (continued)

Stamp Selection Screen

Select desired STAMP function and press OK

BOOK MARK

JOB10 Application L Stamp/Overlay

CHARACTER SIZE

STAMP

PRINTING POSITION

LARGER

URGENT TOP SECRET FOR YOUR INFORMATION

TOP LEFT MID RIGHT

PRINTED PAGE ALL PAGES

PLEASE REPLY CONFIDENTIAL IMPORTANT

MID LEFT MID RIGHT

DRAFT DO NOT COPY

LOWER LEFT MID RIGHT

FINE ADJ. OF POSITION

CHARACTER SIZE

PRINTED PAGE

CANCEL

OK

Set Numbering Type Selection Screen

Select desired NUMBERING function and press OK

BOOK MARK

JOB10 Application L Stamp/Overlay

CHARACTER SIZE

SET NUMBERING

PRINTING POSITION

20 pt

0001 , 0002 , 0003 1 , 2 , 3

TOP LEFT MID RIGHT

PRINTED PAGE ALL PAGES

0001/1000, 0002/1000 1/1000, 2/1000

MID LEFT MID RIGHT

STARTING No. 1

LOWER LEFT MID RIGHT

FINE ADJ. OF POSITION

CHARACTER SIZE

PRINTED PAGE

STARTING No.

CANCEL

OK

Page Numbering Type Selection Screen

Select desired PAGE NUMBERING function and press OK

BOOK MARK

JOB10 Application L Stamp/Overlay

CHARACTER SIZE

PAGE NUMBERING

PRINTING POSITION

10 pt

P 1 , P 2 , P 3 1/5 , 2/5 , 3/5

TOP LEFT MID RIGHT

PRINTED PAGE FRONT & BACK PRINT ON

1 , 2 , 3 -1 - , -2 - , -3 -

MID LEFT MID RIGHT

STARTING No. 1

1-1 , 1-2 , 1-3

LOWER LEFT MID RIGHT

FINE ADJ. OF POSITION

CHARACTER SIZE

PRINTED PAGE

STARTING No.

CANCEL

OK

Date/Time Type Selection Screen

Select desired DATE/TIME function and press OK

BOOK MARK

JOB10 Application L Stamp/Overlay

CHARACTER SIZE

DATE

TIME

PRINTING POSITION

10 pt

'00/1/23 Jan 23, 2000 NO DISPLAY

TOP LEFT MID RIGHT

PRINTED PAGE ALL PAGES

1/23/'00 23 Jan, 2000 1:23PM

MID LEFT MID RIGHT

23/1/'00 13:23

LOWER LEFT MID RIGHT

FINE ADJ. OF POSITION

CHARACTER SIZE

PRINTED PAGE

CANCEL

OK

Watermark Selection Screen

Select desired WATER MARK function and press OK

BOOK MARK

JOB10 Application L Stamp/Overlay

WATER MARK

DENSITY

TOP SECRET CONFIDENTIAL FOR YOUR INFORMATION DO NOT COPY

LIGHT

DRAFT PLEASE REPLY URGENT FOR YOUR COMMENTS

NORMAL

DARK

DARK +

FINE ADJ. OF POSITION

CANCEL

OK

Watermark Numbering Type Selection Screen

Select desired WATER MARK function and press OK

BOOK MARK

JOB10 Application L Stamp/Overlay

CHARACTER SIZE

SET NUMBERING

DENSITY

36 pt

0001 , 0002 , 0003 1 , 2 , 3

LIGHT

STARTING No. 1

0001/1000, 0002/1000 1/1000, 2/1000

NORMAL

DARK

DARK +

CHARACTER SIZE

STARTING No.

CANCEL

OK

- 4 When selecting STAMP, SET NUMBERING, PAGE NUMBERING, or DATE/TIME, select the desired position from 9 location keys on each screen. If fine adjustment is required, touch **FINE ADJ. OF POSITION** to display the Fine Adjustment Setting Screen. Touch **UP SIDE**, **DOWN SIDE**, **RIGHT SIDE**, or **LEFT SIDE** to specify the direction, then use the touch screen keypad or up/down arrow key to enter the desired amount.

Fine Adjustment Setting Screen

STAMP function

Fine adjustment for printed position

BOOK MARK

JOB10 Application L Stamp/Overlay

The position is moved from base point

UP SIDE 15 mm

LEFT SIDE 10 mm

UP SIDE

DOWN SIDE

RIGHT SIDE

LEFT SIDE

1

2

3

4

5

6

7

8

9

0

▲

▼

CANCEL

OK

# Applications

## Stamp (continued)

5 Touch **CHARACTER SIZE**, if desired, to change the character size. The following options are provided:

STAMP : LARGER/ SMALLER  
 SET NUMBERING : 20pt/ 36pt  
 PAGE NUMBERING : 8pt/ 10pt/ 12pt/ 14pt  
 DATE/TIME : 8pt/ 10pt/ 12pt/ 14pt

6 Touch **PRINTED PAGE** on the Stamp Selection, Set Numbering Type Selection, or Date/Time Type Selection Screen to designate whether to print the selected stamp on the cover only or on all pages.

Touch **PRINTED PAGE** on the Page Numbering Type Selection Screen to display the Cover/Insert Print Setting Selection Screen.

- When selecting the COVER PRINT SETTING, touch **Front & Back: Print ON**, **Front: Print OFF and Back: Print ON**, or **Front & Back: Print OFF**.
- When selecting the INSERT PRINT SETTING, touch **Print ON**, **Print OFF**, or **Skip page**, as provided for each of copied insert and blank insert.

Touch **OK** to return to the Page Numbering Type Selection Screen. You will find that the screen reflects the selection you made.


Cover/Insert Print Setting Selection Screen

Page Numbering Type Selection Screen (with INSERT PRINT SETTING selected)

7 Touch **STARTING No.** on the Set Numbering, Page Numbering, or Watermark Numbering Type Selection Screen to display the Starting No. Setting Screen. Use the touch screen keypad or up/down arrow key to enter the desired starting number, then touch **OK** to return to the previous screen.

Use +/- to enter a minus number to print from halfway through, e.g. -2 to print "1" from page 4.

Starting No. Setting Screen

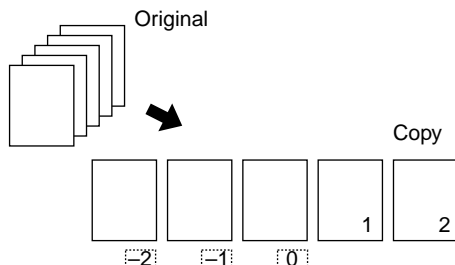

# Applications

## Stamp (continued)

When Chapter is already selected, touching **STARTING No.** on the Set Numbering, Page Numbering, or Watermark Numbering Type Selection Screen will display the Starting No. Setting Screen with Chapter starting number setting (see below). Touch **CHAPTER NUMBER** or **PAGE NUMBER** to highlight it, then use the touch screen keypad or up/down arrow key to enter the desired starting number for each. Touch **OK** to return to the previous screen.

Starting No. Setting Screen (with Chapter selected)

The screenshot shows a touch screen interface for setting starting numbers. The title is 'PAGE NUMBERING function' with a subtitle 'Enter starting number'. There are two main input areas: 'PAGE NUMBER' showing '12345' and 'CHAPTER NUMBER' showing '1'. To the right is a numeric keypad with buttons for digits 1-9, 0, and up/down arrows. At the bottom are 'CANCEL' and 'OK' buttons. The top right corner has a status bar with 'BOOK MARK', '00010', and 'Application Stamp/Overlay'.


- 8 When selecting WATERMARK or WATERMARK NUMBERING, touch **LIGHT**, **NORMAL**, **DARK**, or **DARK+** to select the desired density level on each screen.
- 9 When all the desired selections are made, touch **OK** to return to the Application Selection Screen.
- 10 Make additional application selections, or touch **OK** to return to the Basic Screen.
- 11 Enter the desired print quantity.
- 12 Position original(s) FACE UP in document handler or FACE DOWN on platen glass.  
IMPORTANT: PLACE AND SCAN THE ORIGINALS IN REGULAR ORDER OF PAGINATION.  
Option: Press [Mode Check] to view selection, and make the Proof copy, if desired; then touch **EXIT** to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 13 Press [Start].  
After copying is completed, touch **Stamp/Overlay** on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.

# Applications


## Overlay

Use Overlay to scan an image, then overlay the image onto each page copied in the job.


- ☐ Scan and store originals into memory.
- ☐ APS and AMS are automatically released.
- ☐ Magnification is initially set to 1:1. This setting is changeable.
- ☐ Original/Copy size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11", 5.5"x8.5"
- ☐ Incompatible Basic Copying Conditions: None
- ☐ Incompatible Special Originals: Resolution (Very high), Mixed Original, SDF
- ☐ Incompatible Applications: Sheet/Cover Insertion, Combination, Transparency Interleave, Image Insert, Book Copy, Program Job, Repeat, AUTO Layout, Reduce & Shift in Image Shift, WATERMARK, WATERMARK NUMBERING, Overlay Memory

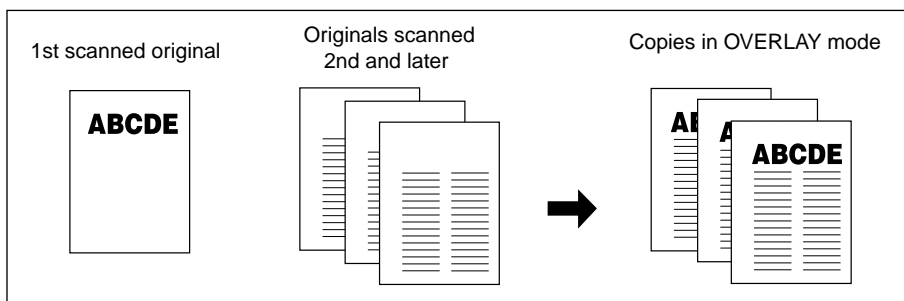

Application Selection Screen

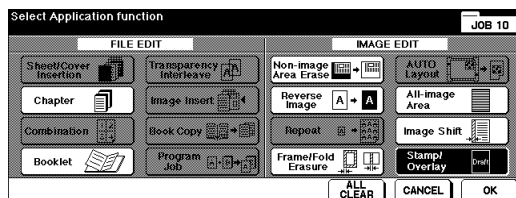

Stamp/Overlay Selection Screen

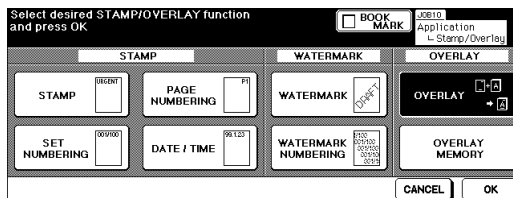

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **Stamp/Overlay**. The Stamp/Overlay Selection Screen will be displayed.
- 3 Touch **OVERLAY** to highlight it.
- 4 Touch **OK** to return to the Application Selection Screen.
- 5 Make additional application selections, or touch **OK** to return to the Basic Screen.
- 6 The Store mode is automatically selected, and APS and AMS are released.  
Set the desired Copy mode, Copy density, Lens mode, and Copy size on the Basic Screen.



# Applications

## Overlay (continued)


- 7 Enter the desired print quantity.
- 8 Position the overlaying original in the document handler or on the platen glass, then press [Start] to scan.
- 9 The second and subsequent pages are to be overlaid in printing.  
Place them in the document handler or on the platen glass, then press [Start].  
**IMPORTANT: PLACE AND SCAN THE ORIGINALS IN REGULAR ORDER OF PAGINATION.**  
Option: Press [Mode check] to view selection, and make the Proof copy, if desired; then touch EXIT to return to the Basic Screen. See p. 6-34 to p. 6-36.
- 10 Touch STORE to deselect the store mode, then press [Start] to print.  
After copying is completed, touch Stamp/Overlay on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.

# Applications

## Overlay Memory

Use Overlay Memory to scan and store several images in HDD\*, then recall the desired image from the HDD to overlay onto each page copied in the job.

NOTE\*: Installation of the optional HDD is required.

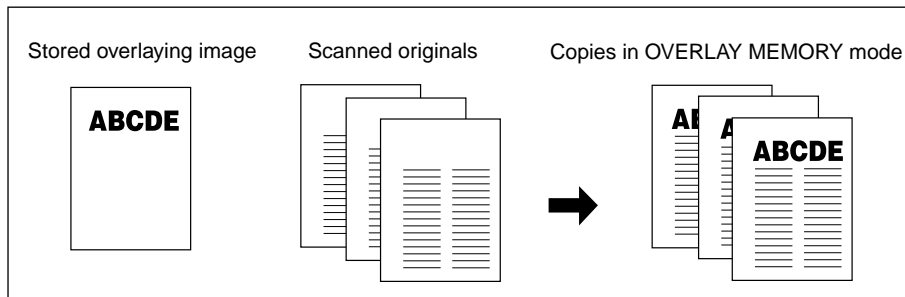

### To Store Overlaying Image Data in HDD

The following procedure describes how to store overlaying image data in HDD.


- ☐ Use the platen glass only.
- ☐ Copy mode: 1-1 mode only
- ☐ Incompatible Basic Copying Conditions: 1-2, 2-2, 2-1, Changing magnification more than 201% (the range of 33% ~ 200% is available), AMS, Reserve Mode, Store Mode, Selecting Output Mode, Setting print quantity, Rotation
- ☐ Incompatible Special Originals: Resolution (High, Very high, 600dpi), Mixed Original, Z-Folded Original, SDF, Tab Paper
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Transparency Interleave, Image Insert, Book Copy, Program Job, Non-Image Area Erase, Reverse Image, Repeat, AUTO Layout, Image Shift, Stamp, Overlay

# Applications


## Overlay Memory (continued)

### To Store Overlaying Image Data in HDD (continued)

Application Selection Screen

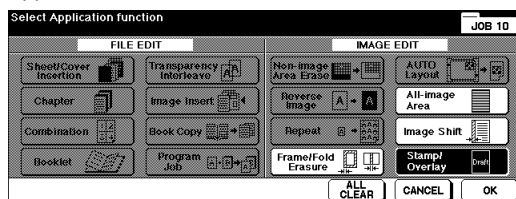

Stamp/Overlay Selection Screen

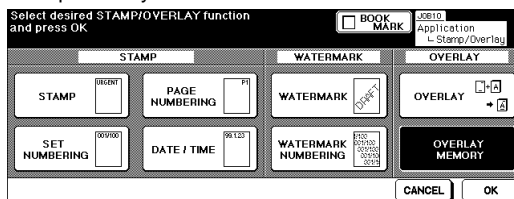

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **Stamp/Overlay**. The Stamp/Overlay Selection Screen will be displayed.
- 3 Touch **OVERLAY MEMORY** to display the Overlaying Image Selection Screen.  
NOTE: Without HDD, the **OVERLAY MEMORY** key will be dimmed on the Stamp/Overlay Selection Screen to show inactivity.
- 4 Touch **IMAGE STORE** to display the Image Name Entry Screen.

Overlaying Image Selection Screen


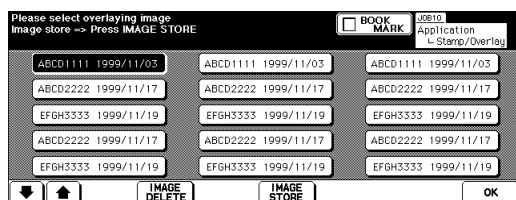


Image Name Entry Screen

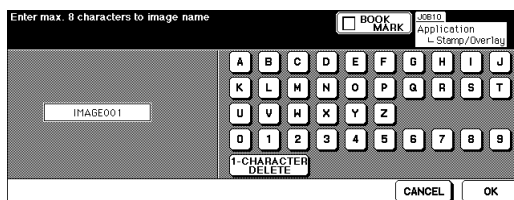

- 5 Enter the desired image name in up to 8 characters from the touch screen keypad. The date when you made this entry will also be stored automatically. To correct an entry, touch **1-CHARACTER DELETE** repeatedly to delete each character, then enter the correct image name.
- 6 If the image name is correct, touch **OK**. The Basic Screen to store the overlaying image will be displayed.  
If the popup menu with **YES** and **NO** keys is displayed instead of the Basic Screen, the entered name is duplicated. Touch **YES** to enter a new name, or **NO** to create a duplicate name.  
If the popup menu with **OK** key is displayed, the entered name is duplicated. Touch **OK**, then enter a new name.  
If the **IMAGE DELETE** key is displayed on the Overlay Image Selection Screen, you can delete the stored image and name. Select the image name using up/down arrow key to scroll, then touch **IMAGE DELETE**.  
NOTE: Changing the popup menu for duplicate name and displaying the **IMAGE DELETE** key is available in the Memory switch No. 45 of the Key operator setting. See p. 14-40 ~ p. 14-45.

# Applications


## Overlay Memory (continued)

### To Store Overlaying Image Data in HDD (continued)


Image Name Entry Screen




Image Name Entry Screen

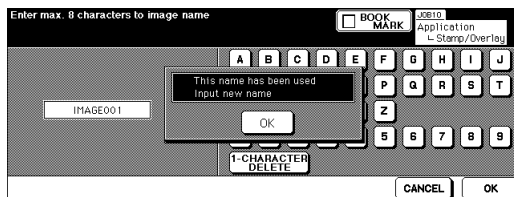

Basic Screen to store overlaying image

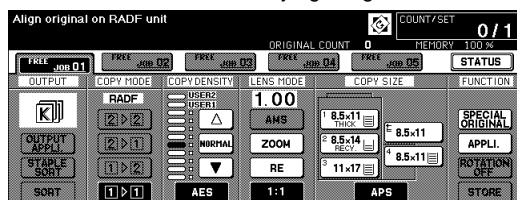

Overlaying Image Data Storing Screen

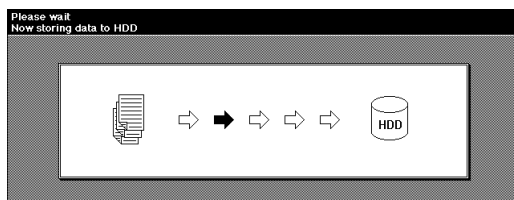

7 Position the overlaying original on the platen glass, then press [Start] to scan.

- NOTES:
- The document handler cannot be used for storing the overlaying image.
  - To stop scanning, press [Stop].

8 After scanning the overlaying original, the Overlaying Image Data Storing Screen will be displayed. The machine automatically starts to store the overlaying image data in the HDD. The Overlaying Image Selection Screen will resume when the storing function is completed.

To continue to store the overlaying image data, return to step 4.

9 Touch **OK** to return to the Stamp/Overlay Selection Screen.

10 Touch **OK** to return to the Application Selection Screen.

11 Touch **OK** to return to the Basic Screen.

# Applications


## Overlay Memory (continued)

### To Overlay Image Stored in HDD


The following procedure describes how to overlay the image stored in HDD onto each page copied in the job.

- ☐ APS and AMS are automatically released.
- ☐ Magnification is initially set to 1:1. This setting is changeable.
- ☐ Original/Copy size: 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11", 5.5"x8.5"
- ☐ Incompatible Basic Copying Conditions: None
- ☐ Incompatible Special Originals: Resolution (Very high), Mixed Original, SDF
- ☐ Incompatible Applications: Sheet/Cover Insertion, Combination, Transparency Interleave, Image Insert, Book Copy, Program Job, Repeat, AUTO Layout, Reduce & Shift in Image Shift, WATERMARK, WATERMARK NUMBERING, Storing image in Overlay Memory

Application Selection Screen

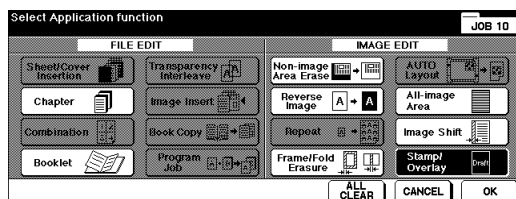


Stamp/Overlay Selection Screen

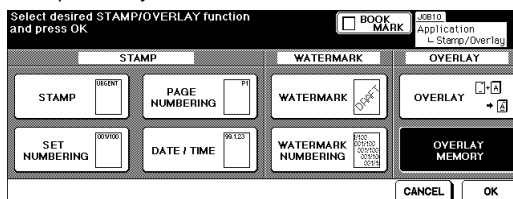

- 1 Touch **APPLI.** on the Basic Screen to display the Application Selection Screen.
- 2 Touch **Stamp/Overlay.** The Stamp/Overlay Selection Screen will be displayed.
- 3 Touch **OVERLAY MEMORY** to display the Overlaying Image Selection Screen.  
NOTE: Without HDD, the **OVERLAY MEMORY** key will be dimmed on the Stamp/Overlay Selection Screen to show inactivity.

Overlaying Image Selection Screen

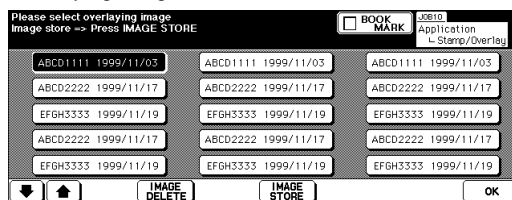

- 4 Select the desired overlaying image data to highlight it. Use up/down arrow key to scroll, if needed.
- 5 Touch **OK** to return to the Stamp/Overlay Selection Screen.
- 6 Touch **OK** to return to the Application Selection Screen.

# Applications

## Overlay Memory (continued)

### To Overlay Image Stored in HDD (continued)

7 Make additional application selections, or touch OK to return to the Basic Screen.

8 The Store mode is automatically selected, and APS and AMS are released.

Set the desired Copy mode, Copy density, Lens mode, and Copy size on the Basic Screen.

9 Enter the desired print quantity.

10 Place originals in the document handler or on the platen glass, then press [Start] to scan.

**IMPORTANT: PLACE AND SCAN THE ORIGINALS IN REGULAR ORDER OF PAGINATION.**

Option: Press [Mode Check] to view selection, and make the Proof copy, if desired; then touch EXIT to return to the Basic Screen. See p. 6-34 to p. 6-36.

11 Touch STORE to deselect the store mode, then press [Start] to print.

After copying is completed, touch Stamp/Overlay on the Application Selection Screen or press [Panel Reset] to release the mode and reset the machine.



# Section 10: Program Memory

Job Store

Job Recall

Program Memory Form

Program memory mode  
Select job number

<input checked="" type="checkbox"/> 1	ABC CORPORATION	<input type="checkbox"/> 6		<input type="checkbox"/> 11	
<input type="checkbox"/> 2		<input type="checkbox"/> 7		<input type="checkbox"/> 12	
<input type="checkbox"/> 3		<input type="checkbox"/> 8	MAIL	<input type="checkbox"/> 13	
<input type="checkbox"/> 4	TEST COPY	<input type="checkbox"/> 9		<input checked="" type="checkbox"/> 14	DEF COMPANY
<input type="checkbox"/> 5		<input type="checkbox"/> 10		<input type="checkbox"/> 15	

STORE

CANCEL

OK




# Program Memory

## Job Store


Use Job Store to store up to 30 frequently-used copying jobs, which can be recalled at any time. The stored jobs can be given alphabetical names.

- ❑ All copying functions can be selected


Control Panel

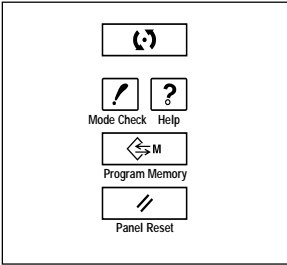


Job No. Selection Screen

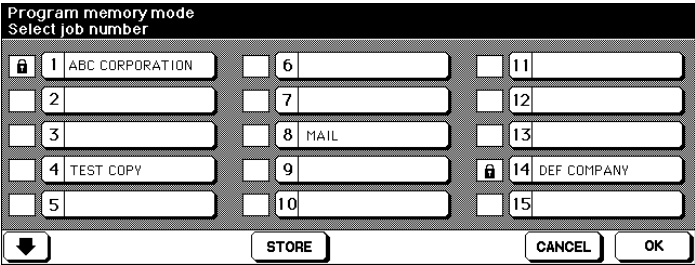

Job Store Check Screen

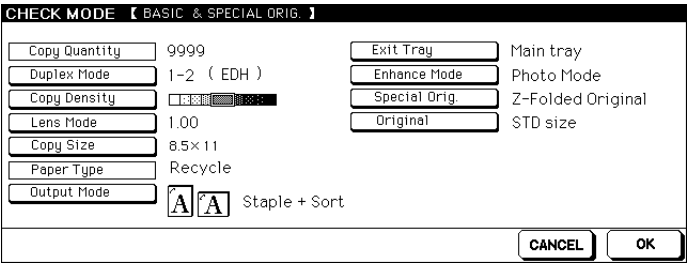

Job Name Registration Screen

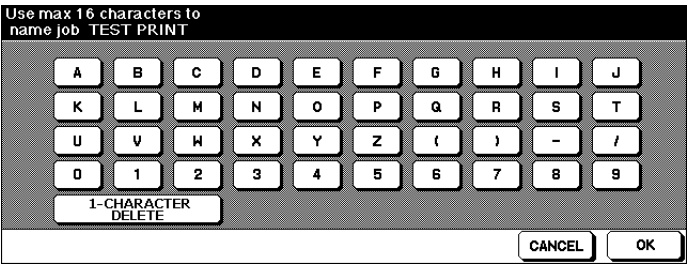

# Program Memory

## Job Store (continued)

- 1 Make job selections from the Basic Screen, Application Selection Screen, Special Original Screen and/or Output Selection Screen.
- 2 When all selections are made, press [Program Memory] on the Control panel to display the Job No. Selection Screen.
- 3 Touch **STORE**. The Job Store Check Screen displays to enable you to review the settings. (See sample Job Store Check Screen, previous page.)
- 4 If settings are correct, touch **OK** to restore the Job No. Selection Screen. Otherwise, touch **CANCEL** to return to the Basic Screen, and make new selections.
- 5 When the Job No. Selection Screen is restored, touch one of the keys numbered from 1~30 to store the job under that number. The key with a lock icon (🔒) displayed is locked and cannot be selected. Arrow keys can be used to scroll to the next/previous page. The selected number key will be highlighted.
- 6 Touch **OK** on the Job No. Selection Screen to display the Job Name Registration Screen.  
If you do not wish to enter a name, touch **OK**.  
The key displays [ \*\*\*\*\* ] in place of a name.
- 7 Enter a job name in up to 16 characters, using the touch screen alphabet keypad. To correct an entry, touch **DELETE** repeatedly to delete each character entered, then enter the correct job name.
- 8 If the Job name is correct, touch **OK** to resume the Job No. Selection Screen. To re-enter the Job name, touch **CANCEL** to return to the Job Name Registration Screen.
- 9 When the Job No. Selection Screen is displayed, touch **OK** to complete the setting and return to the Basic Screen.  
To exit from the Program Memory setting anytime, press [Panel Reset].

### NOTES:

- 1 A locked job is indicated by a lock icon on the Job key number.
- 2 Only the key operator can lock a job.
- 3 A locked job cannot be overwritten unless it is unlocked by the key operator.
- 4 A blank key indicates that no job is stored under that key.
- 5 [ \*\*\*\*\* ] displayed on a Job number key indicates that a job is stored but unnamed.
- 6 Program Memory entries can be recorded on the Program Memory Form included at the end of this section.

# Program Memory

## Job Recall

Use Job Recall to recall jobs that are already stored in Program Memory.

Job No. Selection Screen

Program memory mode  
Select job number

<input checked="" type="checkbox"/> 1	ABC CORPORATION	<input type="checkbox"/> 6		<input type="checkbox"/> 11	
<input type="checkbox"/> 2		<input type="checkbox"/> 7		<input type="checkbox"/> 12	
<input type="checkbox"/> 3		<input type="checkbox"/> 8	MAIL	<input type="checkbox"/> 13	
<input type="checkbox"/> 4	TEST COPY	<input type="checkbox"/> 9		<input checked="" type="checkbox"/> 14	DEF COMPANY
<input type="checkbox"/> 5		<input type="checkbox"/> 10		<input type="checkbox"/> 15	

STORE

CANCEL

OK

Job No. Selection Screen (Job Recall)

Program memory mode  
Select job number

<input checked="" type="checkbox"/> 1	ABC CORPORATION	<input type="checkbox"/> 6		<input type="checkbox"/> 11	
<input type="checkbox"/> 2		<input type="checkbox"/> 7		<input type="checkbox"/> 12	
<input type="checkbox"/> 3		<input checked="" type="checkbox"/> 8	MAIL	<input type="checkbox"/> 13	
<input type="checkbox"/> 4	TEST COPY	<input type="checkbox"/> 9		<input checked="" type="checkbox"/> 14	DEF COMPANY
<input type="checkbox"/> 5		<input type="checkbox"/> 10		<input type="checkbox"/> 15	

STORE

JOB CHECK

CANCEL

OK

Job Recall Check Screen

CHECK MODE 【 BASIC & SPECIAL ORIG. 】

Copy Quantity	9999	Exit Tray	Main tray
Duplex Mode	1-2 ( EDH )	Enhance Mode	Photo Mode
Copy Density	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div>	Special Orig	Z-Folded Original
Lens Mode	1.00	Original	STD size
Copy Size	8.5×11		
Paper Type	Recycle		
Output Mode	<div><div>A</div><div>A</div></div> Staple + Sort		

CANCEL

OK

# Program Memory

## Job Recall (continued)

- 1 Place original(s) as required for the job you are about to recall.
- 2 Press [Program Memory] to display the Job No. Selection Screen.  
(See sample screen, previous page.)
- 3 Touch a Job No. key to select a job you want to recall, and to highlight the key.  
If required, scroll with the arrow keys to reach the desired Job No. key (1~30).  
To cancel the recall mode, touch **CANCEL** to return to the Basic Screen.
- 4 Touch **JOB CHECK**. The Job Recall Check Screen displays to enable you to review the settings. Touching **CANCEL** on the Job Recall Check Screen returns to the Job No. Selection Screen.  
(See sample Job Recall Check Screen, previous page.)
- 5 When the desired Job No. key is highlighted, touch **OK** to read the settings of the selected job, and to return to the Basic Screen.  
To cancel the job, press [Panel Reset].
- 6 Press [Start].

### NOTES:

- 1 A locked job is indicated by a lock icon on the Job key number.
- 2 Only the key operator can lock a job.
- 3 A locked job cannot be overwritten unless it is unlocked by the key operator.
- 4 A blank key indicates that no job is storedw under that key.
- 5 [\*\*\*\*\*] displayed on a Job number key indicates that a job is stored but unnamed.
- 6 Program Memory entries can be recorded on the Program Memory Form included at the end of this section.

# Program Memory

## Program Memory Form

Make a copy of this form to record frequently-used copy jobs stored in Program Memory. Update the information when changes are made. Make additional copies, as needed.

JOB NUMBER/NAME	JOB DESCRIPTION
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	

# Program Memory

## Program Memory Form (continued)

JOB NUMBER/NAME	JOB DESCRIPTION
16	
17	
18	
19	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
30	



## Section 11: Server Function

### Server Function


#### Image Store/Delete Mode

To Store Image Data in HDD

To Delete Image Data

#### Image Store & Output Mode

#### Image Recall Mode

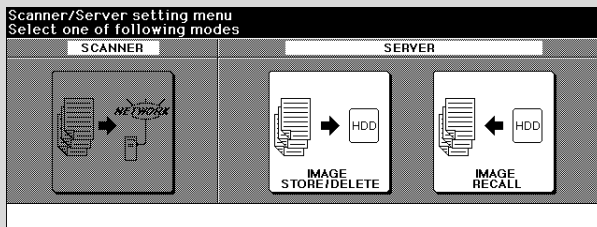




# Server Function

## Server Function

Use Server function to accumulate scanned images into built-in DIMM (memory), then store the image data in HDD\* (option) so that the data can be recalled to DIMM, and then output as needed. This function also allows storing the image data in normal copying procedure.

NOTE\*: Installation of the optional HDD is required.

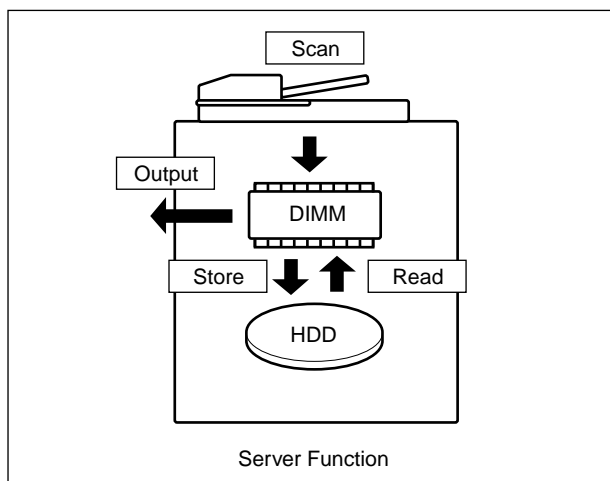

The Server function provides the following three modes:

- ① Image Store/Delete mode  
Store the image data scanned from originals in HDD, or delete the data stored in HDD.
- ② Image Store & Output mode  
Store the scanned image data in HDD after copying is completed.
- ③ Image Recall mode  
Recall the image data stored in HDD to built-in DIMM for printing.

# Server Function

## Image Store/Delete Mode

When the original image is stored into DIMM, use this function to store the image data into the HDD. Or, in the event data is already stored in the HDD, use this function to delete it from the HDD.


NOTE: Installation of the optional HDD is required for storing data in the HDD.

## To Store Image Data in HDD


Specify your password when storing the data in HDD for protection. Each image data can be given an alphabetical job name.

- ☐ Incompatible Basic Copying Conditions: 1-2, 2-2, AMS, Selecting output mode, Selecting copy size (APS is automatically selected), Setting print quantity, Rotation
- ☐ Incompatible Special Originals: WHOLE AREA in Non STD Size
- ☐ Incompatible Applications: Sheet/Cover Insertion, Chapter, Combination, Booklet, Transparency Interleave, Image Insert, Book Copy, Program Job, Non-Image Area Erase, Reverse Image, Repeat, AUTO Layout, Image Shift, Stamp/Overlay

Control Panel

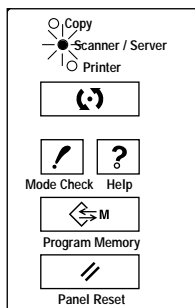

Scanner/Server Setting Menu Screen

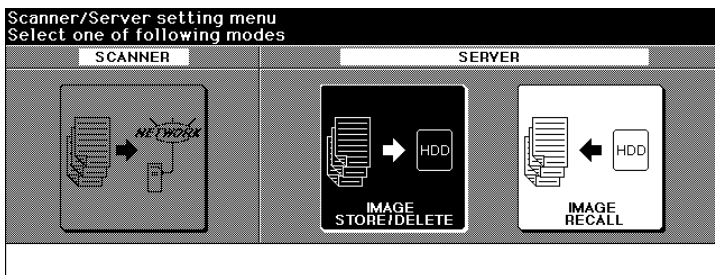

# Server Function

## Image Store/Delete Mode (continued)

### To Store Image Data in HDD (continued)

Scanner/Server Setting Menu Screen



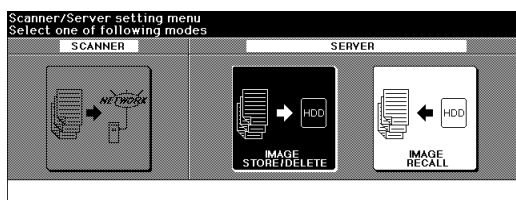



Image Data Password Entry Screen

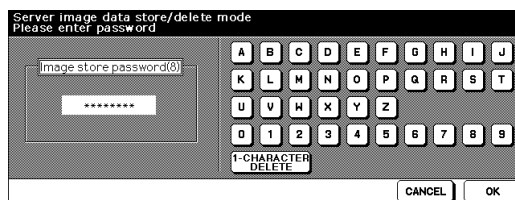

Job Name Entry Screen

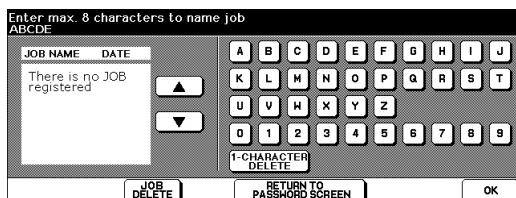

Scanner Setting Screen

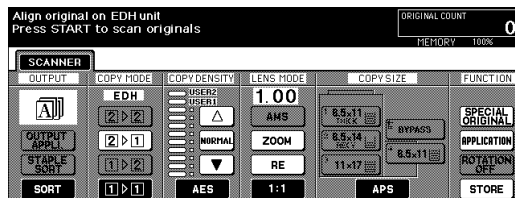

- 1 Press [Mode] to light up the [Scanner/Server] LED. The Scanner/Server Setting Menu Screen will be displayed.
- 2 Touch **IMAGE STORE/DELETE**. The Image Data Password Entry Screen will be displayed.
- 3 Enter the desired image data password in up to 8 characters from the touch screen keypad.  
To correct an entry, touch **1-CHARACTER DELETE** repeatedly to delete each character, then enter the correct password.
- 4 If the password is correct, touch **OK** to display the Job Name Entry Screen.  
Enter the desired job name in up to 8 characters from the touch screen keypad.  
To correct an entry, touch **1-CHARACTER DELETE** repeatedly to delete each character, then enter the correct job name.
- 5 If the job name is correct, touch **OK** to display the Scanner Setting Screen.
- 6 Select the desired scanning conditions. Print quantity cannot be entered.
- 7 Position original(s) FACE UP in the document handler or FACE DOWN on the platen glass.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.

# Server Function

## Image Store/Delete Mode (continued)

### To Store Image Data in HDD (continued)

Image Data Storing Screen (Scanner to HDD)

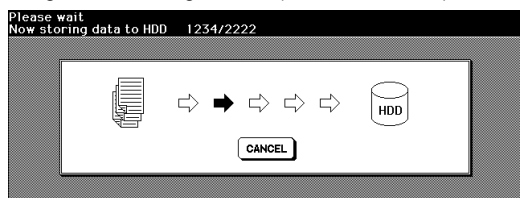


Image Data Storing Screen (Scanner to HDD)



8 Press [Start] to scan original(s).

When scanning is completed, the Image Data Storing Screen will be displayed.

When store mode is used, touch to deselect **STORE** on the Scanner Setting Screen after all originals are scanned. The Image Data Storing Screen will be displayed.

9 The machine automatically begins storing data in the HDD. The Basic Screen resumes when the storing function is completed.

NOTE: To suspend the storing job, touch **CANCEL** on the Image Data Storing Screen, then touch **YES** on the popup menu to delete the data; or touch **NO** to continue.

# Server Function

## Image Store/Delete Mode (continued)

### To Delete Image Data

Scanner/Server Setting Menu Screen



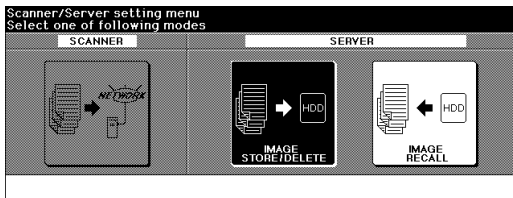



Image Data Password Entry Screen

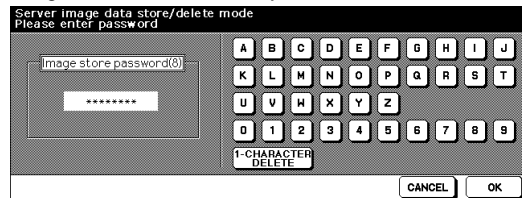

Job Name Entry Screen

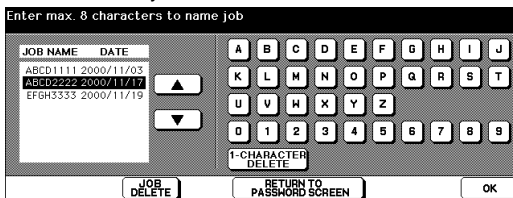

Job Name Entry Screen

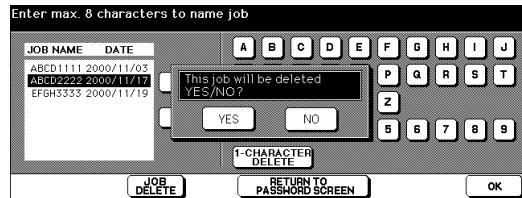

- 1 Press [Mode] to light up the [Scanner/Server] LED. The Scanner/Server Setting Menu Screen will be displayed.
- 2 Touch **IMAGE STORE/DELETE**. The Image Data Password Entry Screen will be displayed.
- 3 Enter your Image data password from the touch screen keypad.  
To correct an entry, touch **1-CHARACTER DELETE** repeatedly to delete each character, then enter the correct password.
- 4 If the password is correct, touch **OK** to display the Job Name Entry Screen.
- 5 Touch the ▲ or ▼ key on the right side of the job name list to highlight the data to be deleted, then touch **JOB DELETE**. The popup menu will appear to confirm that you delete the selected data.
- 6 Touch **YES** to delete it, or touch **NO** to cancel. The popup menu will disappear.
- 7 Touch **RETURN TO PASSWORD SCREEN** to restore the Image Data Password Entry Screen.
- 8 Touch **CANCEL** to restore the Image Data Store/Delete Site Selection Screen.
- 9 Touch **PREVIOUS SCREEN** to restore the Scanner/Server Setting Menu Screen.
- 10 Press [Mode] to light up the [Copy] LED. The Basic Screen will be displayed.


# Server Function

## Image Store & Output Mode

Use this function to store the scanned image data in HDD after copying is completed. This storing function does not conflict with any other copying conditions.

NOTE: Installation of the optional HDD is required for this function. With the HDD installed, the **HDD STORE** key will be displayed on the Output Menu Screen.

Output Menu Screen (with Finisher)

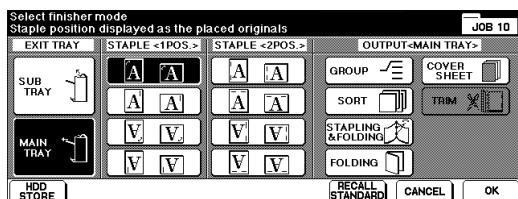

Output Menu Screen (without Finisher)



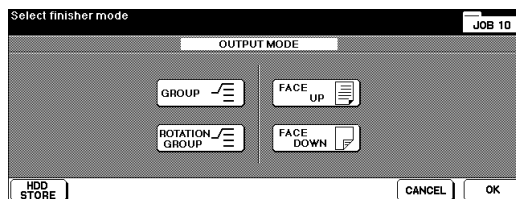


Image Data Password Entry Screen

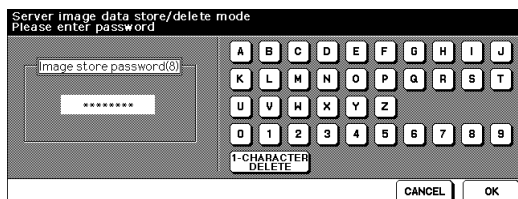

Job Name Entry Screen

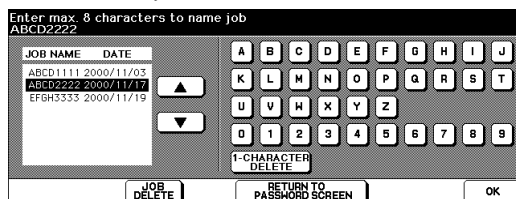

- 1 Touch **OUTPUT APPLI.** on the Basic Screen to display the Output Menu Screen.
- 2 Touch **HDD STORE**. The Image Data Password Entry Screen will be displayed.
- 3 Enter the desired Image data password in up to 8 characters from the touch screen keypad.  
To correct an entry, touch **1-CHARACTER DELETE** repeatedly to delete each character, then enter the correct password.
- 4 If the password is correct, touch **OK** to display the Job Name Entry Screen.  
Enter the desired job name in up to 8 characters from the touch screen keypad.  
To correct an entry, touch **1-CHARACTER DELETE** repeatedly to delete each character, then enter the correct job name.
- 5 If the job name is correct, touch **OK** twice to return to the Basic Screen.
- 6 Select the desired copying conditions, then enter the desired print quantity.
- 7 Position original(s) **FACE UP** in the document handler or **FACE DOWN** on the platen glass.  
When using Platen store mode, see p. 6-27 to p. 6-28.  
When using EDH store mode, see p. 6-29.  
While using Program job, the scanned and output data can be stored in HDD. See p. 9-22.

# Server Function

## Image Store & Output Mode (continued)

Image Data Storing Screen


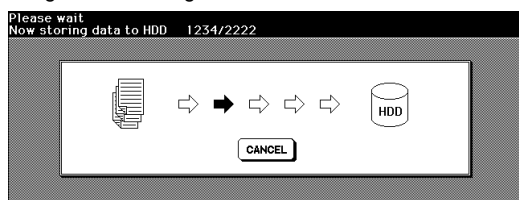


Image Data Storing Screen

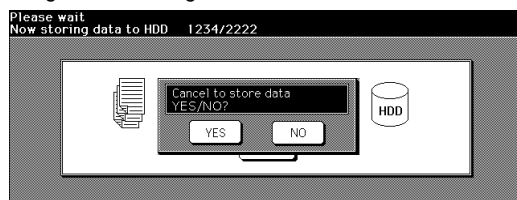


8 Press [Start] to scan and then print.

When the Store mode is used, touch **STORE** on the Basic Screen to deselect the Store mode when the store function is completed, i.e., after all originals are scanned, then press [Start] to print.

NOTE: To suspend the scanning or printing job, press [Stop] on the control panel. The popup menu will be displayed to ask you how to complete the current job. Touch **CONTINUE** to continue the job, **EXIT** to cancel the job and delete the data, or **EXIT after storing data to HDD** to store the data in HDD without printing.

Basic Screen

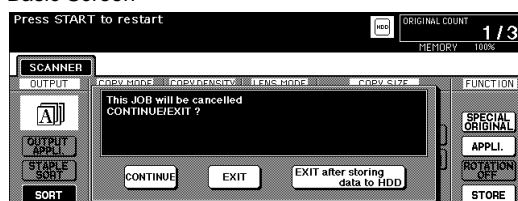

9 After scanning all the originals, the Image Data Storing Screen will be displayed.

The machine automatically starts to store the data in HDD. The Basic Screen will resume when completed.

NOTE: To suspend the storing job, touch **CANCEL** on the Image Data Storing Screen, then touch **YES** on the popup menu to delete the data; or touch **NO** to continue.

# Server Function

## Image Recall Mode

Use this function to recall the image data stored in HDD to built-in DIMM for printing.

NOTE: Installation of the optional HDD is required to recall data from the HDD.

To recall data stored in the HDD, enter the password specified at the time data was stored, then designate it by the job name.

Scanner/Server Setting Menu Screen


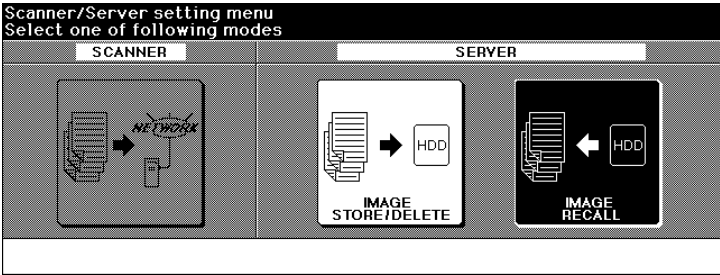


Image Data Password Entry Screen

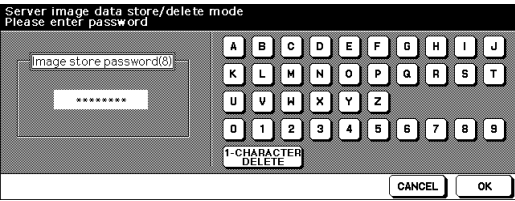

Recall Job Selection Screen

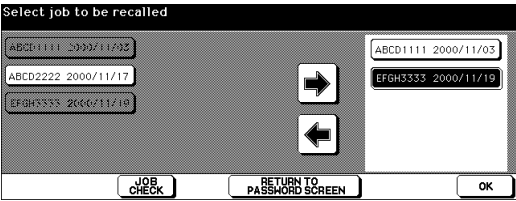


Image Data Recalling Screen (from HDD)


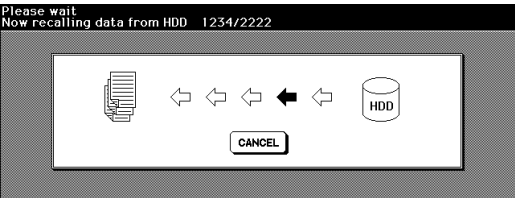


Image Data Recalling Screen (from HDD)



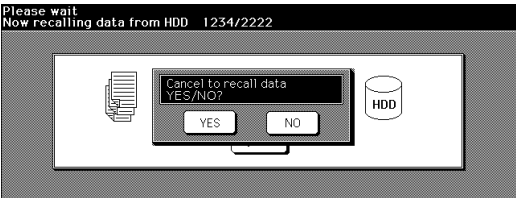

# Server Function

## Image Recall Mode (continued)

- 1 Press [Mode] to light up the [Scanner/Server] LED. The Scanner/Server Setting Menu Screen will be displayed.
- 2 Touch **IMAGE RECALL**. The Image Data Password Entry Screen will be displayed.
- 3 Enter your Image data password from the touch screen keypad.  
To correct an entry, touch **1-CHARACTER DELETE** repeatedly to delete each character, then enter the correct password.
- 4 If the password is correct, touch **OK** to display the Recall Job Selection Screen.
- 5 Touch the desired job name key to highlight it, then touch ➡ to move it to the recall list on the right side. Touching **JOB CHECK** displays the Check Screen to allow you to view all the feature selections made for that job.

NOTE: More than one job at a time can be moved to the recall list to be output in succession, provided that those jobs have been stored in the same copying conditions.

To cancel the job moved to the recall list, touch the job name in the list to highlight it, then touch ◀ to return it to the left side key.

If the desired job name is displayed in the recall list, touch **OK**. The Image Data Recalling Screen will be displayed to show the current status of transmission.

- 6 When the data transmission is completed, the Basic Screen will be displayed reflecting the settings made for that job.

NOTE: To suspend recall, touch **CANCEL** on the Image Data Recalling Screen, then touch **YES** on the popup menu to delete the data recalled to DIMM; or touch **NO** to continue. The data stored in HDD will not be erased by this operation.

- 7 Press [Start] to print.

## Section 12: Tandem Mode

Tandem Mode Operation  
To Stop Scanning/Printing  
Troubleshooting

# Tandem Mode

## Tandem Mode Operation

Tandem mode enables your Di750 primary (master) copier to work in tandem with the Di750 secondary (sub) copier connected using a cross cable, for the purpose of providing faster completion of large copying jobs. Two units working in tandem distribute a job in half the time of non-tandem mode.

NOTE: Service setting is required to use the tandem mode. Contact your service representative, if desired.


- ☐ Two Di750 copiers should be connected using a cross cable.
- ☐ Two copiers should have the same optional configuration except for the option cassette (C-305/C-305L).
- ☐ Two copiers should be turned on and ready for copying.
- ☐ The copier with the TANDEM key highlighted on the Finisher Mode Selection Screen will be the primary (master) copier, turning both copiers into the tandem mode.  
Select the copying conditions, scan originals, and press [Start] on the primary copier to operate both copiers in tandem to complete a job.
- ☐ Print quantity must be set for [3] or more copies to activate the tandem mode.  
When the print quantity entered is an odd number, the primary copier will copy and output one sheet/set more than the secondary copier to accommodate the job.
- ☐ Auto low power/Auto shut-off may function while tandem mode is selected.
  - If the tandem mode is selected while the secondary copier is in Auto low power mode, the energy saver mode will be released automatically.
  - The tandem mode will not be selected when the secondary copier is turned off by Auto shut-off. Release the Auto shut-off mode by pressing [Energy Saver On/Off].
  - If Auto low power is activated on the secondary copier during the tandem job setting, the energy saver mode will be released automatically when printing job starts.
  - If Auto shut-off is activated on the secondary copier during the tandem job setting, the tandem mode will be released automatically.
  - If Auto low power/Auto shut-off is activated on the primary copier, the tandem mode will be released automatically.
- ☐ Panel reset may function while tandem mode is selected.  
Initially, the tandem mode will be released automatically if Panel reset is activated on the primary copier. Key operator can set the primary copier to select the tandem mode as initial setting. Apply this setting to the primary copier only, if desired. Setting on both copiers will deactivate the tandem mode.
- ☐ The Di750 is provided with an Allocation recovery mode, which functions when trouble occurs in either the primary or secondary copier to allow the trouble-free copier to complete the job.
- ☐ When the two copiers in tandem mode have the same ECM password registered, copying will be available by entering the ECM password in the primary copier only.  
The password will be transmitted to the secondary copier.
- ☐ Interrupt copying is available only on the copier with [Interrupt] pressed.
- ☐ If the primary copier is installed with HDD, the image data stored in HDD can be output in tandem mode copying.
- ☐ Corresponding tray sizes on the primary and secondary copiers should be the same when using multiple trays for a single job.

# Tandem Mode


## Tandem Mode Operation (continued)

- ☐ Incompatible Basic Copying Conditions: Group, Rotation, Alternate Exit
- ☐ Incompatible Original Scanning Conditions: None
- ☐ Incompatible Applications: Transparency Interleave, SET NUMBERING and WATERMARK NUMBERING in Stamp/Overlay


Basic Screen

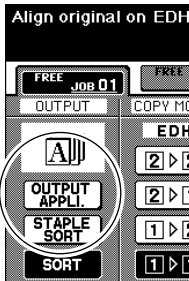

Finisher Mode Selection Screen

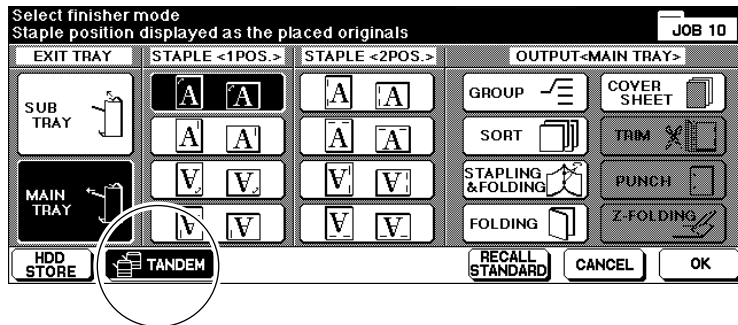

Basic Screen (primary copier)

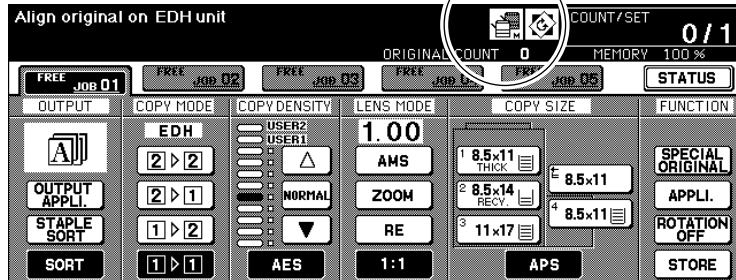

- 1 Turn power on by pressing the Power switches of the two copiers.
- 2 Confirm that both copiers are ready to copy with the Basic Screen displayed.
- 3 Touch **OUTPUT MENU** on the Basic Screen of either copier to display the Finisher Mode Selection Screen.
- 4 Touch **TANDEM** on the Finisher Mode Selection Screen to highlight it, then touch **OK**. The copier with **TANDEM** highlighted will become the primary copier; the other copier will function as the secondary copier. The Master icon displays on the Basic Screen of the primary copier to indicate that the two units are ready to work in tandem mode.

NOTE: The Sub icon will display on the Basic Screen of the secondary copier when [Start] is pressed on the primary copier to start the tandem printing operation.

# Tandem Mode

## Tandem Mode Operation (continued)

NOTE: The tandem mode cannot be selected/continued in the cases shown below. The message "Please wait/ Reserve is not available in Sub machine," "Sub machine error/ Please check sub machine," or "Please check sub machine" will be displayed, as required.

- The tandem mode cannot be selected while the secondary copier is in the off state, due to Auto shut-off. Press [Energy Saver On/Off] to release it.
- Selected tandem mode will be released automatically when the secondary copier activates Auto shut-off. Press [Energy Saver On/Off] to release it, then select the tandem mode again to restart the procedure.
- When any problem occurs in the secondary copier, such as a paper misfeed or lack of paper, the secondary copier will be unavailable for printing; however, the problem will not cause tandem mode to be released. Take the appropriate troubleshooting measures to be ready for copying.
- Tandem printing job cannot be started if 5 reserve jobs (not in tandem mode) are entered on the secondary copier. Wait until the reserve jobs are completed on the secondary copier.
- Selected tandem mode will be released automatically when the primary copier activates Auto low power/Auto shut-off. Press [Energy Saver On/Off] to release Auto shut-off if required, then select the tandem mode again to restart the procedure.

### 5 Select the desired copying conditions on the primary copier.

NOTE: Ordinary copying operation is still available on the secondary copier during the tandem mode setting.

### 6 Enter print quantity on the primary copier, using the keypad.

When a print quantity amount of 100 is entered, the primary and secondary copiers will each copy and output 50 sheets.

NOTES: • Print quantity must be set for [3] or more copies to activate the tandem mode.  
• When the print quantity entered is an odd number, the primary copier will copy and output one sheet/set more than the secondary copier to accommodate the job.

### 7 Position original(s) FACE UP in the document handler or FACE DOWN on the platen glass of the primary copier.

### 8 Press [Start] on the control panel of the primary copier.

The Sub icon will display on the Basic Screen of the secondary copier to indicate that the two copiers will start working in tandem.

The tandem mode will be released automatically when the tandem mode copying is completed, and the Master and Sub icons on each Basic Screen will disappear.

#### **Tip: Entering reserve job during Tandem mode copying**

If scanning of the next reserved job is performed during the tandem mode copying, that job will also be performed in the tandem mode. Up to 5 jobs including the present job can be reserved.

#### **Tip: Interrupt mode during Tandem mode copying**

Interrupt copying is available only on the copier with [Interrupt] pressed. The tandem mode copying on the copier in interrupt mode will be suspended until the interrupt copying is completed.

If the interrupt mode period is of long standing, the Allocation recovery mode will activate to enable the other copier to handle the remaining print quantity.

# Tandem Mode

## To Stop Scanning/Printing

### To cancel the tandem copying job:

- 1 Press [Stop] on the control panel of the primary copier.  
The scanning/printing job stops immediately, and the popup menu appears on the Basic Screen of the primary copier to ask you whether to continue or terminate the job. At this time, the tandem mode is not released.
- 2 Touch **CONTINUE** to go on, or **EXIT** to delete all the scanned data and to release the tandem mode.

### To cancel the job in the secondary copier only:

- 1 Press [Stop] on the control panel of the secondary copier.  
The secondary copier stops the current operation immediately, and the popup menu appears on the Basic Screen of the secondary copier to ask you whether to continue or cease the operation. At this time, the tandem mode is not released.

NOTE: If temporary suspension in the secondary copier takes a long time, the Allocation recovery mode will activate, enabling the primary copier to handle the remaining print quantity.

- 2 Touch **CONTINUE** to go on, or **EXIT** to delete all the data transmitted to the secondary copier and to release the tandem mode.

The primary copier will take over the remaining print quantity and complete the job.

NOTE: Once the Allocation recovery mode is activated and the primary copier is already handling the remaining print quantity, the secondary copier cannot continue with the tandem printing job, even when **CONTINUE** is touched on the popup menu.

# Tandem Mode

## Troubleshooting

### **Copying with the Allocation recovery mode:**

The Allocation recovery mode enables you to complete your copying job even when trouble occurs in either the primary or secondary copier, such as a paper jam. In that case, the copier that is trouble free completes the job.

NOTE: The copier is initially set to activate this function. Contact your service representative, if you do not require this function.

### **When a paper jam, SC-code (E-code, F-code) trouble or unloaded paper occurs on either the primary or secondary copier:**

The copier that is trouble free handles the remaining print quantity and completes the job.

When the job is completed, take the appropriate troubleshooting measures to correct the problem.

### **When memory overflow occurs on either the primary or secondary copier:**

#### On the primary copier

The scanning job will stop immediately, and the tandem copying job will be suspended on both copiers. At this time, the tandem mode is not released.

Take the same measure to be applied for single copier referring to p. 16-4.

#### On the secondary copier

The secondary copier will start the tandem copying job when the memory becomes available after completing some reserve jobs. In this case, the Allocation recovery mode functions to continue the tandem printing job on the primary copier until the secondary copier becomes available for the job.

If the memory of the secondary copier cannot be available despite the elapse of time, the tandem mode will be released on the secondary copier, and the Allocation recovery mode functions to complete the job on the primary copier.

### **When the power is turned off on either the primary or secondary copier:**

The tandem mode will be released automatically in either case. Restart the procedure from the first step.

## Section 13: Shortcuts

Set Reserve Job  
Store Originals Scanned from Platen  
Store Originals Scanned from EDH  
Stapling & Folding, Folding, and Trimming  
Mixed Original

Sheet/Cover Insertion  
Chapter  
Combination  
Booklet

Transparency Interleave  
Image Insert  
Book Copy  
Program Job  
Non-Image Area Erase

Reverse Image  
Repeat Image  
Frame/Fold Erasure  
AUTO Layout  
All-Image Area

Image Shift/ Reduce & Shift  
Stamp/Overlay  
Loading Paper  
Adding Toner



# Shortcuts

## Set Reserve Job (p. 6-21)

- 1 Touch **FREE JOB** to display the Reserve job setting screen while a current job is in progress.
- 2 Select copying conditions for the reserve job. Wait for the current job to complete its scanning operation, if necessary.
- 3 Position the Reserve job original(s) face up on the EDH (document handler) tray or face down on the platen glass.
- 4 Press [Start] to scan the Reserve job original(s).  
When scanning for the Reserve job is completed, the Basic screen for the current printing job will be restored.  
Copying for the reserve job will start when the current job is completed.

## Store Originals Scanned from Platen (p. 6-27)

- 1 Position the original on the platen glass.
- 2 Make desired copying selections, and select the 1-1 or 1-2 copy mode.
- 3 Touch **STORE** on the Basic screen to highlight the Store mode.
- 4 Press [Start] to scan and store the original image into memory.  
Repeat Steps 1 and 4 until all originals are scanned.
- 5 Touch **STORE** to exit the Store mode.
- 6 Enter the print quantity amount.
- 7 Press [Start] to begin copying.

## Store Originals Scanned from EDH (p. 6-29)

- 1 Touch **STORE** on the Basic screen to highlight the Store mode.
- 2 Make desired copying selections.
- 3 Position no more than 100 originals at a time on the EDH (document handler) tray.
- 4 Enter the print quantity amount.
- 5 Press [Start] to scan the originals.  
Repeat Steps 3 and 5 until all originals are scanned.
- 6 Touch **STORE** to exit the Store mode.
- 7 Press [Start] to begin copying.

### NOTES:

1. Page numbers indicated next to each Shortcut refer to the pages of the Operator's Manual where more detailed information can be found.
2. When using Platen Store mode or EDH Store mode in conjunction with other functions, check details on p. 6-27 and p. 6-29, respectively.

## Shortcuts

### Stapling & Folding, Folding, and Trimming (p. 7-13)

- 1 Close the EDH (document handler cover), then press [Panel Reset] to reset the machine.
- 2 Touch **OUTPUT APPLI.** to display the Finisher mode selection screen.
- 3 Touch **STAPLING & FOLDING** to select the Stapling & Folding mode with Trimming mode automatically selected; or touch **FOLDING** to select the Folding mode.  
Touch **TRIM** to select/deselect the Trimming mode, as desired.
- 4 Touch **OK** to display the Basic screen.
- 5 Make additional copying selections.
- 6 Enter the print quantity amount.
- 7 Position originals on the EDH tray.
- 8 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

### Mixed Original (p. 8-8)

- 1 Touch **SPECIAL ORIGINAL** to display the Special original screen.
- 2 Touch **Mixed Original**.
- 3 Make additional copying selections.
- 4 Touch **OK** to return to the Basic screen.
- 5 Select APS to copy on various sizes to match the originals, or select AMS mode to copy on one size.
- 6 Enter the print quantity amount.
- 7 Position mixed originals face up on the EDH (document handler) tray.  
Combine ledger, legal, letter, 5.5"x8.5"/or legal, letter R, letter.
- 8 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

### Sheet/Cover Insertion (p. 9-3)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **Sheet/Cover Insertion** to display the Sheet/Cover insertion screen.
- 3 If desired, touch **FRONT COPY** or **FRONT BLANK**.  
If desired, touch **BACK COPY** or **BACK BLANK**.
- 4 If desired, touch **COPY INSERTION** or **BLANK INSERTION**.  
Enter the page number for the first insertion location, then touch **SET**.
- 5 Repeat Step 4 for each insertion location, touching **SET** after each entry.
- 6 Select the desired tray source for the cover and /or insertion sheets.
- 7 Touch **OK** to return to the Application selection screen.
- 8 Make additional copying selections.
- 9 Touch **OK** to return to the Basic screen.
- 10 Enter the print quantity amount.
- 11 Position originals face up on the EDH (document handler) tray.
- 12 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

# Shortcuts

## Chapter (p. 9-8)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **Chapter** to display the Chapter page setting screen with 1-2 mode automatically selected.
- 3 Use the keypad to enter the page number of the first title page, then touch **SET**.
- 4 Repeat Step 3 for each additional title page, touching **SET** after each entry.
- 5 Touch **OK** to return to the Application selection screen.
- 6 Make additional copying selections.
- 7 Touch **OK** to return to the Basic screen.
- 8 Enter the print quantity amount.
- 9 Position (up to 100) originals face up on the EDH (document handler) tray.
- 10 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

## Combination: Copy 2, 4 or 8 originals on 1 sheet (p. 9-10)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **Combination** to display the Combination mode selection screen.
- 3 Touch **2 in 1**, **4 in 1**, or **8 in 1**.
- 4 Touch **OK** to return to the Application selection screen.
- 5 Make additional copying selections.
- 6 Touch **OK** to return to the Basic screen with AMS automatically selected. You may change this setting.
- 7 When all settings are correct, enter the print quantity amount.
- 8 Place original(s) face up on the EDH (document handler) tray.
- 9 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

## Booklet (p. 9-12)

- 1 First, load 11"x17" or 8.5"x11"R paper in a tray.
- 2 Touch **APPLI.** to display the Application selection screen.
- 3 Touch **Booklet** to display the Booklet mode selection screen.
- 4 Touch **NO COVER SHEET**, **COVER WITH COPY SHEET**, or **COVER WITH BLANK SHEET**.
- 5 Select the cover sheet tray source and the binding mode, if required.
- 6 Touch **OK** to return to the Application selection screen.
- 7 Make additional copying selections, or touch **OK** to return to the Basic screen.
- 8 Select 1-2 or 2-2 copy mode. To release AMS default, select magnification and copy size.
- 9 Touch **OUTPUT APPLI.** to select folding or stapling & folding if the FN-4 Finisher is installed, or to select trimming if the TMG-1 Trimming unit is installed.
- 10 Touch **OK** to restore the Basic screen, then enter the print quantity amount.
- 11 Position letter-size originals face up on the EDH (document handler) tray, in crosswise orientation.
- 12 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

## Shortcuts

### Transparency Interleave (p. 9-15)

- 1 First, load the same size copy paper as the transparencies in any regular tray.
- 2 Insert one transparency sheet at a time into the Multi-sheet bypass tray.
- 3 Touch **APPLI.** to display the Application selection screen.
- 4 Touch **Transparency Interleave** to display the Transparency interleave screen.
- 5 Touch **Blank Sheet Interleaving** or **Copy Sheet Interleaving**, unless your choice is already highlighted.
- 6 Touch **OK** to return to the Application selection screen.
- 7 Make additional selections.
- 8 Touch **OK** to return to the Basic screen with the required print quantity of [1] automatically selected.
- 9 Position the original face up on the EDH (document handler) tray or face down on the platen glass.
- 10 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

### Image Insert (p. 9-17)

- 1 In preparation, note the page No. locations of the images you will be scanning from the platen glass.
- 2 Touch **APPLI.** to display the Application selection screen.
- 3 Touch **Image Insert** to display the Image insertion No. setting screen.
- 4 Enter up to 30 page No. locations, touching **SET** after each entry.
- 5 When all page No. locations are entered, touch **OK** to restore the Application selection screen.
- 6 Make additional copying selections, or touch **OK** to return to the Basic screen. The Store mode is automatically selected.
- 7 To start scanning, position the regular originals face up on the EDH (document handler) tray, then press [Start].
- 8 After the originals on the EDH (document handler) tray are scanned, enter the print quantity amount for the job.
- 9 Next, position one original at a time on the platen glass in ascending order of pagination, i.e., 1~n.  
The platen glass originals can be paste ups, graphs, photos, newspaper articles, or any non-standard document.
- 10 In turn, press [Start] to scan each original from the platen glass.
- 11 Touch **STORE** to exit the Store mode.
- 12 Press [Start] to combine the non-standard images scanned from the platen glass with the regular images scanned from the EDH (document handler). When copying is completed, press [Panel Reset] to reset machine.

## Shortcuts

### Book Copy (p. 9-19)

- 1 First, load letter sheets in a regular tray or in the Multi-sheet bypass tray.
- 2 Touch **APPLI.** to display the Application selection screen.
- 3 Touch **Book Copy** to display the Book copy screen with AUTO layout and Non-image area erase selected.
- 4 Touch **Full scan, Front cover + Full scan**, or **Front/Back cover + Full scan**, as required. To change the binding mode, touch **REVERSE THE SIDE OF OPEN PAGE**.
- 5 Touch **OK** to return to the Application selection screen.
- 6 Make additional copying selections.
- 7 Touch **OK** to return to the Basic screen with the Store mode automatically selected.
- 8 Select 1-1 or 1-2 copy mode and enter the print quantity amount.
- 9 Position the open book in the right rear corner on the platen glass.
- 10 Align the edges of the book with the right measuring guide plate, then press [Start] to begin scanning.
- 11 Repeat Steps 9 to 10 to copy subsequent pages from the book, pressing [Start] to scan each page.
- 12 Touch **STORE** to remove its highlight and thus turn off the Store mode.
- 13 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

### Program Job (p. 9-21)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **Program Job** to scan multiple sets of originals in different settings (called JOBS) and then to output them all as a complete set.
- 3 Make additional copying selections for the first JOB.
- 4 Touch **OK** to return to the Basic screen. Store mode is automatically selected.
- 5 Position original(s) face up in the EDH (document handler) tray or face down on the platen glass, select the tray you want to use, then press [Start] to scan.
- 6 When scanning for the current JOB is completed, the popup menu will be displayed. To store the current JOB images, touch **DECISION**. To delete the images, touch **CANCEL**.
- 7 Repeat steps 3 to 6 until all JOB originals are scanned.
- 8 Select the desired output mode and enter the print quantity amount.
- 9 Touch **STORE** to remove its highlight and thus turn off the Store mode.
- 10 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

### Non-Image Area Erase (p. 9-23)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **Non-Image Area Erase**.
- 3 Make additional copying selections.
- 4 Touch **OK** to return to the Basic screen.
- 5 Enter the print quantity amount.
- 6 Position original face down on the platen glass, keeping the document handler cover open.
- 7 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

# Shortcuts

## Reverse Image (p. 9-25)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **Reverse Image** to switch from the black-on-white copying mode to white-on-black copying.
- 3 Make additional copying selections.
- 4 Touch **OK** to return to the Basic screen.
- 5 Enter the print quantity amount.
- 6 Position original(s) face up on the EDH (document handler) tray or face down on the platen glass.
- 7 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

## Repeat Image (p. 9-26)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **Repeat** to display the Repeat mode selection screen.
- 3 Touch **Vertical/Horizontal** to select the mode, then specify the vertical and horizontal widths of the scanning area using up/down arrow key, or touch **ENTER REPEAT WIDTH BY KEYPAD** to display a popup screen to enter a value from the touch screen keypad. Touch **AUTO** to allow the machine to set the equal repeat area according to the size of the original placed onto the platen glass with non-image area erase functioning. Touch **2 Repeat**, **4 Repeat**, or **8 Repeat** to allow the max. repeats according to the size of the original.
- 4 Touch **OK** to return to the Application selection screen.
- 5 Make additional copying selections.
- 6 Touch **OK** to return to the Basic screen.
- 7 Enter the print quantity amount.
- 8 Position original(s) face down on the platen glass.  
If you selected the **AUTO** or **2/4/8 Repeat**, keep the document cover open during copying.
- 9 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

## Frame/Fold Erasure (p. 9-29)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **Frame/Fold Erasure** to display the Frame/Fold erasure selection screen.
- 3 Touch **Frame Erasure (All sides)** or **Frame Erasure (Each side)**, then enter a value or use the default setting.
- 4 Touch **Fold Erasure**, then enter a value or use the default setting.
- 5 Touch **OK** to complete the setting and return to the Application selection screen.
- 6 Make additional copying selections, or touch **OK** to return to the Basic screen.
- 7 Select copy size and enter the print quantity amount.
- 8 Position original(s) face up on the EDH (document handler) tray or face down on the platen glass.
- 9 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

## Shortcuts

### AUTO Layout (p. 9-31)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **AUTO Layout** to center the original image on the copy paper.
- 3 Make additional copying selections, or touch **OK** to return to the Basic screen.
- 4 Select copy size and enter the print quantity amount.
- 5 Position original face up in the EDH (document handler) tray or face down on the platen glass without skewing it. When using platen glass, DO NOT CLOSE the document handler cover.
- 6 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

### All-Image Area (p. 9-33)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **All-image Area** if you wish to copy the image completely to the edges of the paper.
- 3 Make additional copying selections, or touch **OK** to return to the Basic screen.
- 4 Select copy size and enter the print quantity amount.
- 5 Position original(s) face up on the EDH (document handler) tray or face down on the platen glass.
- 6 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

### Image Shift/ Reduce & Shift (p. 9-34)

- 1 First, select a copy mode (1-1, 1-2, 2-1, 2-2) and a copy size from the Basic screen.
- 2 Touch **APPLI.** to display the Application selection screen.
- 3 Touch **Image Shift** to display the Image shift selection screen.
- 4 Touch **Image Shift** (or **Reduce & Shift**, if image loss is likely).
- 5 Touch **FRONT**, **BACK**, or **BOTH SIDES** to indicate the side(s) on which you want the shift to occur.  
When Booklet or 2 Repeat mode of Repeat has been selected, the PAGE SPACE setting is available.
- 6 Touch **UP SHIFT**, **DOWN SHIFT**, **RIGHT SHIFT**, or **LEFT SHIFT** to specify the shift direction.
- 7 Use the touch screen keypad to enter the shift amount , from 0 ~ 250 mm.
- 8 Touch **OK** to return to the Application selection screen.
- 9 Make additional copying selections, or touch **OK** to return to the Basic screen.
- 10 Enter the print quantity amount.
- 11 Position original(s) face up on the EDH (document handler) tray or face down on the platen glass.
- 12 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.

## Shortcuts

### Stamp/ Overlay (p. 9-38)

- 1 Touch **APPLI.** to display the Application selection screen.
- 2 Touch **Stamp/Overlay** to display the Stamp/Overlay selection screen.
- 3 Touch the desired stamp (**STAMP**, **SET NUMBERING**, **PAGE NUMBERING**, **DATE/TIME**, **WATERMARK**, and **WATERMARK NUMBERING**) to display the subsequent screen.  
On each screen, you can specify the desired stamp type of the selected stamp.
- 4 Specify the desired position, size, etc., according to the options provided on each screen, then touch **OK** to return to the Stamp/Overlay selection screen.
- 5 The Overlay function will be selected simply by touching **OVERLAY** to highlight it.
- 6 Touch **OK** to return to the Application selection screen.
- 7 Make additional copying selections, or touch **OK** to return to the Basic screen.
- 8 When Overlay is selected, the Store mode is automatically selected, and APS and AMS are released. Set the desired Copy mode, Copy density, Lens mode, and Copy size, then enter the print quantity amount.
- 9 Position original(s) FACE UP in EDH (document handler) tray or FACE DOWN on platen glass.  
When Overlay is selected, follow the scanning procedure below.
  - (1) Position the overlaying original in the document handler or on the platen glass, then press [Start] to scan.
  - (2) The second and subsequent pages are to be overlaid in printing. Place them in the document handler or on the platen glass, then press [Start].  
IMPORTANT: PLACE AND SCAN THE ORIGINALS IN REGULAR ORDER OF PAGINATION.
  - (3) When scanning job is completed, touch **STORE** to remove its highlight and thus turn off the Store mode.
- 10 Press [Start]. When copying is completed, press [Panel Reset] to reset the machine.



# Shortcuts

## Loading Paper (p. 15-2)

### **Main Body User-Adjustable Trays: Tray 1 (500), Tray 2 (500), and Tray 3 (1,000)**

- 1 Withdraw the main body tray, then place paper into the tray with the curl turning up.  
Load size 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R or 5.5"x8.5" (crosswise).  
Do not stack paper above the level of the red line.
- 2 Move the green levers located at the front and left side until they meet the edge of the stack of paper.
- 3 When paper is seated properly, push the tray back fully into the copier.

### **LCC (Large Capacity Cassette: C-305/C-305L) Service-Adjustable: Tray 4 (4,000)**

- 1 Open the LCC upper door (lift lid).
- 2 Press the Paper load button located at the front of the LCC to lower the bottom plate of the LCC.
- 3 Load the fixed size paper into the LCC with the paper curl turning down (see note).
- 4 Repeat Steps 2 and 3 until the bottom plate cannot go down any more.  
Do not stack paper above the paper hook level.
- 5 When the stack of paper is seated properly in the tray, close the LCC upper door (lid).

NOTE: When loading Tab sheets, be sure the tab extensions are positioned at the rear side of the tray (not at the front where the Paper load button is located), and jutting to the right, away from the hinged side of the LCC cover.

## Adding Toner (p. 15-7)

### **CAUTION**

Keep toner cartridge away from children. Although the toner is non-toxic, do not inhale it or allow it to enter your eyes. In case the toner comes in contact with eyes, please consult your physician.

- 1 Open the machine front door and pull out the toner unit 90° to the right.
- 2 Move the toner cartridge lock lever toward the front until it stops, then remove the empty toner cartridge.
- 3 Shake the new toner cartridge several times to loosen toner, then remove the cartridge protective cap.
- 4 Set the new toner cartridge into the toner unit, aligning the hollow part of the cartridge with the arrow on the toner unit.
- 5 Move the toner cartridge lock lever BACK until it stops, then return the toner unit to its original position.
- 6 Close the machine front door.

## Section 14 : Key Operator Mode

To the Key Operator

How to Access the Key Operator Mode

Function Menu Map

System Initial Setting [1]

Date & Time Setting [1]

Language Select Setting [2]

IP Address Setting [3]

Copier Initial Setting [2]

User Setting Mode [3]

User Density Level 1 Setting [1]

User Density Level 2 Setting [2]

User Lens Mode Ratio Setting [3]

ECM (Electronic Copy Monitor) Function Setting [4]

How to Access the ECM Setting Mode

E.C.M. Data Edit [1]

E.C.M. All Count Reset [2]

E.C.M. Function Setting [3]

Lock / Delete Program Memory [5]

Paper Type / Special Size Set [6]

Panel Contrast / Key Sound Adjustment [7]

Key Operator Data Setting [8]

Weekly Timer [9]

How to Access the Weekly Timer Setting Mode

Weekly Timer On/Off Setting [1]

Timer Setting [2]

Timer Action On/Off Setting [3]

Lunch Hour Off Setting [4]

Timer Interrupt Password Setting [5]

Control Panel Adjustment [10]

Tray Size Setting [11]

Energy Saver Setting [12]

Memory Switch Setting [13]



Machine Management List Print [14]

Side 2 Lens Adjustment [16]

Finisher Adjustment [17]

HDD Management Setting [18]

Key Operator ECM Form

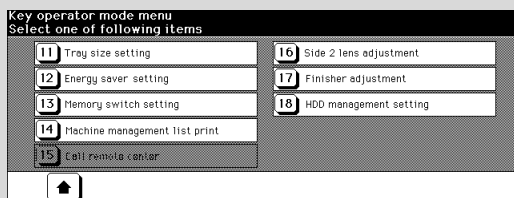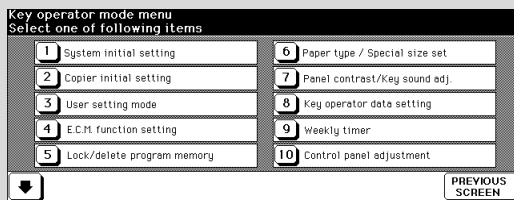

# Key Operator Mode

## To the Key Operator


The key operator is trained to handle all special key operator functions that are not accessible to the general user, such as monitoring overall copier activity, machine performance, and service information; modifying machine settings; and controlling user activity, for billing purposes.

A unique 4-digit key operator password is normally set by service at installation. If the unique code is not set by service, the copier will not display Key Operator Password Entry Screen when the Key Operator mode is being accessed, and a key operator password will not be required. A service-set 8-digit ECM master key code must be entered by the key operator to access the Electronic Copy Monitor functions, and a service-set 4-digit Weekly timer master key code must be entered by the key operator to access the Weekly timer functions.


To ensure the security of Key Operator mode, it is recommended that you establish a unique key operator password, along with the key operator ECM master key code and Weekly timer master key code, and keep them in a confidential file.

❑ HELP is unavailable in the Key Operator Mode


Help Screen

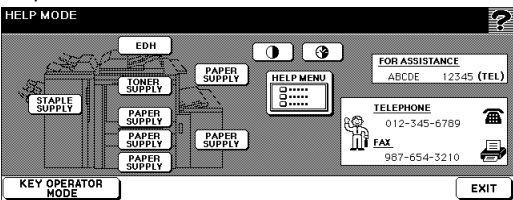


Key Operator Password Entry Screen

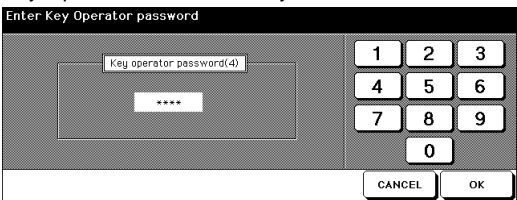

Key Operator Mode Screen 1

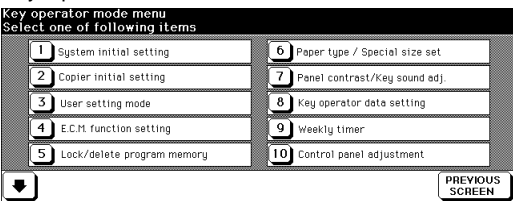

Key Operator Mode Screen 2

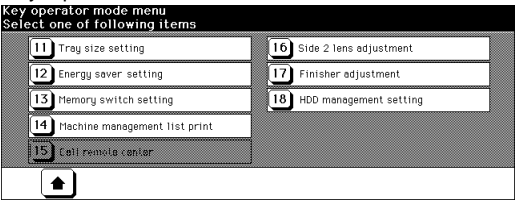

# Key Operator Mode

## To the Key Operator (continued)

### How to Access the Key Operator Mode

- 1 Press the [Help] button on the Control panel to display the Help Screen.
- 2 Then, touch the **Key Operator Mode** on the Help Screen.  
The Key Operator Password Entry Screen displays when the 4-digit key operator password is set by service.  
Otherwise, the Key Operator Mode Screen displays without the password requirement.
- 3 If the Key Operator Password Entry Screen is displayed, use the keypad on the touch screen to enter your 4-digit key operator password; then touch **OK**, to display the Key Operator Mode Screen. (See note.)  
If the key operator password is not valid, check with your service representative.
- 4 To display menus [11] to [18] of the Key Operator Mode Screen, touch the lower arrow key. To return the menu [1] to [10] of the Key Operator Mode Screen, touch the upper arrow key.
- 5 Make setting changes from the Key Operator Mode Screen, as described on the following pages.

NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

# Key Operator Mode

## Function Menu Map

### FUNCTION MENU

### SUB FUNCTION MENU AND SETTING OPTIONS

<b>[1] System initial setting</b>	[1] Date&Time setting: [Present time; Setting time; Summer time] [2] Language select setting: [Japanese; English] [3] IP address setting: [IP address; Subnetmask; Gateway address; Line speed]
<b>[2] Copier initial setting</b>	Copy mode: [EDH; 1-1; 1-2; 2-1; 2-2] Copy density: [AES; manual] Lens mode: [AMS; ratio 0.33~4.00] Paper size: [APS; trays 1, 2, 3, 4, or Multi-sheet bypass tray] Output: [Output appli.; Staple-sort; Sort] Function: [Special original; Rotation off]
<b>[3] User setting mode</b>	[1] User density level 1 setting: [darker / lighter 16 levels] [2] User density level 2 setting: [darker / lighter 16 levels] [3] User lens mode ratio setting: [Userset 1; Userset 2; Userset 3 (ratio 0.33 ~ 4.00)]
<b>[4] E.C.M. Function setting</b>	[1] E.C.M. data edit: [Change; Add; Delete] [2] E.C.M. all count reset: [YES; NO] [3] E.C.M. function setting: [ECM On; ECM Off; Immediately; After job; Warning]
<b>[5] Lock/delete program memory</b>	
<b>[6] Paper type / Special Size Set</b>	Paper type: [Blank; Normal; Thick 1; Thick 2; Recycle; Thin; Color; TAB PAPER; Special; User; Fine; Seal] Special size: [STD size; STD size (special); Non STD size; Wide paper]
<b>[7] Panel contrast / Key Sound Adj.</b>	[Panel contrast; Backlight contrast; Buzzer volume regulation]
<b>[8] Key operator data setting</b>	[Name; Key Operator Tel. No.]
<b>[9] Weekly timer</b>	[1] Weekly timer ON/OFF setting: [On; Off] [2] Timer setting: [ON time; OFF time] [3] Timer action ON/OFF setting: [ON; OFF] [4] Lunch hour Off setting: [Valid; Invalid] [5] Timer interrupt password setting: [4-digit password]
<b>[10] Control panel adjustment</b>	
<b>[11] Tray size setting</b>	ATS/APS switch: [ON; OFF] Tray priority: [Tray 1, Tray 2, Tray 3, LCC, Bypass]

# Key Operator Mode

## Function Menu Map (continued)

### FUNCTION MENU

### SUB FUNCTION MENU AND SETTING OPTIONS

#### **[12]Energy saver setting**

Auto low power: [5, 10, 15, 30, 60, 90, 120, 240]  
Auto shut off: [--, 30, 60, 90, 120, 240]

#### **[13]Memory switch**

- [1] Panel reset timer
- [2] Panel Reset key function
- [3] EDH-Original effect
- [4] Program memory auto recall (30)
- [5] Finisher mode by Full-auto
- [6] Initial by Key counter insert
- [7] Erasure outside area of original
- [8] EDH frame erasure selection
- [9] Automatic tray switching
- [10] Platen APS
- [11] EDH APS
- [12] Platen AMS
- [13] EDH AMS
- [14] Select tray when APS cancel
- [15] Platen original size detect
- [16] EDH original size detect
- [17] Platen orig. size detect (SMALL)
- [18] Rotation
- [19] Rotation (180 angle)
- [20] B6R size original type
- [21] A3, B4, 11x17, 8.5x14, F4 orig. type
- [22] Staple mode reset-function
- [23] Job offset operating
- [24] Continuation print
- [25] SDF Auto start
- [26] Key click sound
- [27] 1 SHOT indication time
- [28] Energy saver screen
- [29] Start key latch function
- [30] STOP key function
- [31] Auto select of Booklet copy
- [32] E.C.M. password
- [33] Arrow key change (Image Shift)
- [34] Exit direction of 1 sheet
- [35] An interruption suspended way
- [36] E.C.M. password input timing

# Key Operator Mode

## Function Menu Map (continued)

### FUNCTION MENU

### SUB FUNCTION MENU AND SETTING OPTIONS

<b>[13] Memory switch (cont'd)</b>	[37] Key click sound (No paper/JAM)
	[38] Reserve copy function
	[39] Scan stop by a pull out tray
	[40] Change page no. pos. (booklet)
	[41] Trimmer (STD/Non STD size)
	[42] Timer which prohibits Printer
	[43] Bookmark function
<b>[14] Machine management list print</b>	[44] Side 2 print (STD repeat + zoom)
	[45] Delete of overlay image
	[1] Program memory list
	[2] User management list
	[3] E.C.M. management list
	[4] Font pattern list
<b>[15] No Function</b>	
<b>[16] Side 2 lens adjustment</b>	[---, -0.1 %, -0.2 %, -0.3 %]
<b>[17] Finisher adjustment</b>	[1] Stapling & Folding stopper adj.
	[2] Folding stopper adjustment
	[3] Trimming stopper adjustment
<b>[18] HDD management setting</b>	[1] Password list/delete
	[2] JOB auto delete period setting
	[3] State of HDD capacity

# Key Operator Mode

## System Initial Setting [1]

Set the following initial conditions of the copier.


- Date & Time setting: Current date and time, summer time
- Language select setting: Language used in LCD (English)
- IP address setting: IP address to be accessed from PC

## Date & Time Setting [1]


Set the current date and time, and also the summer time.

- ☐ Default setting: Summer time off

System Initial Setting Menu Screen

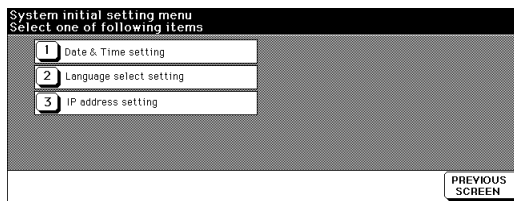

Date & Time Setting Screen

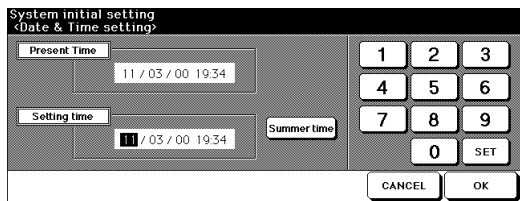

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**.

Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen.

NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

- 2 Touch **[1] System initial setting** to display the System Initial Setting Menu Screen, then touch **[1] Date & Time setting** to display the Date & Time Setting Screen.
- 3 Adjust the time.

The time indicated by the copier is displayed in the upper line and ordered by date, month, year, and time (in 24-hour expression). In the lower line, the highlighted section can be changed by using the keypad on the screen.

Touch **SET** to move the highlighted section to the number to be changed.

- 4 To activate the summer time function, touch **Summer time** to highlight it. The Present time will gain an hour.
- 5 Touch **OK** to update the Present time by the Setting time and return to the System Initial Setting Menu Screen.
- 6 If no further changes are required, proceed to step 8.
- 7 If other system initial settings are required, touch desired key.
- 8 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen.
- 9 Touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.



# Key Operator Mode


## System Initial Setting [1] (continued)

### Language Select Setting [2]


Select the language used in the LCD (English).

☐ Default setting: English

System Initial Setting Menu Screen

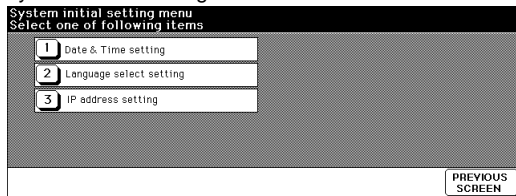

Language Selection Screen

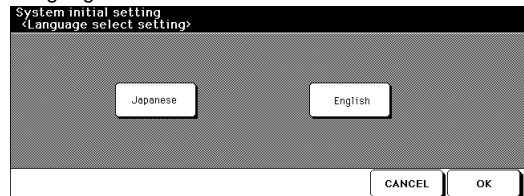

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen.

NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

- 2 Touch **[1] System initial setting** to display the System Initial Setting Menu Screen, then touch **[2] Language select setting** to display the Language Selection Screen.
- 3 Touch **English**.
- 4 Touch **OK** to complete the setting and return to the System Initial Setting Menu Screen.
- 5 If no further changes are required, proceed to step 7.
- 6 If other system initial settings are required, touch desired key.
- 7 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen.
- 8 Touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

# Key Operator Mode

## System Initial Setting [1] (continued)


### IP Address Setting [3] (This setting is necessary for the future use.)

When using the Job Editor function, this setting is required to enable a PC to gain access to this machine.


NOTE: Ask your network manager to perform this setting. Incorrect setting may cause a trouble in other network systems.

❑ Setting options: IP address; Subnetmask; Gateway address, Line speed


System Initial Setting Menu Screen

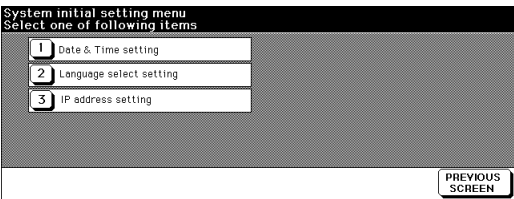

IP Address Setting Screen

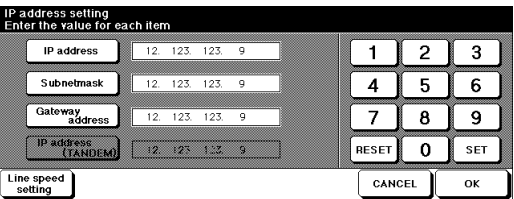

Line Speed Setting Screen

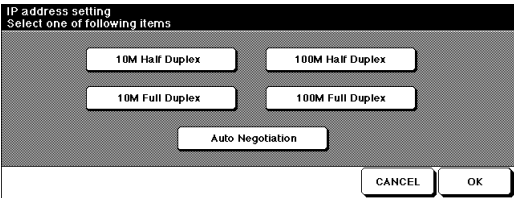

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen.
- NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 Touch **[1] System initial setting** to display the System Initial Setting Menu Screen, then touch **[3] IP address setting** to display the IP Address Setting Screen.
- 3 Make the required setting. When customizing the line speed, touch **Line speed setting** to display the Line Speed Setting Screen. Touch the desired key, then touch **OK** to restore the IP Address Setting Screen.
- 4 Touch **OK** to complete the setting and return to the System Initial Setting Menu Screen.
- 5 If no further changes are required, proceed to step 7.
- 6 If other system initial settings are required, touch desired key.
- 7 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen.
- 8 Touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

# Key Operator Mode

## Copier Initial Setting [2]

Initial settings are the settings that display automatically when the copier is powered on, when Panel Reset timer is operated, or when [Panel Reset] key is pressed. These settings can be changed by the key operator, as shown in this section. Initially, i.e., at installation, the Basic Screen displays the following condition to meet Energy Star requirements:

### Initial Setting

Copy Mode: 1-1 Copy Density: AES Lens Mode: 1:1 Paper Tray: APS Output Mode: offset sort
--

When Initial settings are changed by the key operator, the new initial settings display when the copier is powered on, when Panel Reset timer is reached, or when [Panel Reset] key is pressed.

The following initial settings can be changed by the key operator:

Copy mode: [EDH; 1-1; 1-2; 2-2; 2-1] Copy density: [AES; manual] Lens mode: [AMS; ratio 0.33~4.00] Paper tray: [APS; trays 1, 2, 3, or 4] Output mode: [non-sort; group; staple-sort; stapling & folding; folding; cover sheet] Special original: [Image Quality; Text/Photo Enhance; Special Original; Original Form] Rotation: OFF
--


Setting procedures are described on the following pages.

NOTE: The most commonly-used settings are established at installation. Before changing any of the copier settings, be sure that you understand the overall and long-range effect of the change.


# Key Operator Mode

## Copier Initial Setting [2] (continued)

Key Operator Mode Screen

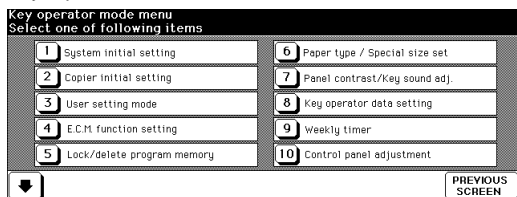

Copier Initial Setting Screen

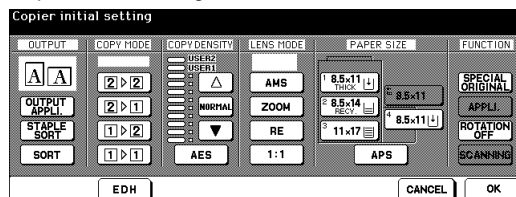

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**.  
Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen.

NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

- 2 Touch **[2] Copier initial setting** to display the Copier Initial Setting Screen.
- 3 Make a selection for each mode as initial settings.  
Touch **EDH** to select or deselect it.
- 4 Touch **OK** to complete the setting and return to the Key Operator Mode Screen.
- 5 If no further changes are required, proceed to step 7.
- 6 If other key operator settings are required, touch desired key.
- 7 Touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

# Key Operator Mode

## User Setting Mode [3]


Set two user set density levels and three USERSETs of magnification.

### User Density Level 1 Setting [1]


Output copying samples from 16 density levels from Lighter to Normal or Normal to Darker, then select the desired exposure and program it as USER 1.

The programmed copy density can be recalled by selecting USER 1 on the Basic Screen.

User Setting Mode Menu Screen

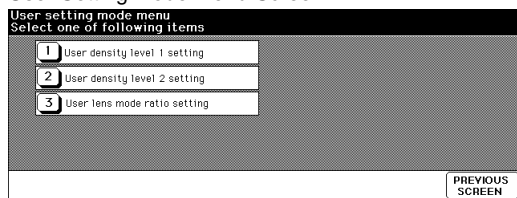

User Density Level 1 Setting Screen

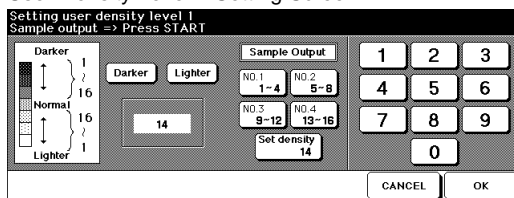

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen.
- NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 Touch **[3] User setting mode** to display the User Setting Mode Menu Screen, then touch **[1] User density level 1 setting** to display the User Density Level 1 Setting Screen.
- 3 Place the original on the platen glass or in the EDH.
- 4 Touch **Darker** or **Lighter** to select the density level to be programmed.
- 5 Touch **No.1 1~4**, **No.2 5~8**, **No.3 9~12**, **No.4 13~16**, or **Set density ##**, then press [Start]. The density level sample sheet will be output.
- 6 Select the desired exposure from the sample sheet(s), then enter the density level No. by using the touch screen keypad.
- 7 Touch **OK** to complete the setting and return to the User Setting Mode Menu Screen.
- 8 If no further changes are required, proceed to step 10.
- 9 If other user setting changes are required, touch desired key, from [1]~[3].
- 10 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen.
- 11 Touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.


# Key Operator Mode

## User Setting Mode [3] (continued)


### User Density Level 2 Setting [2]

Output copying samples from 16 density levels from Lighter to Normal or Normal to Darker, then select the desired exposure and program it as USER 2.  
The programmed copy density can be recalled by selecting USER 2 on the Basic Screen.

User Setting Mode Menu Screen

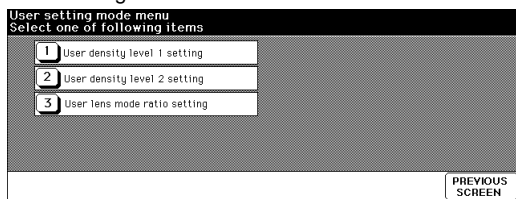

User Density Level 2 Setting Screen

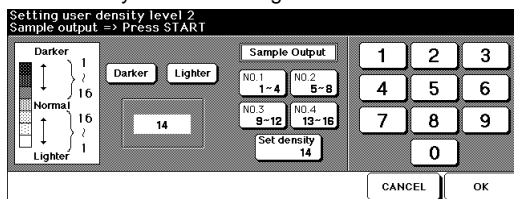

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**.  
Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen.
- NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 Touch **[3] User setting mode** to display the User Setting Mode Menu Screen, then touch **[2] User density level 2 setting** to display the User Density Level 2 Setting Screen.
- 3 Place the original on the platen glass or in the EDH.
- 4 Touch **Darker** or **Lighter** to select the density level to be programmed.
- 5 Touch **No.1 1~4**, **No.2 5~8**, **No.3 9~12**, **No.4 13~16**, or **Set density ##**, then press [Start].  
The density level sample sheet will be output.
- 6 Select the desired exposure from the sample sheet(s), then enter the density level No. by using the touch screen keypad.
- 7 Touch **OK** to complete the setting and return to the User Setting Mode Menu Screen.
- 8 If no further changes are required, proceed to step 10.
- 9 If other user setting changes are required, touch desired key, from [1]~[3].
- 10 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen.
- 11 Touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

# Key Operator Mode

## User Setting Mode [3] (continued)


### User Lens Mode Ratio Setting [3]

The preset and user set ratios available on the Basic Screen are used to reduce and enlarge the original image to accommodate copy paper size.


Normally, users are allowed to change the three **USERSETS** in the bottom line on the User Lens Mode Ratio Setting Screen. The preset keys in the top and middle lines can be programmed in 2-5 DIPSW mode for special purposes, but ordinarily, it is recommended that they remain unchanged.

- ☐ Setting options: User set or Preset ratio
- ☐ Default setting: USERSET1: 4.00  
USERSET2: 2.00  
USERSET3: 0.50

User Setting Mode Menu Screen

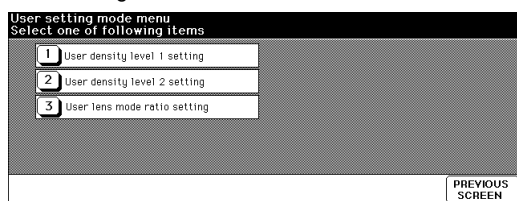

User Lens Mode Ratio Setting Screen

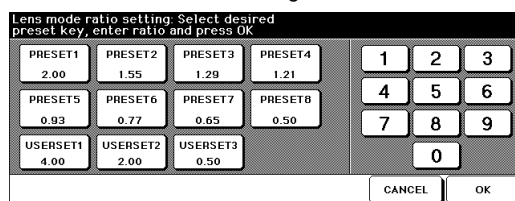

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen.

NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

- 2 Touch **[3] User setting mode** to display the User Setting Mode Menu Screen, then touch **[3] User lens mode ratio setting** to display the User Lens Mode Ratio Setting Screen.
- 3 Touch the **USERSET** you want to change, then enter a ratio from 0.33~4.00, using the keypad.  
If a ratio under 0.33 is entered, 0.33 will be displayed.  
If a ratio over 4.00 is entered, 4.00 will be displayed.
- 4 Touch **OK** to complete the setting and return to the User Setting Mode Menu Screen.
- 5 If no further changes are required, proceed to step 7.
- 6 If other user setting changes are required, touch desired key, from [1] ~ [3].
- 7 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen.
- 8 Touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

# Key Operator Mode

## ECM (Electronic Copy Monitor) Function Setting [4]

This function can only be accessed by the key operator after a 8-digit ECM master key code is entered. The Electronic Copy Monitor allows you to monitor all copying activity by controlling ECM password accounts.

This feature can track copier usage for individual users and/or accounts as well as limit access to the copier to authorized users. Copy quantity limits for specific accounts can also be set. Use the ECM Key Operator Form provided at the end of this section to record ECM password information.

The ECM stores up to 1,000 ECM passwords, each of which represents a separate account that can be used for billing and recordkeeping. The number of users assigned to each account may depend upon the billing system in operation and the number of individuals and departments using the copier. When the ECM is activated, copying can be performed only after a valid ECM password is entered. Copy quantity and copy limit for each account can be visually confirmed on the screen.

If ECM needs to be activated on your machine, contact your service representative.

The following ECM settings can be made:

### **[1] E.C.M. data edit:**

Change, add, or delete ECM data, and reset the copy count of the individual account.

### **[2] E.C.M. all count reset:**

Clear the copy count for all accounts.

### **[3] E.C.M. function setting:**

Select the ECM function to be on or off, and also set the machine condition when the copy limit is reached to stop immediately or after a job is completed, or to only display a warning message.




# Key Operator Mode


## ECM (Electronic Copy Monitor) Function Setting [4] (continued)

### How to Access the ECM Setting Mode


#### Key Operator Mode Screen

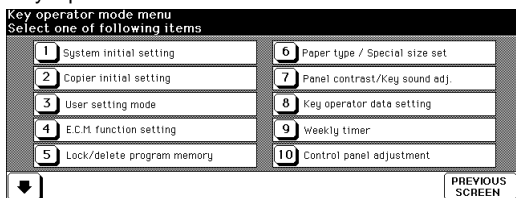

#### ECM Master Key Code Screen

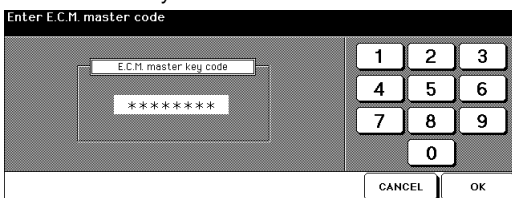

#### ECM Setting Menu Screen

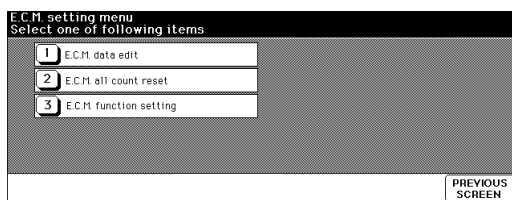

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note 1.)  
If the key operator password is not valid, check with your service representative.
- 2 Touch **[4] E.C.M. function setting**. The ECM Master Key Code Screen displays, if a code is required.
- 3 Use the keypad on the touch screen to enter your 8-digit ECM master key code, then touch **OK** to display the ECM Setting Menu Screen. (See note 2.)
- 4 Select the desired ECM function, and make settings, as required.  
To exit the ECM mode, touch **PREVIOUS SCREEN** on ECM Setting Menu Screen.
- 5 To exit the Key Operator mode, touch **PREVIOUS SCREEN** on the Key Operator Mode Screen to restore the Basic Screen.

#### NOTES:

- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 If an invalid ECM master key code is entered, continue by entering the valid 8-digit code. The ECM master key code can be set to less than 8 digits by the Memory switch setting of the Key operator function.

# Key Operator Mode

## ECM (Electronic Copy Monitor) Function Setting [4] (continued)

### E.C.M. Data Edit [1]

Use this setting to display the list of copy count and copy limit for each account, to change, add, or delete the ECM data, and to reset the copy count of the individual account.

- ☐ ECM No.: Designated by key operator
- ☐ ECM Password: Unique 8-digit numeric code programmed by key operator for user
- ☐ User Name: Max. 8 characters
- ☐ Copy Limit: 0 to 999,999 copies

ECM Setting Menu Screen

ECM setting menu

Select one of following items

1

ECM data edit

2

ECM all count reset

3

ECM function setting

PREVIOUS SCREEN

ECM Data Edit Screen

ECM data <Edit>

NO. 0005

NO.	NAME	COUNT	LIMIT
0005	ABCDEF	0000017	999999
1000	2KCSG	012345	999999

Change

Add

Delete

1

2

3

4

5

6

7

8

9

0

SET

COUNT RESET

PREVIOUS SCREEN

ECM Data Change Screen

ECM data <Change>

No.

123

Password

12345

Name

2KCSG

Limit

99999

A

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

Q

R

S

T

U

V

W

X

Y

Z

(

)

-

/

0

1

2

3

4

5

6

7

8

9

CANCEL

OK

ECM Data Add Screen

ECM data <Add>

No.

123

Password

12345

Name

2KCSG

Limit

99999

A

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

Q

R

S

T

U

V

W

X

Y

Z

(

)

-

/

0

1

2

3

4

5

6

7

8

9

CANCEL

OK

Password Duplication Screen

ECM data <Add>

No.

123

Password

12345

Name

2KCSG

Limit

99999

YES

NO

CANCEL

OK

Name Duplication Screen

ECM data <Add>

No.

123

Password

12345

Name

2KCSG

Limit

99999

OK

CANCEL

OK

# Key Operator Mode

## ECM (Electronic Copy Monitor) Function Setting [4] (continued)

### E.C.M. Data Edit [1] (continued)

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**.  
Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note 1.)
- 2 Touch **[4] E.C.M. function setting**. The ECM Master Key Code Screen displays, if a code is required.
- 3 Enter your 8-digit ECM master key code, then touch **OK** to display the ECM Setting Menu Screen. (See note 2.)

#### NOTES:

- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 If an invalid ECM master key code is entered, continue by entering the valid 8-digit code.
- 4 Touch **[1] E.C.M. data edit**. The ECM Data Edit Screen will be displayed.  
To change, add, or delete the ECM data, and to reset the copy count of the individual account, follow the procedure for each as described below.

#### To Change ECM Data:

- (1) Touch **▲** or **▼** key on the right side of the list to highlight the ECM data to be changed, then touch **Change**. The ECM Data Change Screen will be displayed.
- (2) Touch the desired item key to highlight it, then enter new data by using the touch screen keypad.

**Password:** 8 digits max. (See note 1.)

**Name:** 8 characters max. (See note 2.)

**Limit:** 999,999 copies max.

#### NOTES:

- 1 We recommend that you make a list of all ECM passwords and account numbers.
- 2 If an invalid user name is entered, continue by the valid name.
- (3) Touch **OK** to complete the setting and to verify whether the same password or name has been already used for another account No.  
When a password is duplicated:  
The Password Duplication Screen will be displayed. Touch **YES** to re-enter new password, or **NO** to create duplicate password.

NOTE: If duplicate password is created, the number of copies will be counted only for the ECM password with the smallest No. We recommend you do not use duplicate ECM password.

When a name is duplicated:

The Name Duplication Screen will be displayed. Touch **OK** to re-enter new name.

# Key Operator Mode

## ECM (Electronic Copy Monitor) Function Setting [4] (continued)

### E.C.M. Data Edit [1] (continued)

#### To Add ECM Data:

- (1) Touch **Add** on the ECM Data Edit Screen. The ECM Data Add Screen will be displayed.
- (2) Touch the desired item key to highlight it, then enter the data by using the touch screen keypad.

**Password:** 8 digits max. (See note 1.)  
**Name:** 8 characters max. (See note 2.)  
**Limit:** 999,999 copies max.

#### NOTES:

- 1 We recommend that you make a list of all ECM passwords and account numbers.
  - 2 If an invalid user name is entered, continue by the valid name.
- (3) Touch **OK** to complete the setting and to verify whether the same password or name has been already used for another account No.  
When a password is duplicated:  
The Password Duplication Screen will be displayed. Touch **YES** to re-enter new password, or **NO** to create duplicate password.

NOTE: If duplicate password is created, the number of copies will be counted only for the ECM password with the smallest No. We recommend you do not use duplicate ECM password.

When a name is duplicated:  
The Name Duplication Screen will be displayed. Touch **OK** to re-enter new name.

#### To Delete ECM Data:

- (1) Touch **▲** or **▼** key on the right side of the list to highlight the ECM data to be deleted, then touch **Delete**. The Delete Confirmation Screen will be displayed.
- (2) Touch **YES** to delete, or **NO** to cancel.

#### To Clear ECM Count:

- (1) Touch **▲** or **▼** key on the right side of the list to highlight the desired ECM data, then touch **COUNT RESET**. The Reset Confirmation Screen will be displayed.
- (2) Touch **YES** to clear the copy count of the selected ECM data, or **NO** to cancel.

Delete Confirmation Screen

NO.	NAME	COUNT/LIMIT
0005	ABCDEF	000001
1000	2KC5G	012345

E.C.M. data delete YES/NO ?

YES NO

1 2 3  
4 5 6  
7 8 9  
0 SET

↓ ↑ COUNT RESET PREVIOUS SCREEN

Reset Confirmation Screen

NO.	NAME	COUNT/LIMIT
0005	ABCDEF	000001
1000	2KC5G	012345

E.C.M. count reset YES/NO ?

YES NO

1 2 3  
4 5 6  
7 8 9  
0 SET

↓ ↑ COUNT RESET PREVIOUS SCREEN

# Key Operator Mode

## ECM (Electronic Copy Monitor) Function Setting [4] (continued)

### E.C.M. Data Edit [1] (continued)

- 5 If other ECM setting changes are required, touch **PREVIOUS SCREEN** on the ECM Data Edit Screen to return to the ECM Setting Menu Screen. Touch desired key, from [1]~[3].
- 6 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- 7 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.


# Key Operator Mode

## ECM (Electronic Copy Monitor) Function Setting [4] (continued)


### E.C.M. All Count Reset [2]

Reset the count for all ECM accounts.

ECM Setting Menu Screen

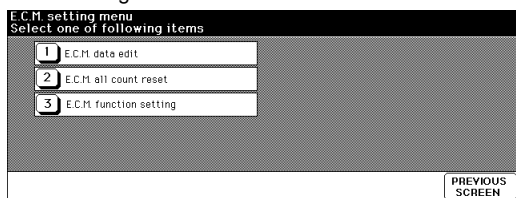

ECM All Count Reset Screen

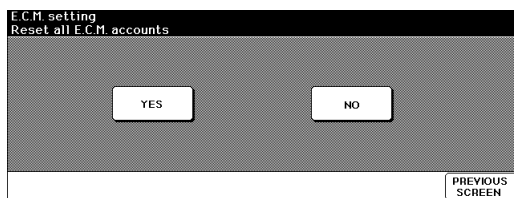

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note 1.)
- 2 Touch **[4] E.C.M. function setting**. The ECM Master Key Code Screen displays, if a code is required.
- 3 Enter your 8-digit ECM master key code, then touch **OK** to display the ECM Setting Menu Screen. (See note 2.)
- 4 Touch **[2] E.C.M. all count reset**. The ECM All Count Reset Screen will be displayed.
- 5 Touch **YES** to reset all counters to zero and to return to the ECM Setting Menu Screen.  
Or, touch **NO** to cancel. Touching **PREVIOUS SCREEN** will also cancel this function and return to the ECM Setting Menu Screen.
- 6 If other ECM setting changes are required, touch desired key, from [1]~[3].
- 7 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- 8 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

#### NOTES:

- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 If an invalid ECM master key code is entered, continue by entering the valid 8-digit code.


# Key Operator Mode

## ECM (Electronic Copy Monitor) Function Setting [4] (continued)


### E.C.M. Function Setting [3]

Use this function to turn ECM On or Off; or to select whether the copier will stop at the time the count limit is reached, or after the current copy job is completed.

ECM Setting Menu Screen

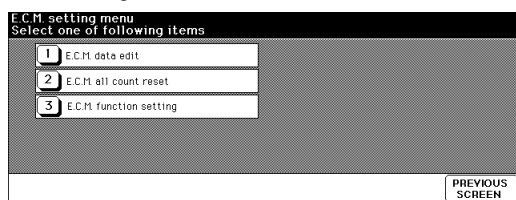

ECM Function Setting Screen

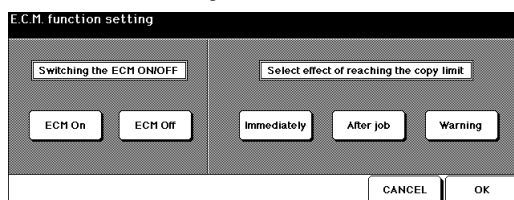

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note 1.)
- 2 Touch **[4] E.C.M. function setting**. The ECM Master Key Code Screen displays, if a code is required.
- 3 Enter your 8-digit ECM master key code, then touch **OK** to display the ECM Setting Menu Screen. (See note 2.)
- 4 Touch **[3] E.C.M. function setting**. The ECM Function Setting Screen will be displayed.
- 5 Touch **ECM On** to activate ECM or touch **ECM Off** to de-activate ECM. The selected key will be highlighted.
- 6 Touch **Immediately** to stop the machine when the copy limit is reached. In this case, the paper in process will be completed, and “Enter ECM password” will display after the copier stops. Touch **After job** to stop the machine after the current job is completed, when copy limit is reached. Touch **Warning** only to display a warning message when copy limit is reached. The selected key will be highlighted.
- 7 Touch **OK** to complete the setting and return to the ECM Setting Menu Screen.
- 8 If other ECM setting changes are required, touch desired key, from [1]~[3].
- 9 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- 10 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

#### NOTES:

- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 If an invalid ECM master key code is entered, continue by entering the valid 8-digit code.

# Key Operator Mode

## Lock/Delete Program Memory [5]


Use this function to lock/unlock or delete a Job that has been programmed.

A locked Job is indicated by a lock icon (🔒) on the Lock/Delete Program Memory Screen.


The settings of a locked job cannot be changed.

- ❑ Setting options: Lock Program memory; Unlock Program memory; Delete Program memory
- ❑ Lock/delete is available for all 30 stored jobs
- ❑ A blank key indicates that no job is programmed
- ❑ \*\*\*\*\* indicates that a job is programmed but unnamed

Key Operator Mode Screen

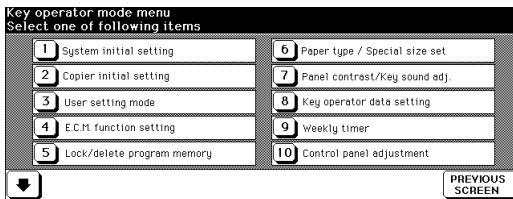

Lock/Delete Program Memory Screen

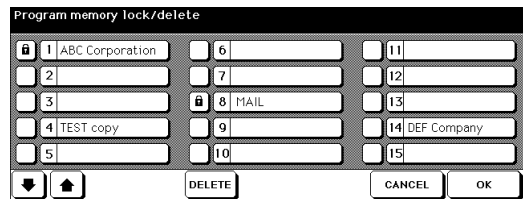

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**.  
Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)
- 2 Touch **[5] Lock/delete program memory** to display the Lock/Delete Program Memory Screen.  
To lock/unlock a program memory;
  - (1) Touch the key on the left side of the desired job number. Use arrow keys to scroll to the desired job number, if required.
  - (2) The lock icon will appear on the touched key to show that the selected job is locked. The previously locked job will be unlocked when selected, and the lock icon on the touched key will disappear.  
To delete a program memory;
  - (1) Touch the job number you want to delete. Use arrow keys to scroll to the desired job number, if required.
  - (2) Touch **DELETE**. Selected programs and the name will be deleted from the program memory.
- 3 Touch **OK** to complete the setting and return to the Key Operator Mode Screen.
- 4 If other key operator settings are required, touch desired key, from [1] to [18].
- 5 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.




# Key Operator Mode


## Paper Type / Special Size Set [6]

Use this function to indicate a specific paper type or to specify a special paper size for each tray key on the Basic Screen. This is especially useful when special paper is used on a regular basis and is always placed in a specific paper tray.


Key Operator Mode Screen

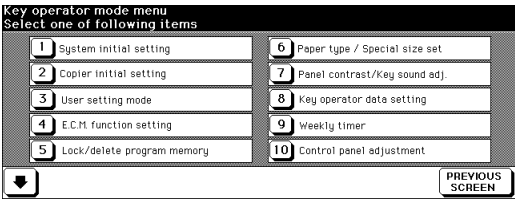


Paper Type Setting Screen

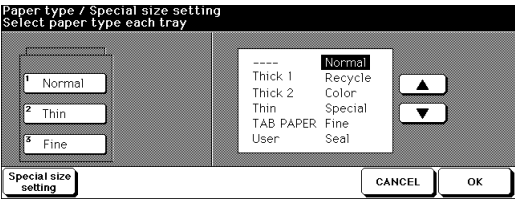


Special Size Setting Screen (STD size)

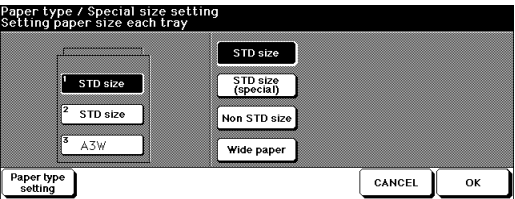


Special Size Setting Screen (STD size (special))

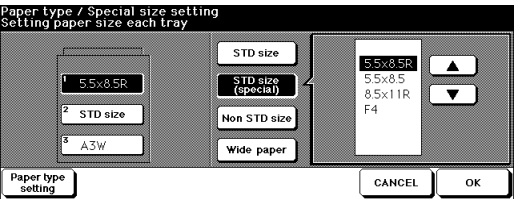


Special Size Setting Screen (Non STD size)

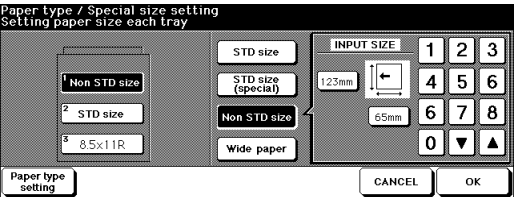

Special Size Setting Screen (Wide paper)

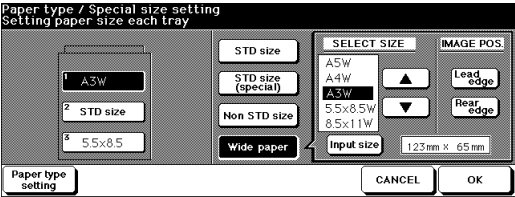

Special Size Setting Screen (Input size)

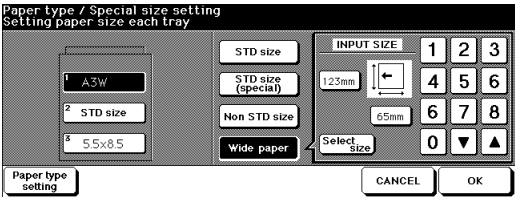

# Key Operator Mode

## Paper Type / Special Size Set [6] (continued)

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**.  
Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)

- 2 Touch **[6] Paper type / Special size set** to display the Paper Type Setting Screen.

To specify paper type;

- (1) Touch the desired paper tray key to highlight it.
- (2) Touch the arrow keys to select paper type.

To specify special size;

- (1) Touch **Special size setting** on the Paper Type Setting Screen to display the Special Size Setting Screen.
- (2) Touch the desired paper tray to highlight it.
- (3) Touch a paper size key to specify a paper size for the selected tray.
  - Select **STD size** to allow the machine to automatically detect the size of paper loaded in the tray and indicate it on the tray key.
  - Select **STD size (special)** to display the popup menu to show available paper sizes to be specified. Use arrow keys on the popup menu to select the desired size.
  - Select **Non STD size** to display the popup menu to enter the paper size by using arrow keys or touch screen keypad.
  - Select **Wide paper** to display the popup menu to show available wide paper sizes to be specified. Use arrow keys on the popup menu to select the desired wide size, then touch **Input size** to display the popup menu to enter the paper size by using arrow keys or touch screen keypad.

Touch **Lead edge** or **Rear edge** to select the image starting position.

- 3 Touch **OK** on the Paper Type Setting Screen or on the Special Size Setting Screen to complete the setting and return to the Key Operator Mode Screen.
- 4 If other key operator settings are required, touch desired key, from [1] to [18].
- 5 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.


NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

# Key Operator Mode


## Panel Contrast / Key Sound Adjustment [7]

Use this feature to adjust the level of brightness of the touch screen portion of the control panel, and also the volume of the touch key.

Key Operator Mode Screen

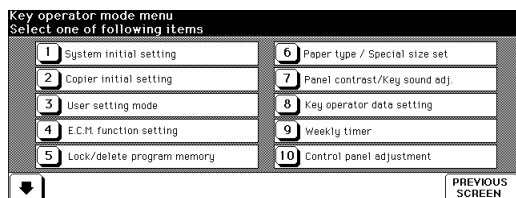

Panel Contrast/ Key Sound Adjustment Screen

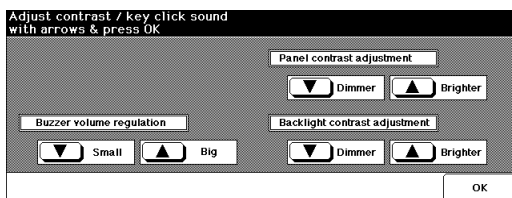

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)
- 2 Touch **[7] Panel contrast/Key sound adj.** to display the Panel Contrast/ Key Sound Adjustment Screen.
- 3 Adjust the Panel contrast, Backlight contrast, or Buzzer volume, as desired. Touch **Dimmer** to make the panel or backlight contrast dimmer than currently displayed, or touch **Brighter** to make the panel or backlight contrast brighter than currently displayed. Touch **Small** or **Big** to regulate the buzzer volume of the touch keys.
- 4 Touch **OK** to complete the setting and return to the Key Operator Mode Screen.
- 5 If other key operator settings are required, touch desired key, from [1] to [18].
- 6 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

### NOTES:

- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 The control panel contrast feature can be adjusted from the Help screen provided the feature setting is activated by Service. When the Control panel contrast key is pressed, the Contrast adjustment screen will be displayed. Contact your service representative if the feature is required.


# Key Operator Mode

## Key Operator Data Setting [8]

Use this screen to enter the name and extension number of the key operator indicated on the Help Screen developed from the Basic Screen.

- ❑ Setting options: 5-digit key operator telephone extension; Max. 8-character key operator name

Key Operator Mode Screen

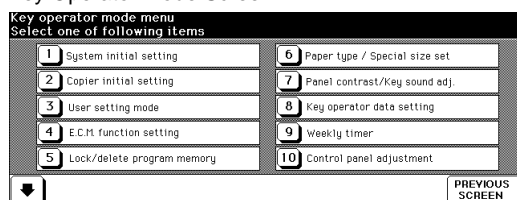


Key operator mode menu  
Select one of following items

1 System initial setting	6 Paper type / Special size set
2 Copier initial setting	7 Panel contrast/Key sound adj.
3 User setting mode	8 Key operator data setting
4 E.C.M function setting	9 Weekly timer
5 Lock/delete program memory	10 Control panel adjustment

PREVIOUS SCREEN

Key Operator Data Setting Screen

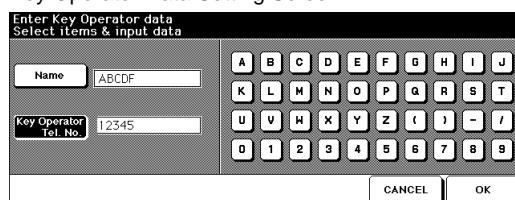

Enter Key Operator data  
Select items & input data

Name: ABCDF

Key Operator Tel. No.: 12345

CANCEL OK

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)
- 2 Touch **[8] Key operator data setting** to display the Key Operator Data Setting Screen.
- 3 Touch **Name** to highlight it, then enter the key operator name up to 8 characters from the touch screen keypad.
- 4 Touch **Key Operator Tel. No.** to highlight it, then enter a 5-digit extension number from the touch screen keypad. If the extension number is less than 5 digits, use a hyphen [-] to make it five. The hyphen added in the beginning will be indicated as a space on the Help Screen.
- 5 Touch **OK** to complete the setting and return to the Key Operator Mode Screen.
- 6 If other key operator settings are required, touch desired key, from [1] to [18].
- 7 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

# Key Operator Mode

## Weekly Timer [9]

This function can be accessed only by the key operator after a unique 4-digit Weekly timer master key code is entered.

The Weekly Timer is a copier management function that shuts down power to the machine on a daily or hourly basis, and can be programmed specifically for lunch breaks, weekends and holidays, or any time the copier is not required.

In Addition, Timer Interrupt can be enabled (with or without a password requirement) to allow temporary use of the machine during periods when power is shut down by the Timer function.

Conditions required to use the Weekly Timer

- The power plug is inserted into the socket.
- The power switch is turned on.
- The current date and time are correctly set.

If the Weekly timer needs to be activated on your machine, contact your service representative.

The following Weekly timer settings can be made.

### **[1] Weekly timer ON/OFF setting**

Enable and disable the Timer function.

### **[2] Timer Setting**

Specify the times that the copier will turn ON and OFF for each day of the week or the entire week.

### **[3] Timer action ON/OFF Setting**

Specify the working days of the machine by the Timer, for all Mondays through Sundays, and/or individually for each day of the given month.

### **[4] Lunch hour off setting**

Specify the lunch time interval during which the copier will go off and on.

### **[5] Timer interrupt password set**

Require Password entry for the Timer off function and establish the amount of usage time.

#### NOTES:


- 1 The time is set in terms of the 24 hour clock, where hour [1] is the first hour after midnight; and hour [24] is the hour of midnight. For example, 6 a.m. is 06:00 hours; 6 p.m. is 18:00 hours.
- 2 The [Panel Reset] key is used to change numbers determined by the **SET** touch key.

# Key Operator Mode


## Weekly Timer [9] (continued)

### How to Access the Weekly Timer Setting Mode


Key Operator Mode Screen

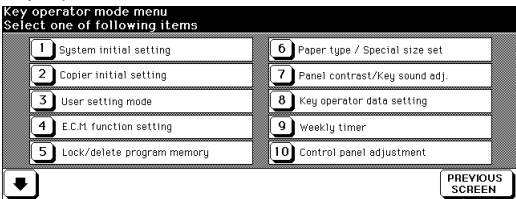

Weekly Timer Master Key Code Screen

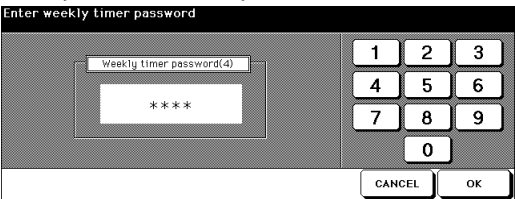

Weekly Timer Setting Menu Screen

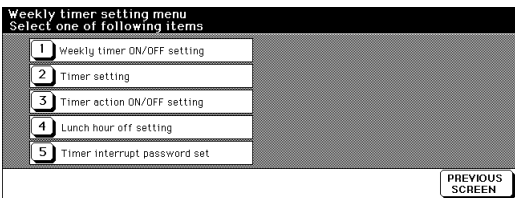

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note 1.)
- 2 Touch **[9] Weekly timer**. The Weekly Timer Master Key Code Screen displays, if a code is required.
- 3 Use the keypad on the touch screen to enter your 4-digit Weekly timer master key code, then touch **OK** to display the Weekly Timer Setting Menu Screen. (See note 2.)
- 4 Select the desired Weekly timer function, and make settings, as required.
- 5 To exit the Weekly timer mode, touch **PREVIOUS SCREEN** on the Weekly Timer Setting Menu Screen.
- 6 To exit the Key operator mode, touch **PREVIOUS SCREEN** on the Key Operator Mode Screen to restore the Basic Screen.

#### NOTES:


- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 If an invalid Weekly timer master key code is entered, continue by entering the valid 4-digit code.

# Key Operator Mode


## Weekly Timer [9] (continued)

### Weekly Timer On/Off Setting [1]

Weekly Timer Setting Menu Screen

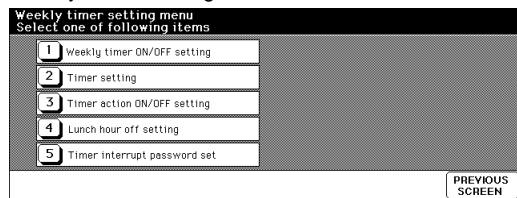

Weekly Timer On/Off Setting Screen

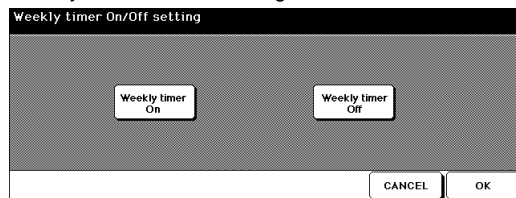

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note 1.)
- 2 Touch **[9] Weekly timer**. Enter your 4-digit Weekly timer master key code, then touch **OK** to display the Weekly Timer Setting Menu Screen. (See note 2.)
- 3 Touch **[1] Weekly timer ON/OFF setting** to display the Weekly Timer On/Off Setting Screen.
- 4 Touch **Weekly timer On** to activate Weekly timer, or touch **Weekly timer Off** to deactivate Weekly timer. The default setting is Weekly timer Off. The selected key will be highlighted.
- 5 Touch **OK** to complete the setting and return to the Weekly Timer Setting Menu Screen.
- 6 If other Weekly timer settings are required, select another desired menu item, from [1]~[5].
- 7 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- 8 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

#### NOTES:

- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 If an invalid Weekly timer master key code is entered, continue by entering the valid 4-digit code.

# Key Operator Mode

## Weekly Timer [9] (continued)

### Timer Setting [2]

Use this function to set the On/Off times in hours and minutes for each day of the week or set the collective time for the entire week, i.e., the same On/Off time for each day.

Weekly Timer Setting Menu Screen

Weekly timer setting menu  
Select one of following items

1

Weekly timer ON/OFF setting

2

Timer setting

3

Timer action ON/OFF setting

4

Lunch hour off setting

5

Timer interrupt password set

PREVIOUS SCREEN

Weekly Timer On/Off Time Setting Screen

Weekly timer Copier ON/OFF time setting  
Use keypad and press SET button

WEEK	ON	OFF
Mon.	00:00	00:00
Tue.	00:00	00:00
Wed.	00:00	00:00
Thu.	00:00	00:00
Fri.	00:00	00:00
Sat.	00:00	00:00
Sun.	00:00	00:00

Collectively timer setting

CANCEL

OK

Weekly Timer On/Off Time Collective Setting Screen

Collectively timer setting  
Use keypad and press SET button

Mon.

Tue.

Wed.

Thu.

Fri.

Sat.

Sun.

ON

OFF

00:00

00:00

1

2

3

4

5

6

7

8

9

0

SET

CANCEL

OK

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note 1.)
- 2 Touch **[9] Weekly timer**. Enter your 4-digit Weekly timer master key code, then touch **OK** to display the Weekly Timer Setting Menu Screen. (See note 2.)

NOTES:

- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 If an invalid Weekly timer master key code is entered, continue by entering the valid 4-digit code.
- 3 Touch **[2] Timer setting** to display the Weekly Timer On/Off Time Setting Screen.
- 4 When the screen is displayed, the ON-time of Monday is always highlighted. Enter a 2-digit ON-hour (ex. 8 a.m. is 08) and a 2-digit ON-minute (ex. 7 min. is 07) using the touch screen keypad, and then touch **SET**. Touching **SET** repeatedly will shift the input section from Monday ON, Monday OFF, Tuesday ON, Tuesday OFF e.g.

NOTES:

- If ON-time and OFF-time are the same, power will not go on.
- If the setting is 00:00–00:00, you will not be able to set the copiers off/on condition for specific days.

When setting Sunday OFF-time, Monday ON-time is highlighted again. Proceed to step 6.



## Key Operator Mode

### Weekly Timer [9] (continued)

#### Timer Setting [2] (continued)

- 5 To set the ON/OFF time collectively for more than one day of the week, touch **Collectively timer setting** to display the Weekly Timer On/Off Time Collective Setting Screen.
- 6 When you open this screen, the ON and OFF times are always set at 00:00~00:00. Touch to highlight the day(s) of the week to be set. More than one can be selected at a time.  
Enter the ON-time and OFF-time using the touch screen keypad, and then touch **SET** after each entry.
- 7 Touch **OK** on the Weekly Timer On/Off Time Setting Screen or on the Weekly Timer On/Off Time Collective Setting Screen to complete the setting, and return to the Weekly Timer Setting Menu Screen.
- 8 If other Weekly timer settings are required, select another desired menu item, from [1]~[5].
- 9 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- 10 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.


# Key Operator Mode

## Weekly Timer [9] (continued)


### Timer Action On/Off Setting [3]

Use this function to set the On/Off condition of the copier for a given month. Set the On-Off condition for specific days; or collectively, for all Mondays through Sundays of the given month. The default setting is collective: On for Mondays through Saturdays, and Off for Sundays.


Weekly Timer Setting Menu Screen

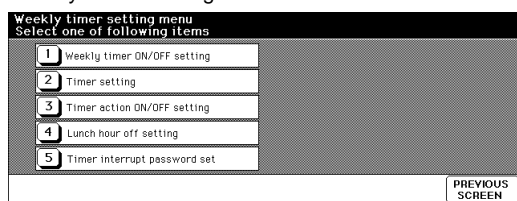

Timer Action On/Off Setting Screen

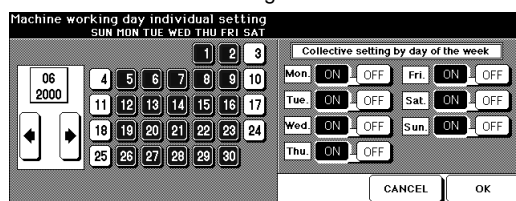

Timer Action Change Confirmation Screen

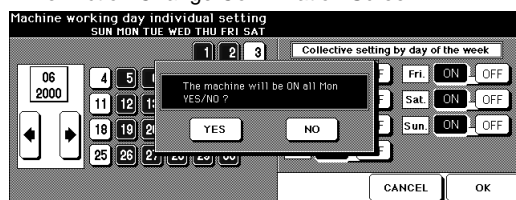

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note 1.)
- 2 Touch **[9] Weekly timer**. Enter your 4-digit Weekly timer master key code, then touch **OK** to display the Weekly Timer Setting Menu Screen. (See note 2.)

#### NOTES:

- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 If an invalid Weekly timer master key code is entered, continue by entering the valid 4-digit code.
- 3 Touch **[3] Timer action ON/OFF setting** to display the Timer Action On/Off Setting Screen.  
The days of the current month are displayed on the left half of the screen, with timer-active days highlighted.
- 4 To activate or deactivate the Timer for any individual day, touch the key for that day to change its indication.  
To change the month, use arrows to scroll to the desired month.

## Key Operator Mode

### Weekly Timer [9] (continued)

#### Timer Action On/Off Setting [3] (continued)

- 5 To collectively set the on/off data for the entire month by the day of the week, touch the **ON** or **OFF** key for the desired day on the right half of the screen. If you touch an already-highlighted key, no change will occur.
- 6 If any change is made in the collective setting area, the Timer Action Change Confirmation Screen will be displayed.  
Touch **YES** to change the timer action, or touch **NO** to cancel.  
The Timer Action On/Off Setting Screen will be restored.
- 7 Touch **OK** on the Timer Action On/Off Setting Screen to complete the setting and return to the Weekly Timer Setting Menu Screen.
- 8 If other Weekly timer settings are required, select another desired menu item, from [1]~[5].
- 9 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- 10 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.


# Key Operator Mode

## Weekly Timer [9] (continued)


### Lunch Hour Off Setting [4]

The Weekly timer function turns the copier ON and OFF once a day. Use the Lunch hour off function to shut down power during the lunch break and then turn it on again according to the Weekly timer function setting. Only one off-time interval can be programmed.

Weekly Timer Setting Menu Screen

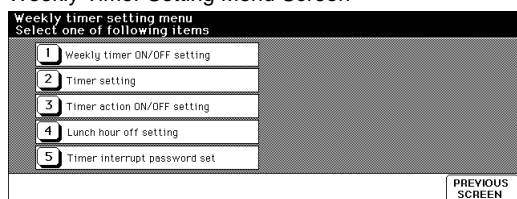

Lunch Hour Off Setting Screen

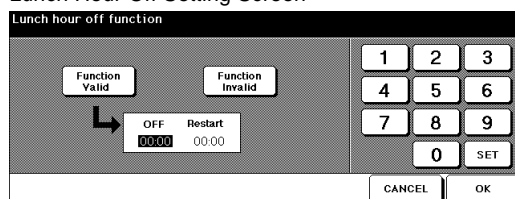

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note 1.)
- 2 Touch **[9] Weekly timer**. Enter your 4-digit Weekly timer master key code, then touch **OK** to display the Weekly Timer Setting Menu Screen. (See note 2.)
- 3 Touch **[4] Lunch hour off setting** to display the Lunch Hour Off Setting Screen.
- 4 Touch **Function Valid** to activate the Lunch hour off function. Set OFF-time and Restart-time using the touch screen keypad, and then touch **SET** after each entry. Touch **Function Invalid** to de-activate the Lunch hour off function. The time setting area will appear grayed out and cannot be selected. The Function Invalid setting is the factory default setting.
- 5 Touch **OK** to complete the setting and return to the Weekly Timer Setting Menu Screen.
- 6 If other Weekly timer settings are required, select another desired menu item, from [1]~[5].
- 7 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- 8 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

#### NOTES:

- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 If an invalid Weekly timer master key code is entered, continue by entering the valid 4-digit code.


# Key Operator Mode

## Weekly Timer [9] (continued)


### Timer Interrupt Password Setting [5]

Use this password setting mode to establish a 4-digit password requirement for using Timer Interrupt function. The default password of 0000 allows the timer function to be interrupted without the requirement for password entry.

Weekly Timer Setting Menu Screen

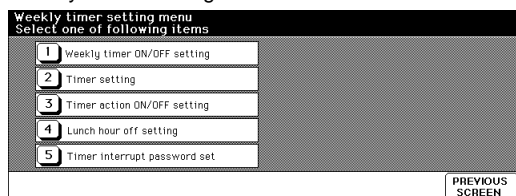The screen displays a list of five menu items under the heading "Weekly timer setting menu" and "Select one of following items". The items are: 1 Weekly timer ON/OFF setting, 2 Timer setting, 3 Timer action ON/OFF setting, 4 Lunch hour off setting, and 5 Timer interrupt password set. A "PREVIOUS SCREEN" button is located at the bottom right.

Timer Interrupt Password Setting Screen

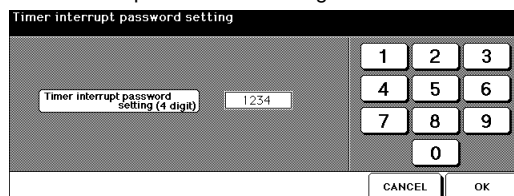The screen displays the "Timer interrupt password setting" interface. It features a numeric keypad with digits 0-9. A label "Timer interrupt password setting (4 digit)" is positioned above a text input field that currently shows "1234". At the bottom right, there are "CANCEL" and "OK" buttons.

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note 1.)
- 2 Touch **[9] Weekly timer**. Enter your 4-digit Weekly timer master key code, then touch **OK** to display the Weekly Timer Setting Menu Screen. (See note 2.)

NOTES:


- 1 If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 If an invalid Weekly timer master key code is entered, continue by entering the valid 4-digit code.
- 3 Touch **[5] Timer interrupt password set** to display the Timer Interrupt Password Setting Screen.
- 4 Use the touch screen keypad to enter a 4-digit password, and then touch **OK** to complete the setting and return to the Weekly Timer Setting Menu Screen.  
NOTE: When the password setting is 0000, timer interrupt can be used simply by turning the copier OFF, then ON. In this case, you will be asked to enter the duration of use (a period of time to turn the copier power on).
- 5 If other Weekly timer settings are required, select another desired menu item, from [1]~[5].
- 6 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- 7 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

# Key Operator Mode


## Control Panel Adjustment [10]

Use this feature to check the LCD touch screen and realign the position of the touch sensor that may have shifted.

Key Operator Mode Screen

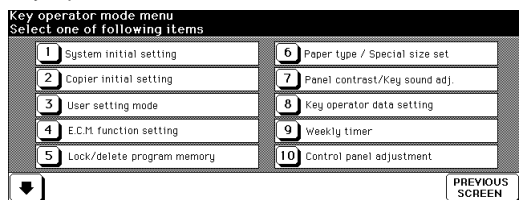

Control Panel Adjustment Screen

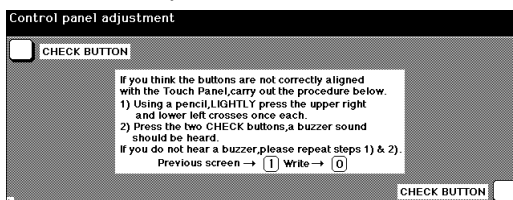

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)
- 2 Touch **[10] Control panel adjustment** to display the Control Panel Adjustment Screen.
- 3 Touch the “+” indication at the upper right corner, then lower left corner on the screen. The present coordinates will be displayed in the message area of the screen.
- 4 Check that the X coordinate and Y coordinate displayed in the first line of the message area fall within the standard value displayed in the second line.
- 5 Touch the **CHECK BUTTONS** at the upper left and lower right corners on the screen to check if the buzzer tone functions normally.
- 6 If the coordinates fall out of the range of the standard value in step 4, or the buzzer tone does not sound in step 5, repeat the adjustment procedure from 3 to 5.
- 7 Press [0] of the control panel keypad to start writing the adjustment data.  
If other key operator settings are required, press [1] to restore the Key Operator Mode Screen.
- 8 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.


NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

# Key Operator Mode


## Tray Size Setting [11]

Select whether the tray size setting will be detected or not detected when ATS/APS functions. If you select it to be detected, you may also select the priority of the detection for each tray.


Key Operator Mode Screen 1

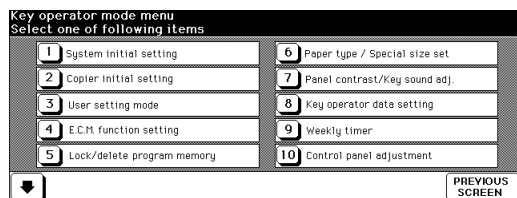

Key Operator Mode Screen 2

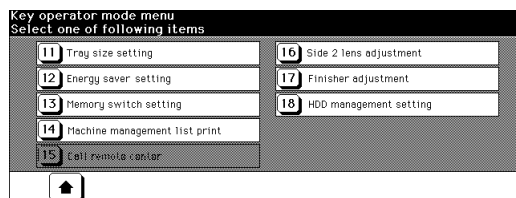

Tray Auto Select Setting Screen

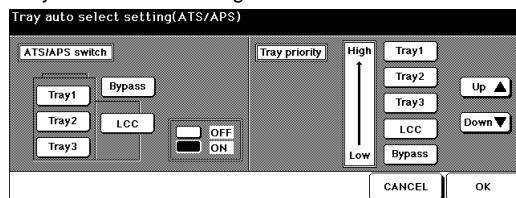

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)
- 2 To display menus [11] to [18] of the Key Operator Mode Screen, touch Lower arrow key.
- 3 Touch **[11] Tray size setting** to display the Tray Auto Select Setting Screen.
- 4 On the left half of the screen, touch to highlight each tray key, then select **OFF** or **ON** to specify whether the selected tray is to be automatically detected or not when ATS/APS functions.
- 5 Tray keys specified as ATS/APS ON will appear on the right half of the screen. Touch to highlight the desired tray key, then change its priority by using **Up (▲)** and **Down (▼)** arrow keys.
- 6 Touch **OK** to complete the setting and restore the Key Operator Mode Screen.
- 7 If other key operator settings are required, select the desired menu item, from [1] to [18].
- 8 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.


NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

# Key Operator Mode


## Energy Saver Setting [12]

Select the interval of time that must elapse before Auto Low Power and Auto Shut Off become activated. Auto Shut Off conserves more energy than Auto Low Power. The period of time selected for Auto Low Power cannot exceed the Auto Shut Off setting.


Key Operator Mode Screen 1

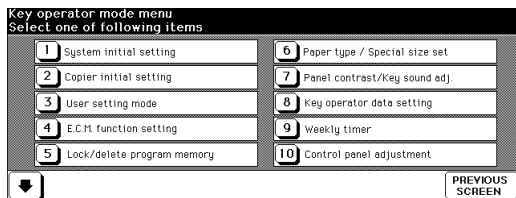

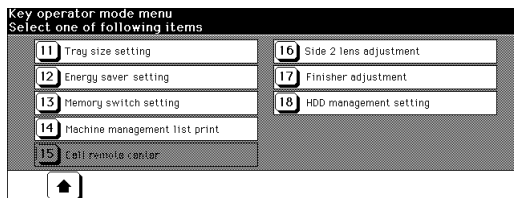


Key Operator Mode Screen 2

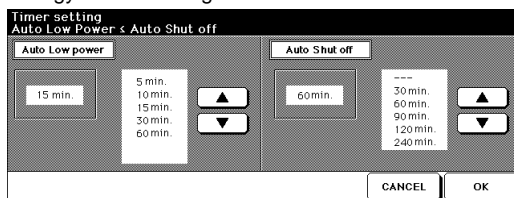

Energy Saver Setting Screen



- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen.  
NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.
- 2 To display menus [11] to [18] of the Key Operator Mode Screen, touch  Lower arrow key.
- 3 Touch **[12] Energy saver setting** to display the Energy Saver Setting Screen.
- 4 The periods of time currently selected for each energy saver function are located on the Timer Setting Screen below the Auto Low Power and Auto Shut Off indicators. Touch the arrow keys () and () in each area to select a specific waiting period before activating the Auto Low Power or Auto Shut Off.  
NOTES:
  - 1 The period of time selected for Auto Low Power cannot exceed the Auto Shut Off setting.
  - 2 If the same period of time as Auto Shut Off is selected for Auto Low Power, the Auto Shut Off will function instead of Auto Low Power.
- 5 Touch **OK** to complete the setting and restore the Key Operator Mode screen.
- 6 If other key operator settings are required, select the desired menu item, from [1] to [18].
- 7 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.



# Key Operator Mode

## Memory Switch Setting [13]

This function allows you to change the Memory Settings listed below. See pp. 14-41~14-45 for details on Memory Settings.


SW No.	Item	Setting (default is underlined)
No. 01:	Panel reset timer	OFF/ 30 sec./ <u>60 sec.</u> / 90 sec./ 120 sec./150 sec./ 180 sec./ 210 sec./ 240 sec./ 270 sec./ 300 sec.
No. 02:	Panel Reset key function	<u>Full-Auto</u> / Initial Setting
No. 03:	EDH-Original effect	EDH Panel Reset key selected/ <u>EDH selected</u>
No. 04:	Program memory auto recall (30)	<u>OFF</u> / ON
No. 05:	Finisher mode by Full-auto	Face down (Sub tray)/ Non-sort/ <u>Sort</u> / Staple sort/ Folding&Stapling/ Folding/ Face up (Sub tray)
No. 06:	Initial by Key counter insert	OFF/ <u>ON</u>
No. 07:	Erase outside area of orig.	Erased for except Platen (1:1)/ <u>Area outside of orig. erased</u> / Erased for APS/AMS only
No. 08:	EDH frame erasure selection	None/ 1mm frame/ 2mm frame/ <u>3mm frame</u> / 4mm frame/ 5mm frame
No. 09:	Automatic tray switching	<u>OFF</u> / ON
No. 10:	Platen APS	OFF/ <u>ON</u>
No. 11:	EDH APS	OFF/ <u>ON</u>
No. 12:	Platen AMS	OFF/ <u>ON</u>
No. 13:	EDH AMS	OFF/ <u>ON</u>
No. 14:	Select tray when APS cancel	<u>APS preferential tray</u> / Tray 1/ Tray 2/ Tray 3/ Tray 4/ Bypass tray
No. 15:	Platen original size detect	Only A series/ Full size/ AB series/ <u>Inch series</u>
No. 16:	EDH original size detect	Only A series/ Full size/ AB series/ <u>Inch series</u>
No. 17:	Platen orig. size detect (SMALL)	A5R/ B6R/ <u>5.5"x8.5"R</u>
No. 18:	Rotation	<u>ON-APS/AMS only</u> / ON-APS/AMS/Reduce only/ ON-Always
No. 19:	Rotation (180 angle)	<u>ON-Always</u> / According to Rotation OFF tray
No. 20:	B6R size original type	<u>Lengthwise</u> / Crosswise
No. 21:	A3, B4, 11x17, 8.5x14, F4 orig. type	<u>Lengthwise</u> / Crosswise
No. 22:	Staple mode reset-function	<u>OFF</u> / ON
No. 23:	Job offset operating	OFF/ ON
No. 24:	Continuation print	OFF/ ON
No. 25:	SDF Auto start	OFF/ ON-Memory mode only
No. 26:	Key click sound	OFF/ ON
No. 27:	1 SHOT indication time	<u>3 seconds</u> / 5 seconds
No. 28:	Energy saver screen	<u>Shut off mode</u> / Low power mode
No. 29:	Start key latch function	OFF/ ON
No. 30:	Stop key function	<u>JOB momentary stop</u> / JOB cancel
No. 31:	Auto select of Booklet copy	<u>Automatic selection</u> / Non Automatic selection
No. 32:	E.C.M. password	Under 8 digits/ <u>8 digits</u>
No. 33:	Arrow key change (Image Shift)	<u>Decimal point off (1 STEP 1mm)</u> / Decimal point on (1 STEP 0.1mm)
No. 34:	Exit direction of 1 sheet	Face up/ <u>Face down</u>
No. 35:	An interruption suspended way	<u>Division of a number of copies</u> / During of a number of copies
No. 36:	E.C.M. password input timing	<u>Panel reset timer</u> / Complete job

# Key Operator Mode


## Memory Switch Setting [13] (continued)

No. 37:	Key click sound (No paper/JAM)	OFF/ 3 seconds/ 5 seconds/ 10 seconds
No. 38:	Reserve copy function	<u>Reserve copy by folder select/</u> Reserve copy by original set
No. 39:	Scan stop by a pull out tray	ON/ OFF
No. 40:	Change page no. pos. (booklet)	OFF/ ON (Outside page numbering)
No. 41:	Trimmer (STD/Non STD size)	STD size/ Non STD size
No. 42:	Timer which prohibits Printer	OFF/ 15 seconds/ 30 seconds/ 60 seconds/ 90 seconds
No. 43:	Bookmark function	<u>ON (It is cancel every JOB)/</u> ON (It is not cancel every JOB)/ OFF
No. 44:	Side 2 print (STD repeat + zoom)	Rotation (180 angle) by force/ <u>Normal</u>
No. 45:	Delete of overlay image	<u>Permission (Delete/Overwrite)/</u> Prohibition (Delete/ Overwrite)


Key Operator Mode Screen 1

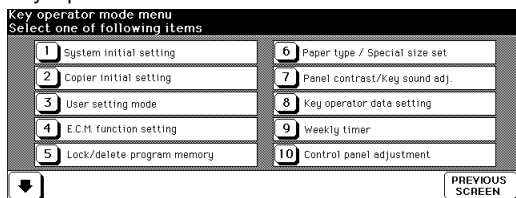

Key Operator Mode Screen 2

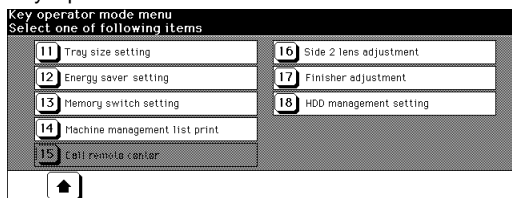

Memory Switch Setting Screen

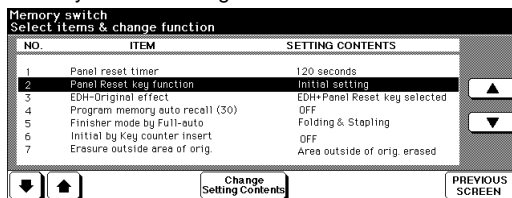

- Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)
- To display menus [11] to [18] of the Key Operator Mode Screen, touch Lower arrow key.
- Touch **[13] Memory switch setting** to display the Memory Switch Setting Screen.
- Use the procedure below to select the desired item and change the setting.
  - To select the desired item, touch the arrow keys () and () at the right of the Memory Switch Setting Screen.
  - To scroll the screen, touch the arrow keys () and () at the lower left.
  - Touch **Change Setting Contents** to change the setting of the highlighted item.
  - Repeat above steps (1) to (3) to make several changes in succession.
- Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

# Key Operator Mode

## Memory Switch Setting [13] (continued)

The following functions can be provided by the Memory switch settings.

### **[1] Panel reset timer**

Set the reset interval starting from the completion of a copying job until the machine returns to the initial condition.

### **[2] Panel Reset key function**

Set the condition of the following modes when Panel Reset is pressed; Copy mode, Copy density, Magnification, Tray selection.

### **[3] EDH-Original effect**

Set the machine condition when original is set on EDH in non-EDH mode with EDH unit closed.

### **[4] Program memory auto recall (30)**

Program memory No. 30 is automatically recalled when power is turned on or when Panel reset is restored.

This job recall function works only when Job No. 30 is registered.

### **[5] Finisher mode by Full-auto**

Set the Finisher mode to be recalled when Panel Reset is pressed.

### **[6] Initial by Key counter insert**

Set the machine to return to the initial state when Key counter is inserted.

### **[7] Erasure outside area of original**

Set the machine to delete the outside area of original.

### **[8] EDH frame erasure selection**

Set Frame erasure to function anytime in EDH mode.

### **[9] Automatic tray switching**

When paper is depleted during a copying job, the copier continues copying by switching to another tray that contains the same size paper.

### **[10] Platen APS**

The copier automatically selects the same size copy paper as the original placed on the platen glass. (In reduction or enlargement mode, an appropriate paper size is selected according to the ratio selected.)

# Key Operator Mode

## Memory Switch Setting [13] (continued)

### **[11] EDH APS**

The copier automatically selects the same size copy paper as the original placed on the EDH. (In reduction/enlargement mode, an appropriate paper size is selected according to the ratio.)

### **[12] Platen AMS**

The copier detects the size of the platen original and selects the appropriate magnification ratio to correspond to the selected paper size.

### **[13] EDH AMS**

After detecting the original size placed on the EDH the copier automatically selects an appropriate ratio for the copy when copy size is selected manually.

### **[14] Select tray when APS cancel**

Select the tray to be automatically selected when APS is released.

### **[15] Platen original size detect**

Select the series of the original paper size detected from the platen glass.

### **[16] EDH original size detect**

Select the series of the original paper size detected from the EDH.

### **[17] Platen orig. size detect (SMALL)**

Select the minimum original size detected from the platen glass.

### **[18] Rotation**

Select to activate the Rotation function, activate Rotation only when APS/AMS functions, or activate Rotation only when APS/AMS/Reduce functions.

### **[19] Rotation (180 angle)**

Set Orientation correction to function anytime or when Rotation is disabled.

### **[20] B6R size original type**

Select the orientation of the B6R size original.

### **[21] A3, B4, 11x17, 8.5x14, F4 orig. type**

Select the orientation of the A3, B4, 11"x17", 8.5"x14", or F4 size original.

### **[22] Staple mode reset-function**

Staple mode is automatically canceled after a job is completed with Staple sort mode ON. (Sort mode is selected.)

# Key Operator Mode

## Memory Switch Setting [13] (continued)

### **[23] Job offset operating**

Set the copier to offset the copies of different jobs when outputting multiple reserve jobs in succession.

### **[24] Continuation print**

Set the copier to output multiple reserve jobs in succession.

### **[25] SDF Auto start**

Select to feed the SDF original automatically when placed on the EDH, or press [Start] to feed the SDF original.

### **[26] Key click sound**

Activate or deactivate the sound each time a key is pressed on the touch panel .

### **[27] 1 SHOT indication time**

Select the SHOT indication time function.

### **[28] Energy saver screen**

Select the screen to display when pressing the [Energy Saver On/Off] key .

### **[29] Start key latch function**

Activate or deactivate the latch function.

### **[30] Stop key function**

Select to display or not to display the confirmation message when Stop key is pressed.

### **[31] Auto select of Booklet copy**

Set the copier with FN-4 mounted to automatically select the Booklet mode when Stapling & Folding or Folding output mode is selected.

### **[32] E.C.M. password**

Select the acceptable number of digits for the ECM master key code.

### **[33] Arrow key change (Image Shift)**

Select the 1 step unit of the touch key to specify the shift amount in Image shift.

### **[34] Exit direction of 1 sheet**

Select to exit face up or face down when making only 1 sheet of copy.

### **[35] An interruption suspend way**

Select the timing to stop the job in progress when [Interrupt] is pressed.

# Key Operator Mode

## Memory Switch Setting [13] (continued)

### **[36] E.C.M. password input timing**

Set the input timing for the ECM password.

### **[37] Key click sound (No paper/JAM)**

Select the duration of the buzzer for alerting that the machine has stopped being out of paper or due to paper misfeed.

### **[38] Reserve copy function**

Set the timing for the reserve job setting.

### **[39] Scan stop by a pull out tray**

Select to stop or continue the scanning job when a tray is pulled out.

### **[40] Change page no. pos. (booklet)**

Set the machine to position the page numbers automatically on the outside edges of the copy when using Booklet with Page Numbering in Stamp.

### **[41] Trimmer (STD/ Non STD size)**

Set the machine to allow trimming the folded or stapled & folded sheets in non-standard size (or wide size).

### **[42] Timer which prohibits Printer**

Set the timer to allow the printing job after operating the copying job.

### **[43] Bookmark function**

Select to set the Bookmark function only for the current job, set for all the following jobs, or deactivate the function.

### **[44] Side 2 print (STD repeat + zoom)**

Select to activate or deactivate the function to rotate the back pages by 180° automatically in duplex copying with magnification changed and the STD repeat selected.

### **[45] Delete of overlay image**

When selecting (or storing) overlaying image data in HDD using Overlay Memory, select to permit or prohibit deleting the selected data (or overwriting the data of the same name previously stored in HDD).


# Key Operator Mode

## Machine Management List Print [14]


Use this function to print out the list selected from the following items.


- Program memory list: Programmed contents of Program memory
- User management list: Home position settings selected by user
- E.C.M. management list: Machine information managed by ECM
- Font pattern list: Font patterns used in the machine

Key Operator Mode Screen 2

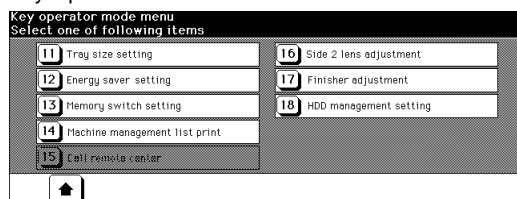

Management List Print Menu Screen

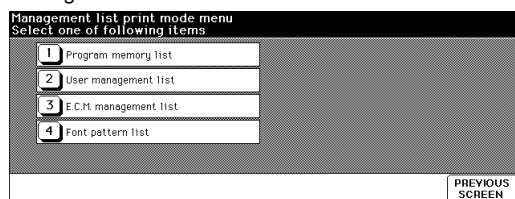

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)
- 2 To display menus [11] to [18] of the Key Operator Mode Screen, touch  Lower arrow key.
- 3 Touch **[14] Machine management list print** to display the Management List Print Menu Screen.
- 4 Touch the desired item on the screen. The Basic Screen will resume automatically.
- 5 Press [Start] to start printing the selected list.  
To suspend printing, press [Stop]. Press [P] and [C] in order to return to the Management List Print Menu Screen.
- 6 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- 7 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.


NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.

# Key Operator Mode


## Side 2 Lens Adjustment [16]

Use this function to set the adjustment data of the magnification ratio for each tray as Side 2.

Key Operator Mode Screen 2

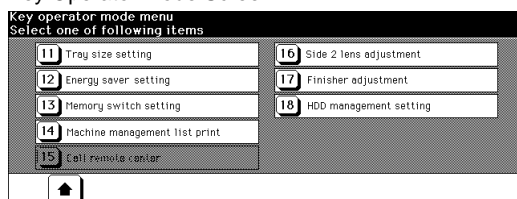

Side 2 Lens Adjustment Screen

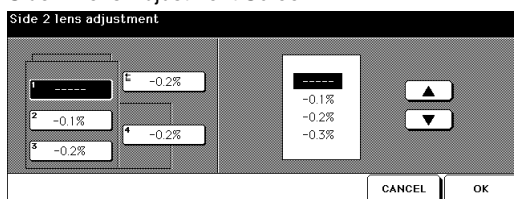

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)
- 2 To display menus [11] to [18] of the Key Operator Mode Screen, touch Lower arrow key.
- 3 Touch **[16] Side 2 lens adjustment** to display the Side 2 Lens Adjustment Screen.
- 4 Touch to highlight the desired tray key, then touch arrow keys to select an adjustment data.  
The selected data will be displayed on the highlighted tray key.
- 5 Touch **OK** to complete the setting and return to the Key Operator Mode Screen.
- 6 If other key operator settings are required, select the desired item, from [1] to [18].
- 7 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.




# Key Operator Mode


## Finisher Adjustment [17]

Use this mode to make fine adjustments to each function of the finisher.


Key Operator Mode Screen 2

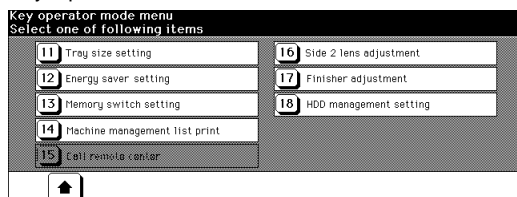


Finisher Adjustment Menu Screen

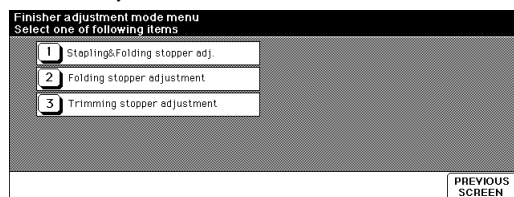

Stapling&Folding Stopper Position Adjustment Screen

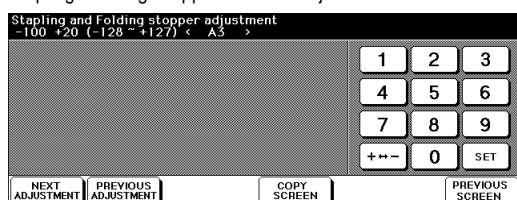

Folding Stopper Position Adjustment Screen

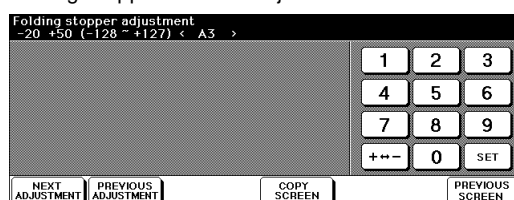

Trimming Stopper Position Adjustment Screen



- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)
- 2 To display menus [11] to [18] of the Key Operator Mode Screen, touch Lower arrow key.
- 3 Touch **[17] Finisher adjustment** to display the Finisher Adjustment Menu Screen.
- 4 Touch the desired menu key to display the adjustment screen for each function.
- 5 Make fine adjustment on the screen. To go on or back to another adjustment screen, touch **NEXT** or **PREVIOUS**. Touching **PREVIOUS SCREEN** restores the Finisher Adjustment Menu Screen.
- 6 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
- 7 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

NOTE: If an invalid Key operator password is entered, continue by entering the valid 4-digit password.


# Key Operator Mode

## HDD Management Setting [18]


Use this function to manage the image data stored in the optional HDD and to check the space available for new data.

- Password list/delete: Display the password list on the screen, or delete the image data (JOB) by deleting the corresponding password from the list.
- JOB auto delete period setting: Specify the period of time (1 to 52 weeks) to keep each data so that it will be deleted automatically when specified period has passed.
- State of HDD capacity: Check the space in percentage.


Key Operator Mode Screen 2

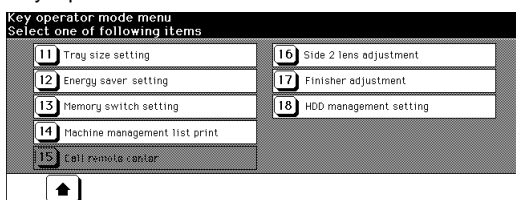


HDD Management Setting Menu Screen

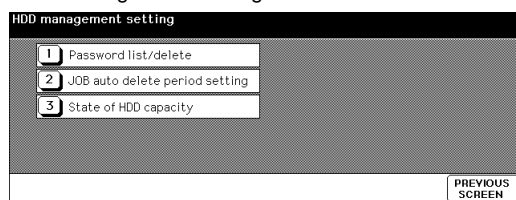


Password List/Delete Screen

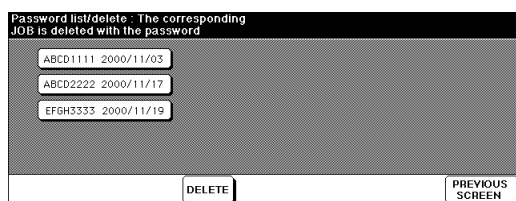


Password List/Delete Screen

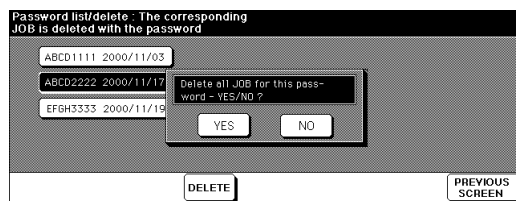

JOB Auto Delete Period Setting Screen

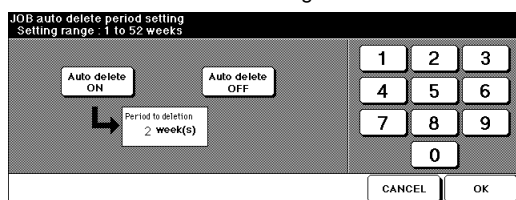


State of HDD Capacity Screen

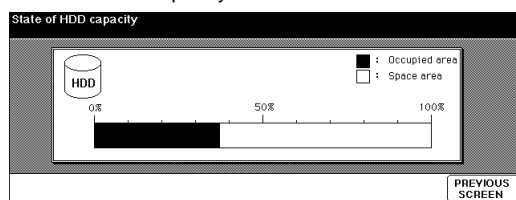

# Key Operator Mode

## HDD Management Setting [18] (continued)

- 1 Press [Help] to display the Help Screen, then touch **Key Operator Mode**. Enter a 4-digit key operator password, then touch **OK** to display the Key Operator Mode Screen. (See note.)
- 2 To display menus [11] to [18] of the Key Operator Mode Screen, touch  Lower arrow key.
- 3 Touch **[18] HDD management setting** to display the HDD Management Setting Menu Screen.
- 4 Touch the desired menu key to display the subsequent screen for each function.

**To view the password list or delete the password and the corresponding image data:**

- (1) Touch **[1] Password list/delete** to display the Password List/Delete Screen.
- (2) Touch to highlight the password key to be deleted, then touch **DELETE**. The popup menu will appear for confirmation.
- (3) Touch **YES** to delete the selected password and all the data corresponding to it; or touch **NO** to cancel.
- (4) Touch **PREVIOUS SCREEN** to return to the HDD Management Setting Menu Screen.

**To delete the password and data automatically:**

- (1) Touch **[2] JOB auto delete period setting** to display the Job Auto Delete Period Setting Screen.
- (2) Touch **Auto delete ON** to highlight it, then enter the number of weeks to keep each data, using the touch screen keypad. The maximum period of time is 52 weeks.
- (3) Touch **OK** to complete the setting.

**To check the current state of HDD capacity:**

- (1) Touch **[3] State of HDD capacity** to display the State of HDD Capacity Screen. The bar chart on the screen shows the current state of HDD capacity.
  - (2) Touch **PREVIOUS SCREEN** to return to the HDD Management Setting Menu Screen.
- 5 Touch **PREVIOUS SCREEN** to restore the Key Operator Mode Screen. If other key operator settings are required, select the desired menu item, from [1] to [18].
  - 6 If no further changes are required, touch **PREVIOUS SCREEN** to restore the Basic Screen to perform copying operations.

## Key Operator Mode

## Key Operator ECM Form

[illegible]



## Section 15: Maintenance & Supplies

Loading Paper

Paper Indicator

Paper Empty Indicator

Using the HELP Key

Loading Paper in Tray 1, 2, and 3

Loading Paper in Tray 4 (C-305/C-305L)

Loading Tabbed Sheets in Tray 1, 2, or 3

Loading Tabbed Sheets in Tray 4 (C-305/C-305L)

Adding Toner

Inserting a New Staple Cartridge into FN-104/FN-4 Finisher

Empty Trash Basket of TMG-1 Trimming Unit

Preventive Maintenance

Reading the PM Counter

Printing the PM Counter

Cleaning the Left Partition Glass

Cleaning the Document Glass and Cover

# Maintenance & Supplies

## Loading Paper

### Paper Indicator ( )

The Paper indicator always lights on the tray key of the Basic Screen to indicate the paper level.

### Paper Empty Indicator ( or )


The Paper empty indicator flashes on the tray key of the Basic Screen when a tray is empty. Add paper to the tray when the Paper empty indicator is flashing.

Do not exceed the following tray limits:

Tray 1:	500 sheets 20lb (430 sheets 24lb)
Tray 2:	500 sheets 20lb (430 sheets 24lb)
Tray 3:	1,000 sheets 20lb (860 sheets 24lb)
Tray 4:	4,000 sheets 20lb
Multi-sheet bypass tray:	150 sheets 20lb
(Do not load above the red line on rear guide.)	

## Using the Help Key

To learn how to load paper at any time, press [Help], then touch any tray to display instructions on the touch screen. For details on tray position size vs. paper size, see Section 4: Paper Information.

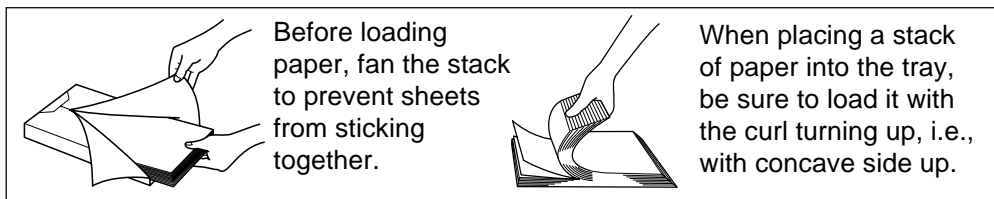

See the following pages for instructions on loading paper in trays 1~4.


# Maintenance & Supplies

## Loading Paper (continued)

### Loading Paper in Tray 1, 2, and 3

When displaying Thick 1 or Thick 2 on the tray key of the Basic Screen, be sure to load the specified paper; otherwise mishandled paper may occur.

When displaying TAB on the tray key of the Basic Screen, see p. 15-5.

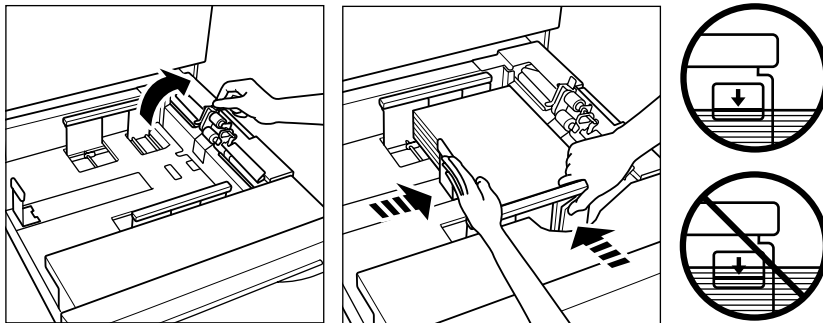

1 Withdraw tray 1, 2, or 3, and place paper on the tray with the curl side turning up.

Load size 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R or 5.5"x8.5" (user-adjustable)

Do not stack paper above the red line level.

2 Move the green levers (located at the front and the left side) to the edge of the paper.

3 When paper is seated properly, push the tray back fully into the copier.

NOTE: Do not bump the tray into the main body; otherwise machine trouble may be caused.



# Maintenance & Supplies


## Loading Paper (continued)

### Loading Paper in Tray 4 (C-305/C-305L)


When displaying Thick 1 or Thick 2 on the tray key of the Basic Screen, be sure to load the specified paper; otherwise mishandled paper may occur.

When displaying TAB on the tray key of the Basic Screen, see p. 15-6.

C-305

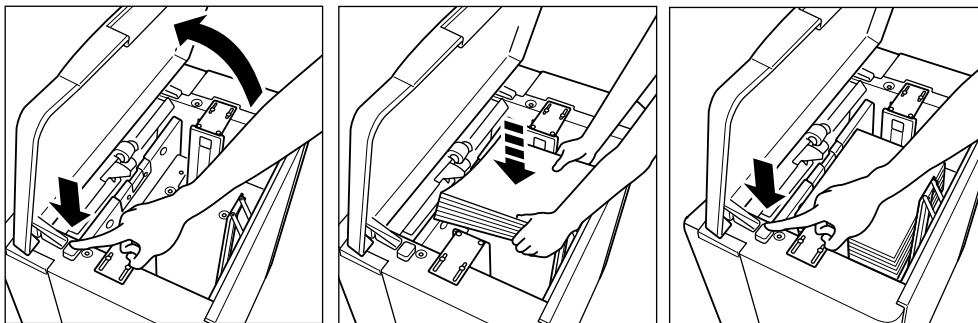

C-305L

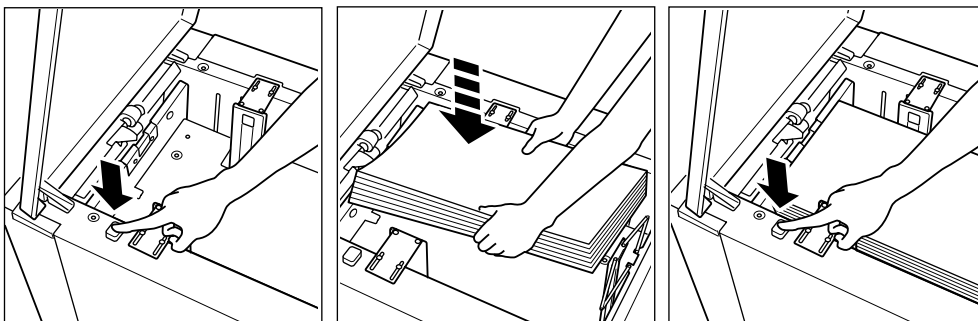

- 1 Open the LCC upper door.
- 2 Press the paper loading button to lower the bottom plate of the LCC.
- 3 Load the fixed size paper into the LCC with the paper curl turning downward.
- 4 Repeat the steps 2 and 3 until the bottom plate cannot go down any more.  
Load size 8.5"x11" or A4 (service-adjustable) for C-305; or load size 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, A3, B4, A4, A4R, or F4 for C-305L.  
Do not stack paper above the paper hook level.
- 5 Close the LCC upper door.

# Maintenance & Supplies


## Loading Paper (continued)

### Loading Tabbed Sheets in Tray 1, 2, or 3

Load offset tabbed sheets so that the tab extensions are on the left at the rear (not front) of the tray.

When loading tabbed sheets in the tray, be sure to specify the paper type as TAB in the Key operator mode; otherwise mishandled paper may occur. See p. 14-24 to p. 14-25.

The top sheet is designated face down as the first tab of the finished set. Subsequent offset tab sheets follow in sequence.

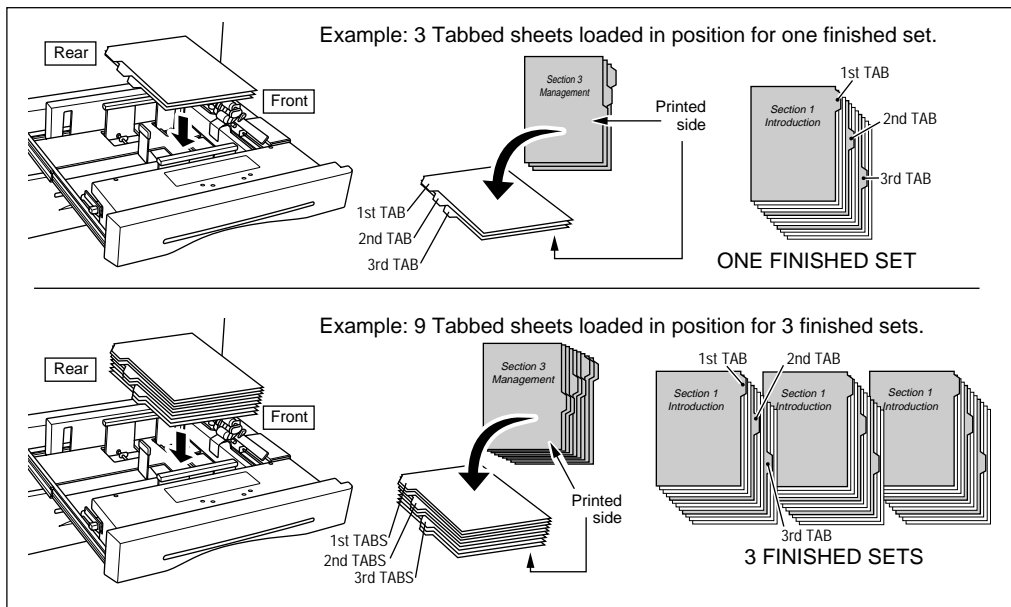

# Maintenance & Supplies


## Loading Paper (continued)

### Loading Tabbed Sheets in Tray 4 (C-305/C-305L)

Load offset tabbed sheets so that the tab extensions are on the right at the rear (not front) of the tray.

When loading tabbed sheets in the tray, be sure to specify the paper type as TAB in the Key operator mode; otherwise mishandled paper may occur. See p. 14-24 to p. 14-25.

The top sheet is designated face up as the first tab of the finished set. Subsequent offset tab sheets follow in sequence.

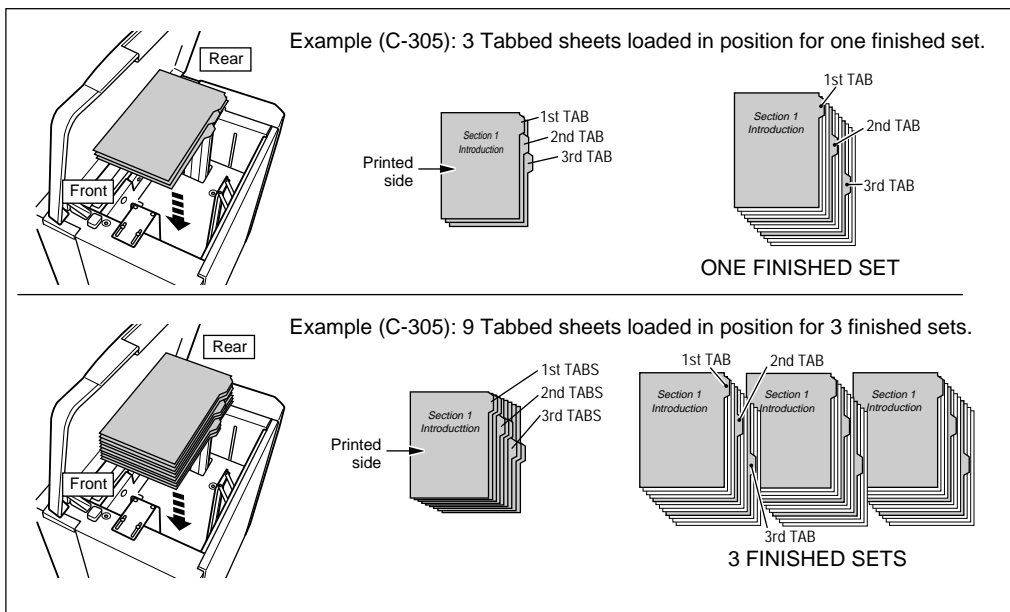


# Maintenance & Supplies

## Adding Toner

### CAUTION

Keep toner cartridge away from children. Although the toner is non-toxic, do not inhale it or allow it to enter your eyes. In case the toner comes in contact with eyes, please consult your physician.

When toner supply is low, “Please add toner” message displays on the touch screen.

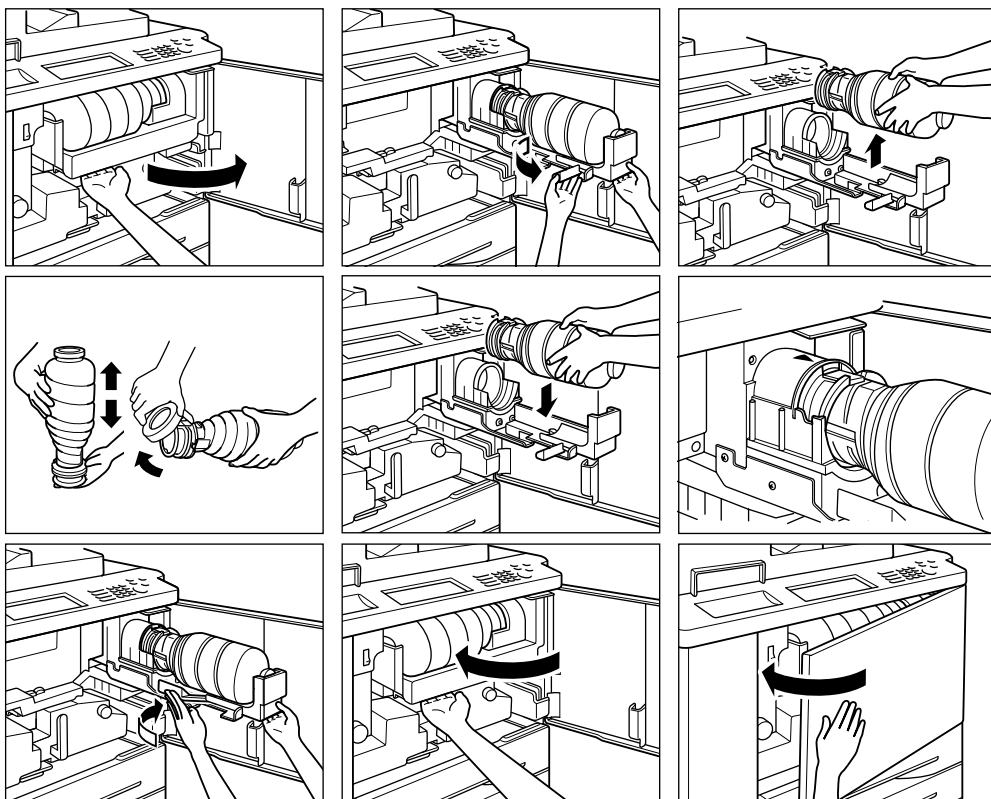


- 1 Open the front door.
- 2 Pull out the toner unit 90° to the right.
- 3 Pull out the toner cartridge lock lever frontward until it stops. Remove the empty toner cartridge.
- 4 Shake the new toner cartridge several times to loosen toner, then remove the toner cartridge cap.
- 5 Set the new toner cartridge into the toner unit.  
NOTE: Align the hollow part on the toner cartridge with the ▼ mark on the toner unit.
- 6 Push the cartridge lock lever backward until it stops.
- 7 Return the toner unit to its original position, then close the machine front door securely.

## Maintenance & Supplies

### Inserting a New Staple Cartridge into FN-104/FN-4 Finisher

Use only the staples supplied by us. Contact your service representative to reorder.

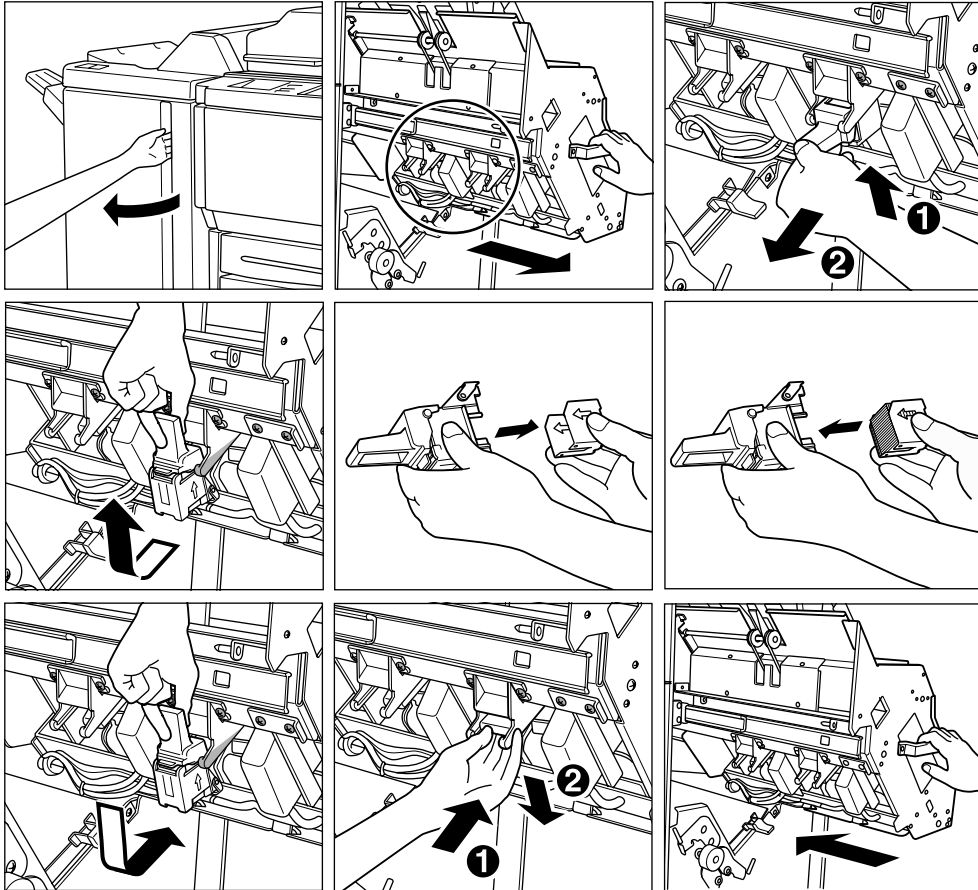

- 1 Open the Finisher door.
- 2 Pull out the stacker unit by holding the stacker unit handle.
- 3 Pull up the cartridge housing, then remove it while sliding it along the stapler rail.
- 4 Remove the empty cartridge from the cartridge housing.
- 5 Insert the new cartridge into the housing.


NOTE: Do not remove the staples remaining inside the housing; otherwise, the first sheet output after the replenishment will not be stapled.

- 6 Insert the cartridge housing while sliding it along the stapler rail, then push in and down to secure it in place.
- 7 Return the stacker unit to its original position.
- 8 Close the Finisher door.

## Maintenance & Supplies

### Empty Trash Basket of TMG-1 Trimming Unit

When the trash basket becomes full, “Trash basket of Trimmer is full / Please empty trash basket” message displays on the touch screen.

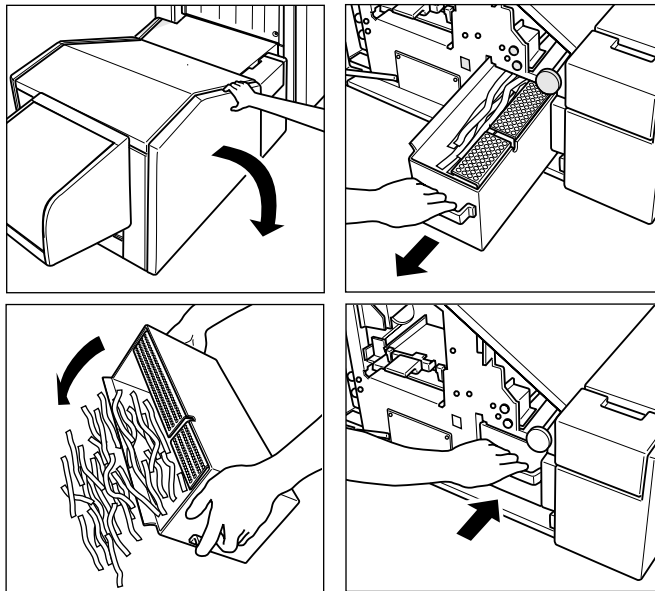

- 1 Open the trimmer front door. Withdraw the trash basket.
- 2 Empty the trash basket.
- 3 Return the trash basket to its original position, then close the trimmer front door securely.

# Maintenance & Supplies


## Preventive Maintenance

After a set number of copies have been made on your copier, Preventive Maintenance (PM) will be required for maintaining optimal performance.


When preventive maintenance is due, a message will prompt you to contact your service representative for maintenance.

## Reading the PM Counter

Control Panel

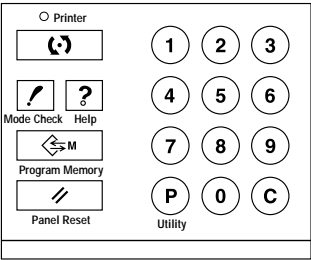

Counter List Screen

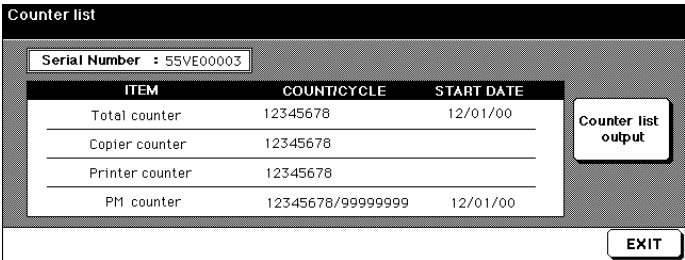

- 1 Press [P (Utility)] to display the Counter List Screen.
- 2 Press [Mode Check] to display the PM count on the Counter List Screen.
- 3 Touch EXIT to return to the Basic Screen.


## Printing the PM Counter

- 1 Press [P (Utility)] to display the Counter List Screen.
- 2 Press [Mode Check] to display the PM counter on the Counter List Screen.
- 3 Touch **Counter list output**. The Basic Screen will be displayed.
- 4 Touch the desired tray key to select the copy size.
- 5 Press [Start]. The counter list will be printed out, and the list print mode will be released.

## Maintenance & Supplies

### Cleaning the Left Partition Glass


The glass partition at the far left of the platen glass is designed for real-time scanning from the EDH. Keep this glass clean; otherwise soil marks may be copied, resulting in dark lines on the copies.

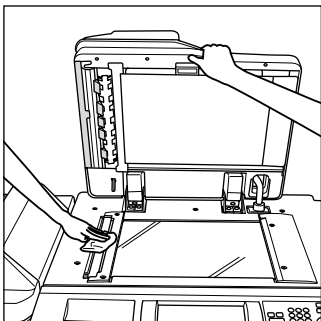


Raise the document cover, and clean the left partition glass with a clean soft cloth.

### Cleaning the Document Glass and Cover

The platen glass and the inner surface of the document handler should be kept clean. Otherwise, soil marks may be copied.

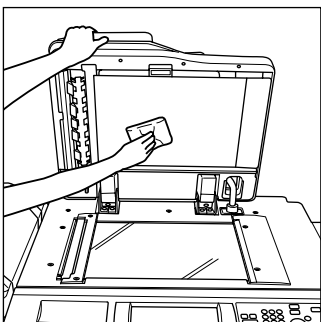

Raise the document cover, and clean the glass and inner surface of the document cover with a clean soft cloth.

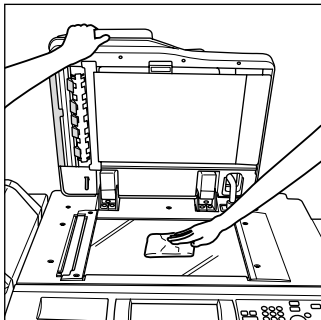

#### NOTES:

1. The glass may also be cleaned with a soft cloth dampened slightly with water; or with an antistatic cleaner recommended by your service representative.
2. Never use paint solvents, such as benzene or thinners, to clean any portion of the copier.





## Section 16: Troubleshooting

Call for Service  
Limited Use of the Copier in Trouble

Memory Overflow

Power OFF/ON Screen

Clearing Mishandled Paper

Copying Hints


# Troubleshooting

## Call for Service

### CAUTION

A Call for Service message indicates a machine condition that requires the attention of your service representative.

Call for Service Screen

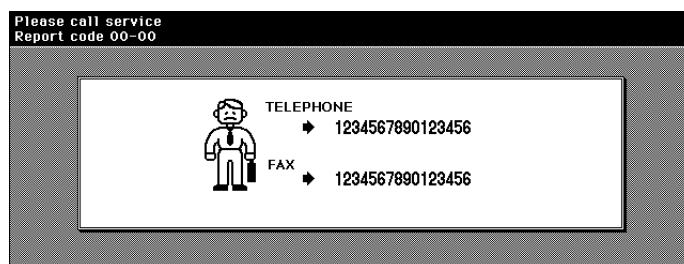

- 1 Immediately make note of the Report code No. indicated in the upper portion of the screen.
- 2 Turn OFF the main power switch.
- 3 Unplug the machine.
- 4 Contact your service representative and report the condition and code No.

# Troubleshooting

## Call for Service (continued)

### Limited Use of the Copier in Trouble

If the message shown below is displayed on the Call for Service Screen, you may continue operating the copier on a limited function basis and utilize the trays and ADU that are not affected by the trouble. To obtain this limited functionality of the copier, consult your service representative. Be sure to utilize the limited function only temporarily, and arrange for machine repair immediately.

- 1 If limited use of the copier is available, the following message is displayed in the message area instead of the Report code.

Tray 1 failure  
Press AUTO to select except this tray

- 2 Press [Panel Reset].

Please switch ON/OFF  
E 18-2

- 3 Turn OFF then ON the power switch.  
A copying job can be continued without using the troubled portion of the machine (ex. Tray 1).

### CAUTION

EVEN IF THE COPYING JOB CAN BE CONTINUED WITH THE ABOVE OPERATION, IMMEDIATELY CONTACT YOUR SERVICE REPRESENTATIVE WHEN THE CALL FOR SERVICE SCREEN IS DISPLAYED.


# Troubleshooting

## Memory Overflow

In certain modes, the Di750 uses memory for convenience and to make operations flow smoothly. Occasional memory overflow may occur if the installed memory is inadequate for the copy conditions selected. Should memory overflow occur frequently, it is recommended that you contact your service representative to extend the memory capacity in your machine.

When memory overflow occurs, the following screen will be displayed to enable you to take an appropriate measure for the current job situation.

Memory Overflow Management Screen

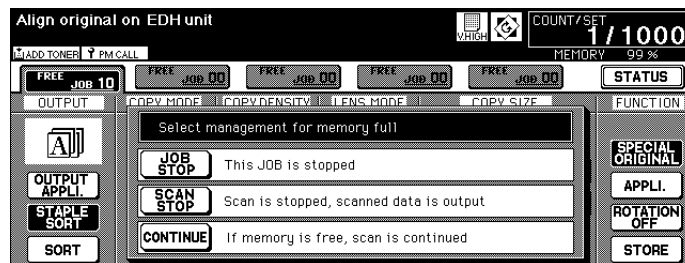

When memory overflow occurs while scanning the first job, the machine stops immediately, and the screen provides **JOB STOP** and **SCAN STOP** as the only two available options.

NOTE: If the job settings include Booklet mode, **SCAN STOP** will disappear.

- To delete all the scanned data and discontinue the job, touch **JOB STOP**.
- To give up further scanning but print out all the data already scanned into memory, touch **SCAN STOP**.

When memory overflow occurs during the reserve operation, **CONTINUE** also appears on the active screen. In this case, the machine will not stop until all the jobs on standby for printing are completed.

- To delete the scanned data and discontinue the last reserve job, touch **JOB STOP**.
- To give up further scanning but print out the data already scanned for the last reserve job, touch **SCAN STOP**.

NOTE: If the job settings include Booklet mode, **SCAN STOP** will disappear.


- To continue scanning the last reserve job, touch **CONTINUE** as the current printing job gradually enables memory for new data.

# Troubleshooting

## Power OFF/ON Screen

When any trouble affects the electric signal of the copier, the Power OFF/ON Screen will be displayed.

Power OFF/ON Screen

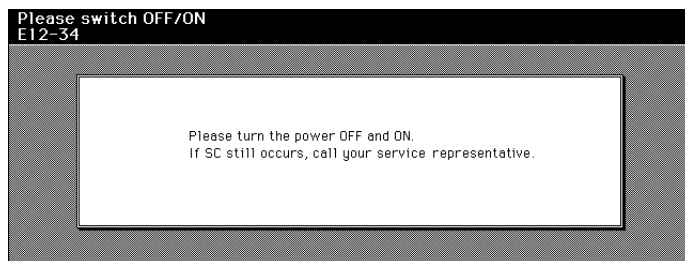


# Troubleshooting

## Clearing Mishandled Paper

### CAUTION

When removing mishandled paper, be sure to leave no torn paper inside the machine, avoid touching the drum or scratching it in any way, and keep all metal and magnetic objects, e.g., watches, jewelry, etc. away from the drum area.

When a paper misfeed occurs, the copier stops making copies and mishandled paper codes display on the screen to indicate misfeed area(s). A flashing code indicates the area that should be cleared first. To view Help screen instructions, touch **Illustration explanation** when the flashing mishandled paper code displays. Be sure to remove paper from each flashing location until all locations are cleared.

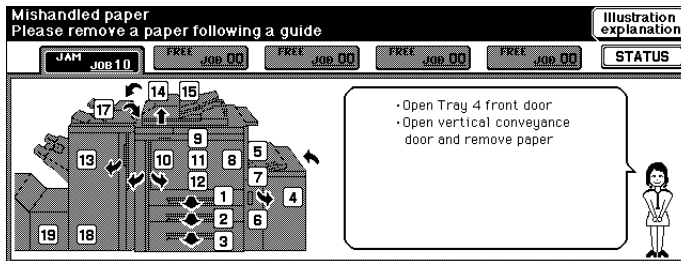

The following 19 mishandled paper codes display for specific areas of the machine.

Code	Location	Code	Location
[1]	: Tray 1	[10]	: Main body
[2]	: Tray 2	[11]	: Main body
[3]	: Tray 3	[12]	: ADU or Main body
[4]	: Tray 4 (LCC)	[13]	: Finisher
[5]	: Multi-sheet bypass tray	[14]	: EDH
[6]	: Right side cover of Main body	[15]	: EDH
[7]	: Tray 4 (LCC)	[17]	: Finisher (Cover Inserter)
[8]	: Multi-sheet bypass tray and Main body	[18]	: Finisher (Book making unit)
[9]	: Main body	[19]	: Trimming unit

# Troubleshooting

## Clearing Mishandled Paper (continued)

### **WARNING:**

The right rear area of the conveyance fixing unit generates high voltage. If touched, electrical shock may occur. **DO NOT TOUCH!**

### **CAUTION:**

The fixing unit is internally very hot. To avoid getting burned **DO NOT TOUCH** the area. Use care when withdrawing the conveyance fixing unit, and remove the mishandled paper in the fixing unit.

### **CAUTION:**

The conveyance fixing unit is heavy. Use care and draw it out gently; otherwise you may be injured.

### **CAUTION:**

**DO NOT** put your hand between the main body and developing fixing unit; otherwise you may be injured.

### **CAUTION:**

Inside the Booklet mode outlet is the roller drive unit. **DO NOT** put your hand into it when removing the folded or stapled & folded sheet; otherwise you may be injured.



# Troubleshooting

## Copying Hints

### **COPIER DOES NOT OPERATE WHEN POWER SWITCH IS ON**

Fully insert paper trays.

Close EDH.

Check to be sure power plug is firmly inserted in electrical socket.

### **COPY IMAGE IS TOO LIGHT**

Manually adjust copy density to darker density.

Check toner indicator and add toner, if required.

Check paper for dampness. Do not leave paper in copier when humidity is high.

Check to see if Photo, Text, or Increase Contrast mode is required.

Check the Density shift.

### **COPY IMAGE IS TOO DARK**

Manually adjust copy density to lighter density.

Check to see if Photo, Text, or Increase Contrast mode is required.

Check the Density shift.

### **COPY IMAGE IS NOT CLEAN OR SHOWS SPOTS**

Use clean originals since dirt marks may be copied.

Keep platen glass and inner surface of document cover clean.

Call for service if "Call for service" is displayed in the message area.

Check density indicator and lighten if required.

### **COPY PAPER MISHANDLES DURING COPYING**

Fan copy paper and load it with curl side in proper location. Do not exceed the tray capacity.

### **COPY IMAGE CAN BE RUBBED OFF**

Check copy paper thickness. Use Thick paper mode, if paper weight requires it.

### **MAGNIFICATION CANNOT BE CHANGED**

Image Shift and Reduce & Shift are incompatible with magnification.

Press [Panel Reset] and set desired copying conditions without using Image Shift or Reduce & Shift.

### **DUPLEX MODES CANNOT BE SELECTED**

Fully close ADU and EDH, then select Duplex mode again.

# Troubleshooting

## Copying Hints (continued)

### **COPYING DOES NOT BEGIN AFTER PRESSING START**

Insert or adjust the appropriate paper tray for copy size selected.

Close document cover firmly.

Close front door completely.

Check to see if the message "Please close stacker cover of Trimmer" is displayed.

Close trimmer stacker cover completely.

### **COPYING DOES NOT RESUME AFTER MISHANDLED PAPER IS REMOVED**

Check copier diagram on touch screen for additional indications of mishandled paper.

### **COPY QUALITY IS POOR**

Check paper for dampness, and replace it if necessary.

### **THE ORIGINAL PAPER IS MISHANDLED OR SKEWED IN THE DOCUMENT HANDLER**

Originals should conform to the recommended size and weight.

Be sure originals are not stapled.

Align originals evenly in the EDH.

Check to make sure paper guides meet the width of mixed size originals.

### **COPY IMAGE IS SKEWED WHEN BYPASS IS USED**

Be sure copy paper is inserted straight.

### **USING ECM, COPIES CANNOT BE MADE AFTER PASSWORD IS ENTERED**

Check to see if the message EXCEEDS LIMIT is displayed.

Contact key operator to reset limit.

### **FINISHER DOES NOT OPERATE**

Press **OUTPUT APPLI.** key.

Check for a paper misfeed and remove it, as required. Properly close finisher door.

### **EDH INDICATOR WILL NOT LIGHT AFTER PANEL RESET IS PRESSED**

Fully close EDH.

### **EDH LIGHT IS FLASHING**

The document handler is ready to accept originals.

Insert originals on EDH tray, press [Panel Reset], then [Start].

### **ADD TONER MESSAGE IS DISPLAYED**

New toner supply is needed. Follow instructions for adding toner.

# Troubleshooting

## Copying Hints (continued)

### **CALL FOR PM IS DISPLAYED IN MESSAGE AREA**

Contact your service representative for Preventive Maintenance.

### **APS SELECTS THE WRONG PAPER SIZE**

Paper guides must be adjusted exactly to the size of originals.

### **IN MIXED ORIGINAL MODE, A MESSAGE TO LOAD A REQUIRED PAPER SIZE DISPLAYS, EVEN THOUGH THAT SIZE IS LOADED IN ONE OF THE TRAYS**

Paper sizes loaded in the trays must be consistent with the tray position size; otherwise, the tray key on the Basic Screen will blink.

### **THE BASIC SCREEN DOES NOT DISPLAY SETTINGS AS DESCRIBED IN OPERATOR'S MANUAL**

Check with the key operator, as Initial Settings may have been changed.

### **USING TRIMMER, COPIES CANNOT BE TRIMMED**

Check to see if the message "Trash basket of Trimmer is full" is displayed. Empty trash basket.

### **PLEASE CHECK ORIGINAL**

This message displays when the copier detects a non-standard paper size on the platen glass.

Select copy size and press [Start]. 1.00 magnification will be selected automatically.

If this message continues to display after selecting copy size, select 1.00 magnification, even if it is already indicated, then press [Start]. If desired, ask your service representative to enable the machine to default to 1.00 magnification in this situation.

### **SHEET INSERTION RESULT IS NOT AS EXPECTED**

Blank insertion: Be sure manuscript originals do not already include blank sheets in the locations designated for sheet insertion.

Copy insertion: To ensure that chapter sheets in 1-2 mode always appear on the right hand side in the finished set, insertion sheets must be designated on the page setting screen with odd numbers, not even. If required, make an even numbered original page odd by inserting a blank sheet in front of that page, so that the blank sheet is even and the insertion sheet is odd.

### **FINISHER STAPLE RESULT IS NOT AS EXPECTED**

The 2 staple position functions only on copy paper that is loaded vertically (crosswise style).

## Section 17: Machine Specifications

### Specifications

## Specifications

Product Name	Di750
Configuration	Console with stationary platen
Photoreceptor	OPC drum
Method	Laser Electrostatic
Toner	Black, cartridge type
Recommended Operating Environment	50°~86°F (10°~30°C); 10~80% RH
Warm Up	Approx. 6 min. @68°(20°C); 50% RH
Panel Reset	Off/30 sec./1 min./1.5 min./2 min./2.5 min./3 min./3.5 min./4 min./4.5 min./5 min.
First Copy Out Time	From Platen Glass: 3.9 sec. for 8.5"x11"
Copy Rate	75 cpm: 8.5"x11", 5.5"x8.5" 62 cpm: 8.5"x11"R 51 cpm: 8.5"x14" 43 cpm: 11"x17"
Continuous Copy	1~9,999 copies
Voltage	230V AC14 to 10.6%
Current	20A Dedicated line recommended
Frequency	50Hz/60Hz
Grounding	Isolation recommended
Termination	NEMA Type 6-20R receptacle (250V, 2-pole, 3-wire, grounded)
Power Consumption	Max. 3,119 VA (full option)
Noise Level (full system)	Approx. 78 dB (A) or less, during copying
Automatic Modes	AMS; AES (plus 9-level manual density); APS detects 11"x17", 8.5"x14", 8.5"x11"R, 8.5"x11", 5.5"x8.5"

*Specifications Subject To Change Without Notice*

## Specifications

Magnification	Presets; 0.50, 0.65, 0.77, 0.93, 1.21, 1.29, 1.55, 2.00 3 User Sets - 0.33~4.00, set by key operator Zoom range - 0.33~4.00 in 1% steps 0.33~2.00 in 600 dpi mode
Originals on Platen	Max. size: 11"x17" (280mmx432mm)
Originals in Document Handler	ADF mode: 1>1; 1>2 11"x17"; 8.5"x14"; 8.5"x11"R; 8.5"x11"; 5.5"x8.5" Max. 100 sheets (20 lb) feed/exit capacity  EDH mode: 2>2; 2>1 11"x17"; 8.5"x14"; 8.5"x11"R; 8.5"x11"; 5.5"x8.5" Max. 100 sheets (20 lb) feed/exit capacity  Mixed mode: 11"x17"+8.5"x14"+8.5"x11"+5.5"x8.5" or 8.5"x14"+8.5"x11"R, 8.5"x11", 5.5"x8.5" Max. 100 sheets (20 lb) feed/exit capacity  Original weight: 13~34 lb bond; curl max. 10 mm or less (Transparency, Paste-up, Offset master, Labels, & Intermediate papers unavailable)
Paper Source	Main body trays 1/2/3; 500/500/1,000 sheets LCC tray 4; 4,000 sheets Multi-sheet bypass tray; 150 sheets Tray 1/2/3 user adjustable Tray 4 adjusted by service
Paper Exit Tray	150 sheets (20 lb)
Paper Weight	20 lb~24 lb bond recommended (Max. range: 16 lb~45 lb in 1-2 or 2-2 copying, 16 lb~110 lb (200g/m <sup>2</sup> thick paper) in 1-1 or 2-1 copying) OHP sheet, Transparency, Labels, Tab, 3-hole
Main Body Safety Standard	UL 1950; CSA 22.2 No. 950 -95
Radio Interference	FCC Rules part 15, sub-part B Class A

*Specifications Subject To Change Without Notice*

# Specifications

Options	Finisher (FN-104/FN-4) Cover Inserter A Trimming Unit (TMG-1) Large Capacity Cassette (LCC) (C-305/C-305L) 64MB Memory (M64-1)/128MB Memory (M128-1) Printer Controller (Pi7500) HDD
Machine Weight	616 lb (280 kg) +47 lb (21.5 kg) w/EDH +110 lb (50 kg) w/Finisher +66 lb (30 kg) w/LCC (C-305)
Machine Dimensions	Main Body (with EDH) Width: 34.9 in. (887mm) Depth: 30.5 in. (775mm) Height: 45.7 in. (1160mm)  Document Handler (EDH) Width: 25.6 in. (650mm) Depth: 22.4 in. (570mm) Height: 6.7 in. (170mm)  Max. open angle: 70±5°  Finisher (FN-104/FN-4) Width: 21.7 in. (550mm) Depth: 25.8 in. (656mm) Height: 43.1 in. (1095mm)  Cover Inserter A Width: 13.0 in. (330mm) Depth: 18.0 in. (456mm) Height: 4.7 in. (120mm)  Trimming Unit (TMG-1) Width: 44.0 in. (1117mm) Depth: 23.8 in. (604mm) Height: 22.1 in. (562mm)

*Specifications Subject To Change Without Notice*

## Specifications

Automatic Duplex Unit (ADU)	Paper size: 11"x17", 8.5"x14", 8.5"x11", 5.5"x8.5" Paper weight: 16~45 lb Paper curl limit: 20 mm or less Non-stack type Modes: 1>2; 2>2
Finisher (FN-104/FN-4)	Power source: Main body  Non-sort/Sort/Group mode: 500 sheets 5.5"x8.5"R 3000 sheets 8.5"x11"/R 1500 sheets 11"x17", 8.5"x14" Size 11"x17" ~ 5.5"x8.5"R  Staple-sort mode: 1000 sheets* Size 11"x17" ~ 8.5"x11"/R, 5.5"x8.5" * Variable according to the number of pages to be stapled. See p. 4-7 or p. 4-8 for detail.  Folding/Stapling & Folding mode (FN-4 only): 100 sheets* Size 11"x17", 8.5"x14", 8.5"x11"R, A4R (8.27"x11.69", 210mmx297mm) * The maximum number of sheets varies, depending on the number of pages in the booklet and whether Folding or Stapling & Folding is selected. See p. 4-10.
Staple Cartridge	5000 staples/cartridge
Cover Inserter A	Power source : Finisher Paper size : 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, 5.5"x11", 5.5"x11"R, A4, A4R (8.27"x11.69", 210mmx297mm) Paper weight in cover sheet mode: 13 ~ 110 lb (200g/m <sup>2</sup> thick paper) Paper weight in manual staple: 16 ~ 24 lb

*Specifications Subject To Change Without Notice*



## Specifications

- Trimming Unit (TMG-1) Paper size : 11"x17", 8.5"x14", 8.5"x11"R, A4R (8.27"x11.69", 210mmx297mm)  
Paper weight : 16 ~ 45 lb  
\* One 110 lb cover paper (200g/m<sup>2</sup> thick paper) is available.  
Number of trimmed sheets :  
3 sheets max. with Folding mode  
16 sheets max. with Stapling & Folding mode (15 sheets max. when using a thick cover)  
Trimmed width : 10 mm max.  
Stack capacity : 512 sheets max.  
\* The maximum number of sheets varies, depending on the number of pages in the booklet and whether Folding or Stapling & Folding is selected. See p. 4-11.  
Power source: supply from outlet
- Large Capacity Cassette (C-305) Paper type: Plain paper (16~110 lb (200g/m<sup>2</sup> thick paper))  
Paper size: 8.5"x11", A4  
Dimensions: Width 16.9 in (430 mm)  
Depth 25.2 in (639 mm)  
Height 27.2 in (690 mm)  
Weight: 66 lb (30 kg)  
Power source: supply from main body
- Large Capacity Cassette (C-305L) Paper type: Plain paper (16~110 lb (200g/m<sup>2</sup> thick paper))  
Paper size: 11"x17", 8.5"x14", 8.5"x11", 8.5"x11"R, A3, B4, A4, A4R, F4  
Dimensions: Width 26.4 in (670 mm)  
Depth 25.2 in (639 mm)  
Height 27.4 in (695 mm)  
Weight: 92.4 lb (42 kg)  
Power source: supply from main body

*Specifications Subject To Change Without Notice*

# Index

# Index

## NUMBER

180° Rotation 6-32  
2 in 1 key 9-10  
2 Repeat 9-27  
4 in 1 key 9-10  
4 Repeat 9-27  
600 Dpi 8-5  
8 in 1 key 9-10  
8 Repeat 9-27  
90° Rotation 6-30

## A

ADD PAPER key 6-26  
ADD TONER message 3-13  
ADJUSTMENT MODE message 6-3  
AES key 6-7  
All-Image Area 9-33  
Allocation recovery mode 12-6  
AMS key 6-17  
APPLI. key 9-2  
APS key 6-17  
AUTO Layout 9-31  
Auto Low Power 5-2  
Auto Shut-Off 5-4  
Automatic Exposure Selection (AES) 6-7  
Automatic Magnification Selection (AMS) 6-11  
Automatic Paper Selection (APS) 6-10  
Automatic Tray Switching (ATS) 3-11

## B

BACK BLANK key 9-6  
BACK COPY key 9-6  
Back Cover Mode 9-4  
Basic Screen 6-2  
BLANK INSERTION key 9-6  
Blank sheet interleaving 9-16  
Book Copy 9-19  
Booklet 9-12  
Booklet mode outlet 3-5  
Booklet tray 3-5  
BYPASS key 6-19

## C

[C] key 3-9  
Call for Service 16-2  
CAUTION 2-2  
CHANGE SETTING key 6-36  
Chapter 9-8  
Check Mode 6-34  
Clearing Mishandled Paper 16-6  
Combination 9-10  
CONTINUE key 16-4  
Control panel 3-3  
Control Panel Adjustment 14-37  
Control panel contrast key 6-39  
Conveyance/Fixing unit 3-4

Copier counter 5-8  
Copier Initial Setting 14-10  
Copying Hints 16-8  
COPY INSERTION key 9-6  
Copy Mode 6-4  
Copy sheet interleaving 9-16  
Copy Size 6-17  
Counter List 5-8  
Counter list output key 5-8  
Count/Set indicator 6-2  
Cover Inserter 7-16  
COVER SHEET key 7-17  
COVER WITH BLANK SHEET key 9-13  
COVER WITH COPY SHEET key 9-13  
Crosswise type original 9-10

## D

DANGER 2-2  
Date & Time Setting 14-7  
DATE/TIME 9-38  
Density Shift 6-8  
DIMM 11-2  
Document cover 15-11  
Drum unit 3-4

## E

ECM (Electronic Copy Monitor) 14-15  
ECM management list 14-46  
ECM master key code 3-12  
ECM password 5-5  
EDH (Electronic Document Handler) 3-3  
EDH AMS 14-43  
EDH APS 14-43  
EDH frame erasure selection 14-42  
EDH Store Mode 6-29  
Energy Saver ON/OFF key 3-9  
Energy Saver Mode 5-2  
Energy Saver Setting 14-39  
Erasure outside area of original 14-42  
EXCEEDS LIMIT message 16-9

## F

Face Down Exit 7-21  
Face Up Exit 7-24  
FCC Regulations 2-12  
Finisher Adjustment 14-48  
Finisher Paper Capacity 2-10  
Fixing part 3-4  
FN-104/FN-4 Finisher 3-5  
Folder keys 6-2  
Folding mode 7-13  
Font pattern list 14-46  
Frame/Fold Erasure 9-29  
FREE JOB key 6-21  
Front/Back Cover + Full Scan mode 9-19  
FRONT BLANK key 9-6

# Index

FRONT COPY key 9-6  
Front Cover + Full Scan mode 9-19  
Front Cover Mode 9-4  
Front door 3-3  
Full Scan mode 9-19

## G

GROUP key 7-10, 7-12

## H

HDD 11-2  
HDD Management Setting 14-49  
HDD STORE key 11-7  
Help key 6-39  
HELP MENU key 6-40  
Help Mode 6-39  
High Mode 8-3

## I

ICES Regulations 2-12  
Image Insert 9-17  
Image Recall Mode 11-9  
Image Shift 9-34  
Image Store & Output Mode 11-7  
Image Store/Delete Mode 11-3  
Increase Contrast Mode 8-6  
Initial Settings 3-11  
Insertion Mode 9-4  
Internal Laser Radiation 2-13  
Interrupt key 6-37  
Interrupt Mode 6-37  
IP Address Setting 14-9

## J

JAM key 6-25  
JOB CLEAR key 6-24  
JOB PRIORITY key 6-24  
Job Recall 10-4  
JOB STOP key 16-4  
Job Store 10-2

## K

Key Operator Data Setting 14-27  
Key Operator Mode 14-2  
KEY OPERATOR MODE key 6-39  
Key Operator Password 3-12  
Key Sound Adjustment 14-26  
Keypad 3-9

## L

Language Select Setting 14-8  
Large capacity cassette 3-5  
Laser Safety 2-12  
Laser Safety Label 2-16  
LCC top door 3-5  
LCD touch screen 3-9

Lead Edge Delete 3-12  
Left door 3-3  
Left partition glass 15-11  
Left side cover 3-3  
Lengthwise type original 9-10  
Lever A 3-4  
Limited Use of the Copier in Trouble 16-3  
Lock/Delete Program Memory 14-23  
Lock icon 10-3  
Lunch Hour Off Setting 14-35

## M

Machine Labels 2-3  
Machine Management List Print 14-46  
Manual Low Power 5-3  
Manual Shut-Off 5-4  
Manual staple control panel 3-5  
Manual Stapling 7-18  
Memory indicator 6-2  
Memory Overflow 16-4  
Memory Switch Setting 14-40  
Mixed Original 8-8  
Mode Check key 3-9  
Mode key 3-9  
Multi-sheet bypass tray 6-42

## N

NO COVER SHEET key 9-13  
Non-Image Area Erase 9-23  
Non-sort mode 7-5  
Non STD size key 8-12  
Notice Message 3-13

## O

Oblique erase mode 9-23  
OUTPUT APPLI. key 7-9  
Output icon 6-2  
Overlay 9-43  
Overlay Memory 9-45  
Ozone Release 2-17

## P

PAGE NUMBERING 9-38  
PAGE SPACE key 9-37  
Panel Contrast 14-26  
Panel Reset key 3-9  
Panel Reset Key Function 14-42  
Panel Reset Mode 3-11  
Panel Reset Timer 14-42  
Paper empty indicator 15-2  
Paper indicator 15-2  
PAPER TYPE/SIZE key 6-18  
Paper Type/Special Size Set 14-24  
Paper Weight Compatibility Chart 4-11  
Photo Mode 8-6  
[P] (Utility) key 3-9  
Platen AMS 14-43

# Index

Platen APS 14-42  
Platen glass 4-2  
Platen Store Mode 6-27  
PM CALL message 3-13  
PM counter 15-10  
Power OFF/ON Screen 16-5  
Power switch 3-3  
Preset and User Set Ratios 6-14  
Preventive Maintenance (PM) 15-10  
PREVIOUS JOB LIST key 6-24  
Primary (main) tray 3-5  
Printer counter 5-8  
Program Job 9-21  
Program Memory key 10-2  
Program memory list 14-46  
Proof Copy 6-34  
Proof Copy key 3-9, 6-34

## R

RE key 6-14  
Rectangular erase mode 9-23  
Reduce & Shift 9-34  
RELEASE SETTING key 6-36  
Repeat Image 9-26  
Reserve mode 6-21  
Resolution 8-3  
Reverse Image 9-25  
Right side door 3-3  
Rotation 6-30  
ROTATION GROUP key 7-23, 7-26  
ROTATION OFF key 6-2

## S

SCAN JOB key 6-22  
SCAN STOP key 16-4  
SDF (Single Document Feed) 8-11  
Secondary (sub) tray 3-5  
Server Function 11-2  
Service Settings 3-12  
SET NUMBERING 9-38  
Sheet/Cover Insertion 9-3  
Shortcuts 13-2  
Side 2 Lens Adjustment 14-47  
SORT key 7-6  
SPECIAL ORIGINAL key 8-2  
Special Ratio Table 6-12  
Stamp 9-38  
Staple cartridge 15-8  
Staple Mode Selection button 7-19  
Staple position icon 7-8  
Staple Sheet Capacity 3-13  
STAPLE SORT key 7-8  
Staple Start/Stop button 7-19  
Stapling & Folding mode 7-13  
Start key 3-9  
STATUS key 6-23

Stop key 3-9  
STORE key 6-27  
Store Mode 6-27  
SUB TRAY key 7-12  
Summer time key 14-7  
System Initial Setting 14-7

## T

Tab Paper 8-12  
Tandem icon 6-2  
TANDEM key 12-3  
Text Mode 8-6  
Timer indicator 3-9  
Timer Interrupt 5-6  
Timer Interrupt Password Setting 14-36  
Timer Setting 14-31  
Toner cartridge 3-4  
Toner unit 3-4  
Total counter 5-8  
Touch Screen 3-10  
Transparency Interleave 9-15  
Trash Basket 3-6  
Tray Size Setting 14-38  
Trimmer Stacker Cover 3-6  
Trimming unit 3-6  
Trimming unit tray 3-6  
Trimming mode 7-13

## U

Univ. key 6-18  
Unsuitable EDH Originals 4-3  
User management list 14-46  
User Setting Mode 14-12  
USER1 key 14-12  
USER2 key 14-13

## V


Vertical/Horizontal Zoom 6-16  
Very High Mode 8-4

## W

WARNING 2-2  
WATERMARK 9-38  
WATERMARK NUMBERING 9-38  
Weekly Timer 14-28  
Weekly Timer Function 5-6  
Weekly timer key 6-39  
Weekly Timer Master Key Code 3-12  
WHOLE AREA key 8-12  
Wide size paper key 6-20  
Work table 3-3

## Z

Z-Folded Original 8-10  
ZOOM key 6-15  
Zoom Mode 6-15

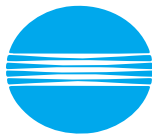

MINOLTA

***Copyright***  
**2000 MINOLTA CO., LTD**

The information contained in this manual is  
subject to change without notice to  
incorporate improvements made on the  
product or products the manual covers.

Minolta Co., Ltd.

3-13, 2-Chome, Azuchi-Machi, Chuo-ku, Osaka 541-8556, Japan